

A UNITED STATES
DEPARTMENT OF
COMMERCE
PUBLICATION



NBS TECHNICAL NOTE 766

A Gamma Ray Moments Computer Code, GAMMØM-I

U.S.
DEPARTMENT
OF
COMMERCE

National
Bureau
of
Standards

QC
100 rds

U5753

No. 766

1973

C-2

NATIONAL BUREAU OF STANDARDS

The National Bureau of Standards¹ was established by an act of Congress March 3, 1901. The Bureau's overall goal is to strengthen and advance the Nation's science and technology and facilitate their effective application for public benefit. To this end, the Bureau conducts research and provides: (1) a basis for the Nation's physical measurement system, (2) scientific and technological services for industry and government, (3) a technical basis for equity in trade, and (4) technical services to promote public safety. The Bureau consists of the Institute for Basic Standards, the Institute for Materials Research, the Institute for Applied Technology, the Center for Computer Sciences and Technology, and the Office for Information Programs.

THE INSTITUTE FOR BASIC STANDARDS provides the central basis within the United States of a complete and consistent system of physical measurement; coordinates that system with measurement systems of other nations; and furnishes essential services leading to accurate and uniform physical measurements throughout the Nation's scientific community, industry, and commerce. The Institute consists of a Center for Radiation Research, an Office of Measurement Services and the following divisions:

Applied Mathematics — Electricity — Mechanics — Heat — Optical Physics — Linac Radiation² — Nuclear Radiation² — Applied Radiation² — Quantum Electronics³ — Electromagnetics³ — Time and Frequency³ — Laboratory Astrophysics⁴ — Cryogenics³.

THE INSTITUTE FOR MATERIALS RESEARCH conducts materials research leading to improved methods of measurement, standards, and data on the properties of well-characterized materials needed by industry, commerce, educational institutions, and Government; provides advisory and research services to other Government agencies; and develops, produces, and distributes standard reference materials. The Institute consists of the Office of Standard Reference Materials and the following divisions:

Analytical Chemistry—Polymers—Metallurgy—Inorganic Materials—Reactor Radiation—Physical Chemistry.

THE INSTITUTE FOR APPLIED TECHNOLOGY provides technical services to promote the use of available technology and to facilitate technological innovation in industry and Government; cooperates with public and private organizations leading to the development of technological standards (including mandatory safety standards), codes and methods of test; and provides technical advice and services to Government agencies upon request. The Institute also monitors NBS engineering standards activities and provides liaison between NBS and national and international engineering standards bodies. The Institute consists of a Center for Building Technology and the following divisions and offices:

Engineering and Product Standards—Weights and Measures—Invention and Innovation—Product Evaluation Technology—Electronic Technology—Technical Analysis—Measurement Engineering—Building Standards and Code Services⁴—Housing Technology⁴—Federal Building Technology⁴—Structures, Materials and Life Safety⁴—Building Environment⁴—Technical Evaluation and Application⁴—Fire Technology.

THE INSTITUTE FOR COMPUTER SCIENCES AND TECHNOLOGY conducts research and provides technical services designed to aid Government agencies in improving cost effectiveness in the conduct of their programs through the selection, acquisition, and effective utilization of automatic data processing equipment; and serves as the principal focus within the executive branch for the development of Federal standards for automatic data processing equipment, techniques, and computer languages. The Center consists of the following offices and divisions:

Information Processing Standards—Computer Information—Computer Services—Systems Development—Information Processing Technology.

THE OFFICE FOR INFORMATION PROGRAMS promotes optimum dissemination and accessibility of scientific information generated within NBS and other agencies of the Federal Government; promotes the development of the National Standard Reference Data System and a system of information analysis centers dealing with the broader aspects of the National Measurement System; provides appropriate services to ensure that the NBS staff has optimum accessibility to the scientific information of the world, and directs the public information activities of the Bureau. The Office consists of the following organizational units:

Office of Standard Reference Data—Office of Technical Information and Publications—Library—Office of International Relations.

¹ Headquarters and Laboratories at Gaithersburg, Maryland, unless otherwise noted; mailing address Washington, D.C. 20234.

² Part of the Center for Radiation Research.

³ Located at Boulder, Colorado 80302.

⁴ Part of the Center for Building Technology.

MAY 7 1973

1100
U5753
no 766
1973
2.2

A Gamma Ray Moments Computer Code, GAMMØM-I

Charles M. Eisenhauer, George L. Simmons,
and
Lewis V. Spencer

Center for Radiation Physics
Institute for Basic Standards
National Bureau of Standards
Washington, D.C. 20234

NBS Technical Notes are designed to supplement the Bureau's regular publications program. They provide a means for making available scientific data that are of transient or limited interest. Technical Notes may be listed or referred to in the open literature.



U.S. DEPARTMENT OF COMMERCE, Frederick B. Dent, Secretary

NATIONAL BUREAU OF STANDARDS, Richard W. Roberts, Director

Issued April 1973


National Bureau of Standards Technical Note 766

Nat. Bur. Stand. (U.S.), Tech. Note 766, 41 pages (Apr. 1973)

CODEN: NBTNAE

Table of Contents

| | <u>Page</u> |
|--|-------------|
| I. Introduction | 1 |
| II. Theory | 2 |
| A. Moments Equations | 2 |
| B. Gaussian Technique Applied to Scattering Integrals | 6 |
| III. Organization and Description of GAMMØM-I | 9 |
| A. General Structure | 9 |
| B. Discussion of GAMMØM-I Subroutines | 11 |
| IV. Input and Output Description | 12 |
| A. Card Input | 12 |
| B. Scattering Kernel Tape | 16 |
| C. Moments Solution Tape | 17 |
| D. Discussion of Output Data | 18 |
| V. Sample Problem | 21 |
| References | 36 |



A Gamma Ray Moments Computer Code, GAMMOM-I*

Charles M. Eisenhauer, George L. Simmons,
and Lewis V. Spencer

In this paper we describe a computer code for generating spatial-angular moments of gamma ray energy fluence in an infinite medium. The equation for moments of the energy fluence is given and the techniques used for the solution are discussed. The structure of the code and of the main subroutines is also given. Details of the input and output data are presented and the printout from a sample problem is included.

Key words: Computer code; gamma rays; gamma ray transport; gauss quadrature; moments; shielding.

I. Introduction

In this note we describe a computer program to calculate spatial and angular moments of the gamma ray fluence in an infinite medium. These moments can then be used to reconstruct¹ spatial and angular distributions by techniques described elsewhere [1,2].

Application of the method of moments to problems in gamma ray attenuation was first discussed by Spencer and Fano [3]. Later Goldstein and Wilkins of Nuclear Development Associates collaborated with Spencer to produce a systematic tabulation of buildup factors for gamma radiation [4]. That reference also contains an excellent discussion of the solution of the transport equation by the moments method. The data published in that report have stood for almost twenty years as the main source of information on penetration of gamma rays from point isotropic sources.

Although the data of reference [4] are sufficiently accurate for many practical applications, they have certain limitations:

1. Tabulations were restricted to energies between 0.255 and 10 MeV.
2. Tabulations were limited to depths of less than 20 mean free paths of the source radiation.

* Supported by the Defense Civil Preparedness Agency, Washington, D.C. 20310 and Office of Naval Research, Arlington, Va. 22217

[†] Present address: Science Applications, Inc., Huntsville, Ala. 35805.

¹ Figures in brackets indicate the literature references at the end of this paper.

3. Results did not include the effects of annihilation or fluorescent radiation.
4. Data are available for only about six elements and water.
5. Calculations were limited to sources whose angular distribution is azimuthally symmetric with respect to a direction perpendicular to the plane of a slab.
6. The data were generated on an early computer, the SEAC, which quickly became obsolete.

An effort is in progress at the National Bureau of Standards to produce gamma ray data which are not subject to these restrictions.

The first major production of moments data at NBS was accomplished by a computer program written by Spencer and Lamkin [5] for the IBM 704 machine. Several reports [6,7,8] give penetration data generated by this program in water and concrete media. The main application of these results, however, appeared in an NBS Monograph [9] on the calculation of shielding from fallout gamma radiation. The data in this Monograph form the technical basis for the Standard Method [10,11,12,13] used by the Defense Civil Preparedness Agency (formerly Office of Civil Defense) to evaluate the protective capability of structures. This computer program extended the range of source energies down to about .020 MeV in energy but had the disadvantage that it was written in machine language.

Accordingly, a gamma ray moments code written in FORTRAN IV language was developed with the intent of eliminating all the restrictions listed earlier. This code, called GAMMOM-I, is the subject of this report.

II. Theory

A. Moments Equations

In order to make this report self-contained we sketch the development of the moments equations for gamma rays. The derivation of the moments equation for gamma rays given here is very similar to that described in the documentation of MOMENT-I, a neutron moments code [14]. The main difference between the two codes is that it is convenient in the neutron moments code to solve for the collision density moments

$$\Psi_{n_\ell}(E) = \sigma(E) \phi_{n_\ell}(E), \text{ (neutrons)}$$

where $\Sigma(E)$ is the total cross section and $\phi_{n\ell}(E)$ are moments of the neutron fluence; whereas in the gamma ray code the quantity solved for is the energy fluence,

$$I_{n\ell}(E) = E\phi_{n\ell}(E) \quad (\text{gammas})$$

where E is the gamma ray energy in units of the rest energy of the electron (mc^2 units) and $\phi_{n\ell}(E)$ are moments of the gamma ray fluence.

The gamma ray transport equation in one dimensional plane geometry, including fluorescent and annihilation radiation, has the form

$$\begin{aligned} \cos\theta \frac{\partial \Phi}{\partial z}(E, z, \vec{\omega}) + \mu(E)\Phi(E, z, \vec{\omega}) &= \int_E^\infty dE' \int_{4\pi}^\infty d\vec{\omega}' K(E' \rightarrow E, \vec{\omega}' \rightarrow \vec{\omega}) \Phi(E', z, \vec{\omega}') \\ &+ \sum_i \delta(E - E_i) Y_i \int_{E_i'}^\infty \mu_i(E') \Phi(E', z, \vec{\omega}) dE' + S(E, z, \vec{\omega}). \end{aligned} \quad (1)$$

where

$\Phi(E, z, \vec{\omega})$ is the gamma ray fluence (photons/ $(cm^2 \cdot \text{ster} \cdot mc^2)$ unit)),

$\mu(E)$ is the total cross section (Thomson units per electron),

$\vec{\omega}$ is a unit vector in the photon direction, \vec{k} is a unit vector along the positive z axis, and $\vec{\omega} \cdot \vec{k} = \cos\theta$,

$S(E, z, \vec{\omega})$ is the source strength (photons/ $(cm^{-3} \cdot \text{ster} \cdot mc^2)$ unit)),

$K(E' \rightarrow E, \vec{\omega}' \rightarrow \vec{\omega})$ is the Klein Nishina scattering probability per unit path length (TU/electron/ mc^2 unit)

E_i is the energy of either a fluorescent photon or an annihilation photon

$\mu_i(E)$ is the cross section for either photoelectric absorption or pair production (TU/electron)

Y_i is the yield of either fluorescent photons or annihilation photons, and

E_i' is the threshold for photoelectric absorption or pair production (mc^2 units)

The source term for fluorescent and annihilation radiation may include any process in which photons above a threshold energy E_i are absorbed according to a cross section μ_i , with the subsequent emission of photons at energy E_i . The calculations reported in reference [4] treated these processes as pure absorption (i.e. $Y_i = 0$).

Following the usual practice we find it more convenient to study the energy fluence rather than the number fluence. We therefore let

$$I(E, z, \vec{\omega}) = E\phi(E, z, \omega) \quad (2)$$

The transport equation (1) then becomes

$$\cos\theta \frac{\partial I}{\partial z}(E, z, \vec{\omega}) + \mu(E)I(E, z, \omega) = \int_E^\infty dE' \int_{4\pi} d\Omega' K(E' \rightarrow E, \vec{\omega}' \rightarrow \vec{\omega}) I(E', z, \vec{\omega}') \\ (3)$$

$$+ \sum_i E_i \delta(E - E_i) Y_i \int \frac{\mu_i(E') I(E', z, \vec{\omega})}{E'} dE' + ES(E, z, \vec{\omega})$$

Contrary to earlier procedure, however, we use as an independent variable the energy rather than the wavelength λ of the photon.

If one now expands the energy flux in spherical harmonics,

$$I(E, z, \vec{\omega}) = \sum_{\ell=0}^{\infty} \sum_{m=-\ell}^{\ell} \sqrt{\frac{2\ell+1}{4\pi}} I_{\ell}^m(E, z) Y_{\ell}^m(\theta, \varphi) \quad (4)$$

and defines spatial moments of the angular expansion coefficients as

$$I_{nl}^m(E) = \frac{\mu_o^{n+1}}{n!} \int_{-\infty}^{\infty} z^n I_{\ell}^m(E, z) dz, \quad (5)$$

the transport equation becomes a function of energy alone. However, there is an infinite set of equations for $I_{nl}^m(E)$. Here, μ_o is the total cross section at the source energy. The source term can be obtained by evaluating

$$S_{nl}^m(E) = \frac{\mu_o^{n+1}}{n!} \int_{-\infty}^{\infty} z^n dz \int_{4\pi} \sqrt{\frac{4\pi}{2\ell+1}} Y_{\ell}^{m*}(\theta, \varphi) ES(E, z, \vec{\omega}) d\vec{\Omega}, \quad (6)$$

where Y_{ℓ}^{m*} is the complex conjugate of Y_{ℓ}^m . The moments equation then has

the form

$$\begin{aligned}
 \mu(E) I_{nl}^m(E) = & \int_E^\infty K(E' \rightarrow E) P_\ell(1 - \frac{1}{E'} + \frac{1}{E'}) I_{nl}^m(E') dE' + \\
 & + \mu_o \sqrt{\frac{(\ell+1)^2 - m^2}{(2\ell+1)}} I_{n-1, l+1}^m(E) + \mu_o \frac{\sqrt{\ell^2 - m^2}}{2\ell+1} I_{n-1, \ell-1}^m + \\
 & + \mu_o \delta_{\ell o} \sum_i \delta(E - E_i) Y_i \int_{E_i}^\infty \mu_i(E') I_{no}(E') \frac{dE'}{E} + S_{nl}^m(E)
 \end{aligned} \tag{7}$$

where

$P_\ell(\cos\theta)$ is the Legendre polynomial

and

$$K(E' \rightarrow E) = 0.375E \left[\frac{E'}{E} + \frac{E}{E'} - 1 + \cos^2\theta \right] / E'^3 .$$

For a plane source located at $z = 0$, i.e. $S(E, z, \vec{\omega}) = S(E, \cos\theta) \delta(z)/4\pi$, equation (7) reduces to

$$\begin{aligned}
 \mu(E) I_{nl}^m(E) = & \int_E^\infty K(E' \rightarrow E) P_\ell(1 - \frac{1}{E'} + \frac{1}{E'}) I_{nl}^m(E') dE' + \delta_{\ell o} \sum_k \delta(E - E_k) E_k S_n^k \\
 & + \frac{(1 - \delta_{no}) \mu_o}{(2\ell+1)} \left[(\ell+1) I_{n-1, \ell+1}(E) + I_{n-1, \ell-1}(E) \right] + \mu_o E \delta_{no} S_\ell(E)
 \end{aligned} \tag{8}$$

where

$$S_\ell(E) = \int_{-1}^1 d(\cos\theta) P_\ell(\cos\theta) S(E, \cos\theta) \tag{9}$$

and

$$S_n^k = Y_k \int_{E'_k}^1 \mu'_k(E') I_{no}(E') dE' / E' .$$

The computer code GAMMØM-I is designed to treat monoenergetic sources, that is, sources for which

$$S(E) = \delta(E - E_0) . \quad (10)$$

To eliminate the difficulties of the δ -function we express the moments as a sum of a δ -function and a continuous function $I_n^s(E)$:

$$\begin{aligned} I_{n\ell}(E) &= I_{n\ell}^s(E) + S_o E_o \delta(E - E_o) C_{n\ell} \\ &+ \sum_k \delta(E - E_k) E_k \left(\frac{\mu_o}{\mu_k} \right)^{n+1} C_{n\ell}^k \end{aligned} \quad (11)$$

where $C_{n\ell}$ are a set of coefficients that can be generated by recursion:

$$C_{n\ell} = \frac{1}{(2\ell+1)} [(\ell+1)C_{n-1,\ell+1} + C_{n-1,\ell-1}] \quad (12)$$

with

$$C_{o\ell} = S_\ell(E)$$

and the $C_{n\ell}^k$ are a somewhat more complicated set given by

$$C_{n\ell}^k = \frac{1}{(2\ell+1)} [(\ell+1) C_{n-1,\ell+1}^k + \ell C_{n-1,\ell-1}^k] + \delta_{no} S_n^k \quad (13)$$

The equation that is actually solved in the computer code is therefore:

$$\begin{aligned} \mu(E) I_{n\ell}^s(E) &= \int_E^\infty K(E' - E) P_\ell \left(1 - \frac{1}{E} + \frac{1}{E'} \right) I_{n\ell}^s(E') dE' + E_o K(E_o - E) P_\ell \left(1 - \frac{1}{E} + \frac{1}{E_o} \right) C_{n\ell} \\ &+ \delta_{\ell o} \sum_k \delta(E - E_k) E_k S_n^k + \frac{(1 - \delta_{no})}{2\ell+1} \mu_o [(\ell+1) I_{n-1,\ell+1}(E) + \ell I_{n-1,\ell-1}(E)] \end{aligned} \quad (14)$$

where S_n^k is given by

$$S_n^k = Y_k \left\{ S_o \mu'_k(E_o) C_{n\ell} + \int_{E'_k}^\infty I_{no}^s(E') \mu'_k(E') \frac{dE'}{E'} \right\} .$$

The contributions from the δ -functions, which are associated with the primary and secondary sources, and are given in equation (11), is also calculated by the code.

B. Gaussian Technique Applied to Scattering Integral.

The method used by earlier workers [2,3] to obtain solutions to Equation (14) was to assume a grid of energies (usually with constant

intervals of the wavelength in Compton units and proceed with the numerical solution from high to low energies. With this procedure the number of points in the numerical integration of the scattering kernel is restricted to the number of solutions previously obtained. However, the forward peak in the Klein-Nishina scattering distribution makes it desirable to obtain better definition in the region of integration for which $E' \approx E$. To obtain better definition we evaluate the integral in this region by Gaussian Quadrature as in the neutron code.

The application of Gaussian Quadrature to Equation (14) is very similar to the procedure described in Reference [12] for solution of the moments equations for neutrons. Again, to make this report self-contained we reproduce that discussion here.

This technique has the advantage that its accuracy depends only on the smoothness of the energy fluence function $I_n^S(E')$ in the integrand, rather than on the smoothness of the entire integrand, which is generally more rapidly varying due to the scattering kernel. We rewrite Eq. (14) in the following manner:

$$\begin{aligned} \mu(E) I_{n\ell}^S(E) - \int_E^{E_i} K(E' \rightarrow E) P_\ell \left(1 - \frac{1}{E} + \frac{1}{E'}\right) I_{n\ell}^S(E') dE' &= \int_{E_i}^{E_0} K(E' \rightarrow E) P_\ell \left(1 - \frac{1}{E} + \frac{1}{E'}\right) I_{n\ell}^S(E') dE' \\ &+ \frac{(1-\delta_{n0})\mu_0}{(2\ell+1)} [\ell+1] I_{n-1,\ell+1}^S(E) + \ell I_{n-1,\ell-1}^S(E) \\ &+ E_0 K(E_0 \rightarrow E) P_\ell \left(1 - \frac{1}{E} + \frac{1}{E_0}\right) C_{n\ell} + \delta_{\ell 0} \sum_k \delta(E - E_k) E_k S_{nk} . \end{aligned} \quad (15)$$

In this equation E_i is the solution energy just above E . Letting R equal the right hand side of Eq. (15) and noting that

$$\mu(E) I^S(E) = \int_E^{E_i} \mu(E') I^S(E') \delta(E' - E) dE' ,$$

we may rewrite Eq. (15),

$$\int_E^E [\mu(E') \delta(E' - E) - K(E' \rightarrow E) P_\ell(1 - \frac{1}{E} + \frac{1}{E'})] I_{n\ell}^S(E') dE' = R . \quad (16)$$

This integral is evaluated using the Gaussian technique by approximating the term in the square brackets by the sum of two delta functions.

$$\mu(E') \delta(E' - E) - K(E' \rightarrow E) P_\ell(1 - \frac{1}{E} + \frac{1}{E'}) = \alpha_{1\ell} \delta(E' - E_i) + \alpha_{2\ell} \delta(E' - E_\ell^*) . \quad (17)$$

Note that the function used in equation (17) could be modified by some function of E' , in order to make the remaining function $I_{n\ell}^S(E')$ in the integrand of equation (16) more smoothly varying. We have not made any attempt to explore such modifications. Inserting the right hand side of equation (17) into (16) the integral is readily evaluated to give

$$\alpha_{1\ell} I_{n\ell}^S(E_i) + \alpha_{2\ell} I_{n\ell}^S(E_\ell^*) = R \quad (18)$$

The three parameters $\alpha_{1\ell}$, $\alpha_{2\ell}$, and E_ℓ^* are determined by conditions on the first three moments of the scattering kernel:

$$\begin{aligned} \mu(E) \delta_{j_0}^{-1} I_j^\ell &= \int_0^{E_i - E} (E' - E)^j [\mu(E') \delta(E' - E) - K(E' \rightarrow E) P_\ell(\cos \Theta)] d(E' - E) \\ &= \alpha_{1\ell} (E_i - E)^j + \alpha_{2\ell} (E_\ell^* - E)^j , \end{aligned} \quad (19)$$

for $j = 0, 1, 2$.

Solving this system of equations gives

$$\begin{aligned} E_\ell^* &= E + \frac{-I_1^\ell (E_i - E) + I_2^\ell}{I_1^\ell + (\mu(E) - I_0^\ell)(E_i - E)} , \\ \alpha_{2\ell} &= \frac{-I_1^\ell + (I_0^\ell - \mu(E))(E_i - E)}{E_\ell^* - E_i} , \quad \text{and} \\ \alpha_{1\ell} &= \mu(E) - I_0^\ell - \alpha_{2\ell} . \end{aligned} \quad (20)$$

In this application of the Gaussian technique to the integral in Eq. (16) the argument of one delta-function is not fixed beforehand. This quadrature is exact for any energy fluence function $I_n^S(E')$ which is of degree two or lower in the range between E and E_i^* .

The energy fluence moments at E^* can be obtained by solving Eq. (12). Generally, E^* is somewhat lower than E and therefore an interpolation must be performed to obtain the value of the moments at E . Also, in evaluating the integral on the righthand side of Eq. (15), an interpolation is performed to obtain $I_n^S(E')$. GAMMØM-I uses linear interpolation for the solution at E and quadratic interpolation to obtain $I_n^S(E')$. Since the energy fluence is slowly varying with energy, these interpolations should introduce little error into the result.

III. Organization and Description of GAMMØM-I

A. General Structure

GAMMØM-I is structured as a five segment overlay. The structure of this overlay is shown in Fig. 1. The function of each segment may be described briefly as follows:

- Segment 1. Reads all input data except dose response coefficients.
- Segment 2. Calculates discontinuity energies and solution mesh parameters.
- Segment 3. Calculates scattering kernel and writes the results on Tape 8.
- Segment 4. This is the main solution part of the program. The Gaussian procedure is used. Also the effect of fluorescence and annihilation is calculated in this segment. Drum storage is required.
- Segment 5. This segment prints the results and calculates dose moments for the response functions that are defined by means of input data. Also the moments are written on tape 9 for later processing.

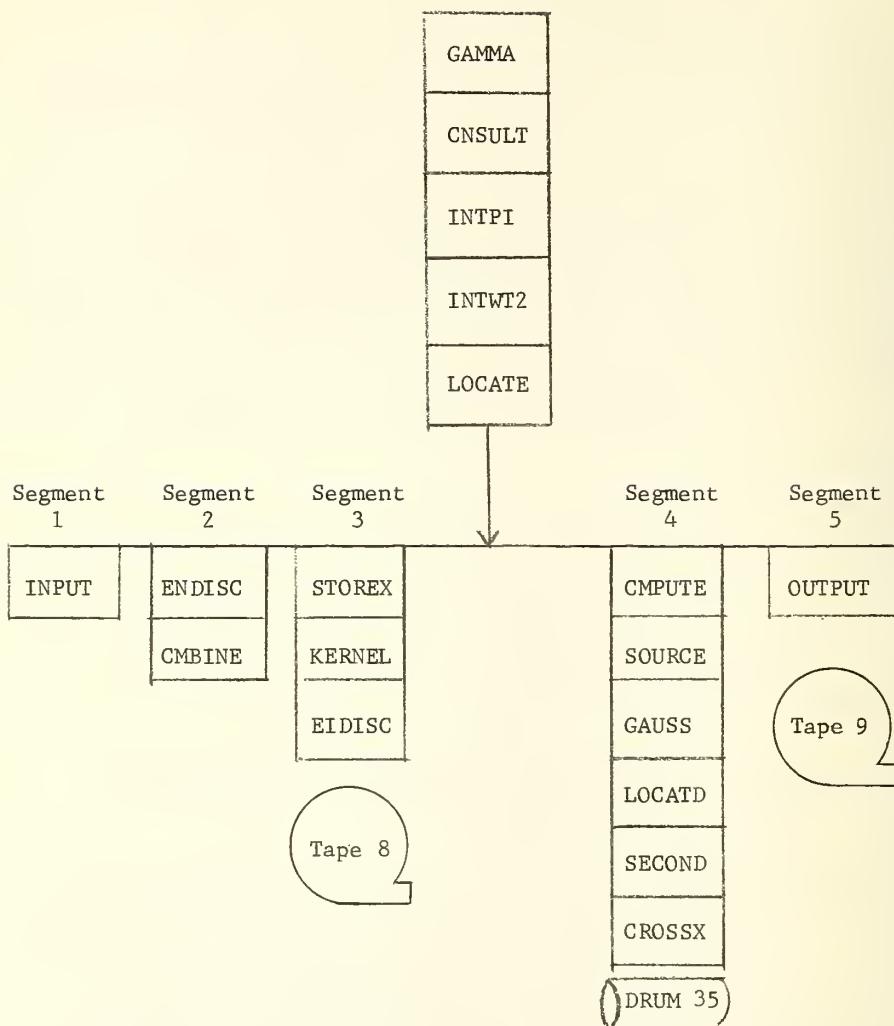


FIGURE 1. Overlay structure for GAMMOM-I computer code

This overlay procedure is employed on the UNIVAC 1108 and should be easy to implement on other computers. Note that the interpolation and integration routines are available to each segment.

B. Discussion of GAMMØM-I Subroutines

GAMMA

This routine calls in the main subroutines in the following sequence:

INPUT - reads in input data related to energy grids, cross sections, and parameters related to the source angular distribution and the linkage between moments.

ENDISC - identifies the energies at which primary source energies exist and anticipates the existence of discontinuities in the scattered energy flux moments due to these sources.

STØREX - calculates Legendre coefficients of the scattering kernel and stores them on tape.

SECØND - calculates the source terms for fluorescent and annihilation radiation both for the continuous spectrum and the discrete lines.

COMPUTE - solves the moments equation numerically for a plane source and a fixed solution energy.

OUTPUT - writes moments on tape for each energy and calculates dose moments for plane and point sources.

INPUT

This subroutine reads in all data related to cross sections, energy grids, source characteristics, and moment linkages. A detailed description of the input data is given in section IV.

ENDISC

This subroutine sets up the energy grid for which solutions are to be calculated. Allowance is made for double-valued solutions at energies for which discontinuities in the scattered energy fluence occur. The fineness of the grid is determined by input parameters except that 70 intervals are automatically assumed below the lowest single-scatter cutoff. The subroutine calls CMBINE which combines energy grids determined for each δ -function source into a final energy grid.

STØREX

This subroutine interpolates for the total cross section at each energy and writes detailed calculations of the scattering kernel on to tape. It calls EIDISC and KERNEL.

EIDISC - This subroutine sets up the energy grid for each integration over the scattering kernel. The fineness of the grid is determined by the input parameters MAXNØ, which sets the minimum number of intervals over any single scatter region and MINNØ which is only used when the problem involves more than one monoenergetic source.

KERNEL - This subroutine calculates the required number of Legendre coefficients of the scattering kernel.

SECØND

This subroutine calculates the contribution of the annihilation and fluorescent secondary source radiation to the scattered energy fluence moments. This contribution is analogous to the contribution from single-scatter radiation generated by the primary source. This subroutine also calculates the contribution from photons at the discrete secondary source energies and adds them to the direct radiation from the primary source.

CMPUTE

This subroutine solves equation 14 for moments of the energy fluence. Solutions proceed from the highest energy downward with numerical integration of the scattering integral.

OUTPUT

This subroutine contains options to print or write on to tape the energy fluence moments for scattered and direct radiation. Dose moments are produced by integration over the energy fluence moments, for up to ten dose response functions. Dose moments may be printed and/or punched on cards.

IV. Input and Output Description

A. Card Input

The following cards are read in the subroutine INPUT:

Card Type 1 (I1, 12A6)

IPRØB Type of input data

IPRØB = 1 All input data required.

IPRØB = 2 No source data required; source is assumed to be the same as in previous problem.

IPRØB = 3 No cross section or source data required; these data are assumed to be the same as in previous problem.

IPRØB = 4 Only data for source angular distribution is required; all other input data are assumed to be the same as in previous problem.

IPRØB = 5 End of calculation (See card type 22).

TITLE Alpha numeric title for problem.

Card Type 2 (11I5)

NMUS Number of energies for which total cross sections are to be read in.

NSØRS Number of primary source energies.

LS Maximum number of Legendre coefficients calculated by code ($\ell = 0, 1, \dots, LS-1$).

MINNØ The minimum number of intervals in the scattering kernel between the energy ranges of single scattering interactions.

MAXNØ The minimum number of intervals in the scattering kernel for any single scatter interaction.

NPXS Number of partial cross sections such as pair production or photo-electric absorption. NPXS > 0 only if annihilation or fluorescent radiation is to be included in calculation.

IØUT Parameter determining type of output information.

IØUT = 0 Fluence moments printed and written on unit 9. Plane and point dose moments printed. Plane dose moments punched.

IØUT = 1 Fluence moments written on unit 9 and printed only for primary and secondary source energies. Plane and point dose moments printed. Plane dose moments punched.

IØUT = 2 Fluence moments printed. Plane and point dose moments printed.

IØUT = 3 Fluence moments printed only for primary and secondary source energies. Plane and point dose moments printed. Plane dose moments punched.

KEYIND Index which allows part of calculation to be skipped.

KEYIND = 0,1 Do entire calculation.

KEYIND = 2 Compute moments using scattering kernel data stored previously on tape mounted on logical unit 8.

NRN Run number (arbitrary).

ICØNT Obsolete parameter (arbitrary).

NPRINT Number of solution energies for which detailed printout of solution is desired. (For diagnostic use.)

Card Type 3 (3E10.0)

ETØP Highest energy for which solutions are to be calculated. Ordinarily ETØP is equal to the highest primary source energy.

EBØTM Lowest energy for which solutions are to be calculated.

S0 Factor necessary to convert energy from input units to mc^2 units.
(Normally input energies are in MeV units and $S0 = 1.95692$).

X0 Factor necessary to convert cross section from input units to Thomson units. (Normally input cross sections are cm^2/g units and X0 is then $(.400594 Z/A)^{-1}$.

Card Type 4 (20I5) (Only if NPRINT > 0)

(IXEN(I), I = 1, NPRINT) Indices of solutions for which detailed printout is desired.

Card Type 5 (8E10.0) (Only if IPRØB ≤ 2)

(EMUS(I), TABMU(I), I = 1, NMUS) List of energies and tabulated cross sections.

The next 5 types of cards are required only if fluorescent or annihilation radiation is to be calculated.

Card Type 6 (20I5) (Only if IPRØB ≤ 2 and NPXS > 0)

(NPART(I), I = 1, NPXS) Number of tabulated cross sections for each reaction.

Card Type 7 (8E10.0) (Only if IPRØB ≤ 2 and NPXS > 0)

(YIELD(I), I = 1, NPXS) Yield for each reaction.

Card Type 8 (8E10.0) (Only if IPRØB ≤ 2 and NPXS > 0)

(ECUT(I), I = 1, NPXS) Threshold energy for each reaction.

Card Type 9 (8E10.0) (Only if IPRØB ≤ 2 and NPXS > 0)

(ESTART(I), I = 1, NPXS) δ -function energy of photon produced by each reaction.

Card Type 10 (8E10.0) (Only if IPROB \leq 2 and NPXS $>$ 0)

(EPART(I,J), SIGMA(I,J), J = 1, NPART(I)) List of energies and tabulated partial cross sections. (One set for each reaction.)

Card Type 11 (8E10.0) (Only if IPRØB = 1)

(ESØRS(I), STSØRS(I), I = 1, NSØRS) List of energies and strength of each primary source.

Card Type 12 (4I5)

NLØ Number of harmonic coefficients of the source angular distribution.

LZRØ Index of source harmonic when NLØ = 1; otherwise arbitrary.

MZRØ Index of azimuthal harmonic. (MZRØ = 0 unless both source distribution and detector response include azimuthal dependence).

Card Type 13 (4I3, 4(I6, 3I3))

N(I) n-index of the i^{th} moment

L(I) ℓ -index of the i^{th} moment

LINKH(I) i-index of higher- ℓ linkage moment

LINKL(I) i-index of lower- ℓ linkage moment

Card Type 14 (8E10.0)

(CNL(I), I = 1, NLØ) Harmonic coefficients of source angular distribution.

The following cards are read in the Main Program GAMMA:

Card Type 15 (2I5) (Only if KEYIND > 1)

NENSP Number of energies at which solutions are to be obtained.

NED Number of discontinuities in solution mesh.

Card Type 16 (3(I3, IP2E11.6)) (Only if KEYIND > 1)

NEIN(K) number of integration points for Kth solution.

ENS(K) energy corresponding to Kth solution.

EMUN(K) total cross section corresponding to Kth energy (TU/e1)

Card Type 17 (3(I3, 1P2E11.6)) (Only if KEYIND > 1)

NSW(K) number of solutions, uniformly spaced in lethargy (E_i/E_{i-1} constant) in Kth solution interval.

ED(K) highest energy in Kth solution interval.

DED(K) ratio of energies of successive solutions in Kth interval.

Subroutine OUTPUT

Card Type 18 (2I5)

NDOSE number of energies at which dose response coefficients are tabulated

NOFD number of types of detector responses to be calculated

Card Type 19 (8E10.0)

ECONS factor to convert energies in input units to energy in mc^2 units
(see Card Type 3)

(CONS(I), I = 1, NOFD) factor to convert energy absorption coefficients
from input units to units of TU/electron. (see Card Type 3)

Card Type 20 (8E10.0)

(EDOSE(I), I = 1, NDOSE) energy list for dose response coefficients.

Card Type 21 (8E10.0)

(SIGMAD(I,J), I = 1, NDOSE) energy absorption coefficient for Ith energy
and Jth type of dose response

Card Type 22 (blank)

End of calculation

B. Scattering Kernel Tape

For the UNIVAC 1107/1108 systems, the results of the calculations of
the scattering kernel are written tape unit 8. This tape must be available
for all values of KEYIND. The tape is written in the binary mode.
Binary records are written in the following form for each solution:

Record 1

WRITE (8) ENS(N), NIN, LSP, ND

where ENS(N) is energy for the Nth solution

NIN is the number of integration points in the integrand

LSP is the number of Legendre coefficients LS, plus 4

ND is the number of intervals over which the integration mesh
is uniformly spaced.

Record 2

WRITE (8) (NKIND(K), K = 1, NIN)

where NKIND(K) is an index which indicates when the integration
mesh changes

NKIND > 0: number of energies with constant integration mesh

NKIND = 0: no change in integration mesh

Record 3

WRITE (8) (EIN(K), K = 1, NIN)

where EIN(K) is the list of energies in the integrand

Record 4

WRITE (8) (EDI(K), K = 1, ND)

where EDI(K) is the list of energies at which the integration mesh changes

Record 5

WRITE (8) ((XKIN(K,L), L = 1, LS), K = 1, NIN)

where XKIN(K,L) is the (L-1)th harmonic coefficient of the cross section for the Kth energy in the integrand

C. Moments Solution Tape

For the UNIVAC 1107/1108 systems, moments are written on tape unit

9. This tape must be available for IOUT (input card 2) values less than
2. The following describes the BCD records written for a single problem.

Record 1 (12A6)

TITLE Problem title

Record 2 (515)

NENS number of solution energies

NSORS number of primary source energies

NOFD number of different detector responses

NNL number of (n, ℓ) combinations

NDOSE number of energies at which dose response coefficients are tabulated

Record 3 (16I5)

(N(I), L(I), I = 1, NNL) n and ℓ indices of each solution

Record 4 (1P10E13.7)

(ENS(I), I = 1, NENS) energy list

Record 5 (1P10E13.7)

(EMUN(I), I = 1, NENS) list of total cross sections

Record 6 (1P10E13.7)

(CNL(I), I = 1, NNL) list of $C_{n\ell}$ values for each (n, ℓ) combination

Record 7 thru 2*NNL + 6 (1P10E13.7)

(SOLN (NENS + K, I), K = 1, (NSORS + NPXS)) Direct radiation

moments for primary and secondary sources for the Ith (n, ℓ) combination

(SOLN(K,I), K = 1, NENS) Scattered radiation moments for the Ith (n, ℓ) combination.

D. Discussion of Output Data

The data preceded by (NPRINT > 0) are printed only for those solutions for which detailed printout is requested. These solutions are chosen by means of the input parameters NPRINT and IXEN. These data are for diagnostic use.

The printout consists of the following blocks of data:

Input data from INPUT subroutine.

Tabulation of energies and total cross sections in input units.

Tabulation of energies and total cross sections in units of electron mass and Thomson units, respectively.

(NPXS > 0) List of secondary source energy, threshold energy yield number of tabulated partial cross sections, list of energies and cross sections for each partial interaction.

List of source energies (primary and secondary) and source strengths (strength of secondary sources is initially set at zero).

List of normalized source energy and strength.

List of indices for each moment and values of linkage coefficients.

List of solution index, number of integration points, energy, and total cross section for each solution.

List of index numbers of solution points, energy and ratio of successive solution energies associated with each discontinuity.

Discontinuity refers to an energy below which the solution energy grid changes.

(NPXS > 0) List of moment (n, ℓ) indices and contribution from integration over scattered moments.

Energy and partial cross section for each primary source.

List of moment (n, ℓ) indices and contribution from scattered moments and primary sources.

List of moment (n, ℓ) indices and contribution from scattered moments and primary sources, weighted by radiation yield and appropriate cross section ratios.

List of energies for which secondary sources may contribute to

scattered moments. (Note that the SOURCE subroutine calculates a non-zero contribution only when

$$\frac{E_2}{(2E_2 + 1)} < E < E_2 ,$$

where E_2 is the energy of the secondary source.

(I = IXEN(J)) The following information is printed only for those energies for which detailed printout has been requested.

(n, ℓ) index, source contribution, and source contribution at solution discontinuity.

Parameters associated with this solution energy.

Index of solution, number of integration points, integrand energy.

Legendre coefficients of the scattering cross section, for each interval of integration.

ℓ index, three Gauss parameters and three obsolete parameters, for each ℓ -value.

Energy and contribution from numerical integration for each (n, ℓ) combination

Energy and moment solution for each (n, ℓ) combination.

Printout of input parameters.

List of energies and dose response coefficients.

List of energies in mc^2 units and dose response coefficients in Thomson units per electron.

(IOUT = 0 or 2) Energy, total cross section, solution index, LZRO, and MZRO, followed by a list of (n, ℓ) indices and fluence values for each (n, ℓ) combination.

Energy, total cross sections, solution index, LZRO and MZRO, followed by (n, ℓ) indices and fluence values for source energies only.

List of energy, interpolated dose response coefficient (normalized) fluence (0,0) moment, cumulative dose integral for each type of response.

Normalizing constant for which total energy absorbed (i.e. the zero-zero moment for total dose) is equal to unity. The deviation

of the moment from unity is a measure of inconsistency in cross sections introduced by interpolation procedures in the code.

Title of calculation and index of dose response coefficient.

Dose moments for a plane isotropic (PLI) source. Values are given for total, direct (including secondary sources) and scattered dose.

Dose moments for a point isotropic(PTI) source. Values are given for total, direct (including secondary sources), and scattered dose.

V. Sample Problem.

```

$KK
NMUS      =+33,
NSORS     =+1,
LS        =+21,
MINNO    =+10,
MAXNO   =+40,
NPXS     =+1,
LOU1     =+1,
KEYIND   =+1,
NRN      =+6012,
ICONIT   =+0,
NPRINT   =+0,
ETOP     =12500000E+01,
EBOTM   =.15000000E-01,
SU       =.19569242E+01,
X0       =.49699000E+01,
$END

TOTAL CROSS SECTIONS ENERGY--SIGVA
1.0000+02 2.3540+02 8.0000+01 2.2930-02 6.0000+01 2.2190-02 5.0000+01 2.1800-02 4.0000+01 2.1340-02 3.0000+01 2.0900+01
2.0000+01 2.0980-02 1.5000+01 2.1470-02 1.0000+01 2.0707-02 8.0000+00 2.4490-02 6.0000+00 2.6930-02 5.0000+00 2.8970+02
4.0000+00 3.1900-02 2.0000+00 3.6530-02 2.0000+00 3.6530-02 4.0000+00 5.1920-02 1.0000+00 6.3720-02 8.0000+00 7.0900+02
6.0000+01 8.0740-02 5.0000+01 A.7330+02 4.0000+00 9.5760-02 3.0000+01 1.0730-01 2.0000+01 1.2500-01 1.5000+01 1.3990+01
1.0000+01 1.7040+01 8.0000+02 2.0000+01 6.0000+02 2.7340-01 5.0000+02 3.6080-01 4.0000+02 5.5880-01 3.0000+02 1.1180+01

TOTAL CROSS SECTIONS ENERGY--SIGVA
1.1746+01 1.5555+02 1.17442+01 1.1742+02 1.1073-01 9.7846+01 1.0878-01 7.8277+01 1.0648+01 5.8708+01 1.0474+01
3.9138+01 1.0469+01 2.9354+01 1.0713-01 1.9569+01 1.1512-01 1.5653+01 1.2220-01 1.1742+01 1.3463-01 9.7866+00 1.4456+01
7.8277+01 1.5918+01 1.8278+00 3.9138+00 2.3554+00 2.9354+00 2.5908+01 1.9569+00 3.1795+01 1.5653+00 3.5378+01
1.1742+00 4.0286+01 9.7846+01 4.3577+01 7.8277+01 4.7783+01 5.1703+01 5.5542+01 3.9138+01 2.6237+01 2.9354+01 6.9809+01
1.5659+01 8.3028+01 1.5655+01 9.9998+01 1.1742+01 1.3644+00 9.7846+02 1.8044+00 7.8277+02 2.7884+00 5.5787+00
3.9138+02 1.7190+01 2.9354+02 3.9969+01 1.9569+02 1.3203+02 1.0000+00 1.0000+00 5.8708+02 1.0474+00 1.0474+00

ESTART E-CUT UFF NUMBER--ENERGY**SIGVA
•511006 1.022012 2.000000 17 1.0000+02 2.1050+02 8.0000+01 1.9920+02 6.0000+01 1.8380+02 5.0000+01 1.7370+02
1.2500+00 1.0000+00 1.0000+00 1.0000+00 1.6040+02 3.0000+01 1.4320+02 2.0000+01 1.1830+02 1.5000+01 1.0067+02
1.4456+01 1.0000+01 1.0000+01 1.0000+01 7.6580+03 8.0000+00 b.3890+03 6.0000+00 4.8510+03 5.0000+00 3.9370+03
1.3990+01 1.0000+00 1.0000+00 1.0000+00 2.1910+03 3.0000+00 1.7860+03 2.0000+00 6.2200+04 1.5000+00 1.5800+04

SOURCE ENERGIES *** ENERGY - STRENGTH
1.2500+00 1.0000+00 1.0000+00 0.0000
SOURCE ENERGIES *** ENERGY - STRENGTH
2.4462+00 2.4462+00 1.0000+00 0.0000

```

| INDEX | LINKL | LINKH | L | CH | CL | CNL |
|-------|-------|-------|-------------------|-----------------|------------------------|-----|
| 1 | 0 | 0 | 0.00000000 | 0.00000000i | 1.00000000+0.00000000i | |
| 2 | 0 | 1 | 1.00000000 | 3.33333332-0.01 | 3.33333332-0.01 | |
| 3 | 2 | 0 | 0.1.00000000+0.00 | 0.00000000 | 3.33333332-0.01 | |
| 4 | 2 | 2 | 2.0.00000000 | 3.99999999-0.01 | 1.333333331-0.01 | |
| 5 | 3 | 3 | 1.6.66666664-0.01 | 3.33333332-0.01 | 1.99999996-0.01 | |
| 6 | 0 | 4 | 3.0.00000000 | 4.28571425-0.01 | 5.7428556-0.02 | |
| 7 | 5 | 0 | 0.1.00000000+0.00 | 0.00000000 | 1.99999996-0.01 | |
| 8 | 5 | 4 | 2.5.99999994-0.01 | 3.99999999-0.01 | 1.14285710-0.01 | |
| 9 | 7 | 5 | 1.6.66666664-0.01 | 3.33333332-0.01 | 1.42857136-0.01 | |
| 10 | 0 | 1 | 0.1.00000000+0.00 | 0.00000000 | 1.42857136-0.01 | |

*** SOLUTION LISTS ** INDEX-INTERPOLATIONS-ENERGY-SIGMA**

| | | | | | | | | | | | |
|-----|----|---------------|---------------|-----|----|----------------|----------------|-----|----|-----------------|----------------|
| 1 | 1 | 2.446155*+00 | 2.4419342-01 | 2 | 11 | 2.3441465*+00 | 2.9074326-01 | 3 | 22 | 2.2463917*+00 | 2.9701971-01 |
| 4 | 2 | 2.152713*+00 | 3.0983931*+00 | 5 | 22 | 2.0529418*+00 | 3.0983931*+00 | 6 | 22 | 1.9769138*+00 | 3.1638826*+00 |
| 7 | 22 | 1.8944732*+00 | 3.2301578*+01 | 8 | 22 | 1.8154766*+00 | 3.2973567*+01 | 9 | 22 | 1.7379765*+00 | 3.3688352*+01 |
| 10 | 22 | 1.6672115*+00 | 3.1347622*+01 | 11 | 22 | 1.5976861*+00 | 3.5043555*+01 | 12 | 22 | 1.5310595*+00 | 3.5771716*+01 |
| 13 | 23 | 1.4676122*+00 | 3.0452892*+01 | 14 | 24 | 1.4060704*+00 | 3.4717534*+01 | 15 | 24 | 1.4785530*+01 | 3.7845530*+01 |
| 16 | 26 | 1.291204*+00 | 3.8627699*+01 | 17 | 27 | 1.2372595*+00 | 3.9673791*+01 | 18 | 28 | 1.1857964*+00 | 4.0114836*+01 |
| 19 | 29 | 1.135311*+00 | 4.0869598*+01 | 20 | 30 | 1.0889254*+00 | 4.1531674*+01 | 21 | 31 | 1.0435155*+00 | 4.2400640*+01 |
| 22 | 32 | 9.999915*+01 | 4.1716767*+01 | 23 | 0 | 9.1999326*+01 | 4.3176875*+01 | 24 | 33 | 9.3171066*+01 | 4.3666477*+01 |
| 25 | 44 | 9.4811319*+01 | 4.1515938*+01 | 26 | 44 | 9.1818684*+01 | 4.4654240*+01 | 27 | 44 | 8.8919182*+01 | 4.5122353*+01 |
| 28 | 44 | 8.7528801*+01 | 4.5653455*+01 | 29 | 44 | 8.227793*+01 | 4.6152180*+01 | 30 | 44 | 8.9872567*+01 | 4.669349*+01 |
| 31 | 44 | 8.0805657*+01 | 4.1716980*+01 | 32 | 44 | 7.8681391*+01 | 4.7683530*+01 | 33 | 44 | 7.6612969*+01 | 4.82050516*+01 |
| 34 | 44 | 7.4589823*+01 | 4.872074*+01 | 35 | 44 | 7.2637822*+01 | 4.924419*+01 | 36 | 44 | 7.0728277*+01 | 4.9770866*+01 |
| 37 | 44 | 6.886931*+01 | 5.1301026*+01 | 38 | 44 | 6.0542665*+01 | 5.0426632*+01 | 39 | 44 | 5.1353203*+01 | 5.1353203*+01 |
| 40 | 44 | 6.3575964*+01 | 5.1903126*+01 | 41 | 45 | 6.1907672*+01 | 5.2447292*+01 | 42 | 45 | 6.0280196*+01 | 5.2994798*+01 |
| 43 | 46 | 5.8655515*+01 | 5.3545949*+01 | 44 | 47 | 5.7152493*+01 | 5.4100724*+01 | 45 | 47 | 5.560035*+01 | 5.4691129*+01 |
| 46 | 46 | 5.4187074*+01 | 5.5221156*+01 | 47 | 48 | 5.2782575*+01 | 5.5786795*+01 | 48 | 49 | 5.1375520*+01 | 5.6366043*+01 |
| 49 | 50 | 5.0024919*+01 | 5.6928889*+01 | 50 | 50 | 4.870946*+01 | 5.70532*+01 | 51 | 51 | 4.74293*+01 | 5.798924*+01 |
| 52 | 52 | 4.6188483*+01 | 5.055531*+01 | 53 | 52 | 4.966411*+01 | 5.9149109*+01 | 54 | 53 | 4.788656*+01 | 5.9750750*+01 |
| 55 | 53 | 4.2655177*+01 | 6.0360505*+01 | 56 | 54 | 4.1514359*+01 | 6.0781028*+01 | 57 | 0 | 4.151456*+01 | 6.0978025*+01 |
| 58 | 54 | 4.0613126*+01 | 6.1493667*+01 | 59 | 64 | 3.9731452*+01 | 6.2013743*+01 | 60 | 63 | 3.8868919*+01 | 6.250121*+01 |
| 61 | 62 | 3.005110*+01 | 6.3072272*+01 | 62 | 61 | 3.1799620*+01 | 6.3610256*+01 | 63 | 62 | 3.3592051*+01 | 6.4194179*+01 |
| 64 | 63 | 3.5602013*+01 | 6.4704080*+01 | 65 | 64 | 3.6842912*+01 | 6.5260044*+01 | 66 | 65 | 3.4073017*+01 | 6.5822149*+01 |
| 67 | 67 | 3.3333323*+01 | 6.234121*+01 | 68 | 0 | 3.0308991*+01 | 6.6234120*+01 | 69 | 54 | 2.9068993*+01 | 6.7148666*+01 |
| 70 | 63 | 3.1128221*+01 | 6.8097664*+01 | 71 | 60 | 3.008991*+01 | 6.9082256*+01 | 72 | 59 | 2.9068993*+01 | 7.0103554*+01 |
| 73 | 57 | 2.809104*+01 | 7.1162789*+01 | 74 | 55 | 2.7145988*+01 | 7.261211*+01 | 75 | 54 | 2.632731*+01 | 7.340131*+01 |
| 76 | 54 | 2.5350197*+01 | 7.4580334*+01 | 77 | 57 | 2.4491735*+01 | 7.5805048*+01 | 78 | 58 | 2.3673203*+01 | 7.6335371*+01 |
| 79 | 62 | 2.287678*+01 | 7.7644140*+01 | 80 | 51 | 2.1701747*+01 | 7.9079044*+01 | 81 | 81 | 2.1363480*+01 | 8.0612618*+01 |
| 82 | 57 | 2.0644691*+01 | 8.224955*+01 | 83 | 50 | 1.9950152*+01 | 8.3994913*+01 | 84 | 50 | 1.9278860*+01 | 8.5854153*+01 |
| 85 | 50 | 1.8630389*+01 | 8.7833167*+01 | 86 | 49 | 1.8000161*+01 | 9.938289*+01 | 87 | 49 | 1.759730*+01 | 9.883677*+01 |
| 88 | 49 | 1.6816262*+01 | 9.1239281*+01 | 89 | 49 | 1.6247003*+01 | 9.61414891*+01 | 90 | 49 | 1.5700413*+01 | 9.797552*+01 |
| 91 | 49 | 1.5172213*+01 | 1.0285758*+00 | 92 | 49 | 1.0259250*+00 | 1.0259250*+00 | 93 | 48 | 1.4168524*+01 | 1.0994045*+00 |
| 94 | 48 | 1.3691864*+01 | 1.1393349*+00 | 95 | 48 | 1.3232132*+01 | 1.1767222*+01 | 96 | 48 | 1.2786101*+01 | 1.2242898*+00 |
| 97 | 48 | 1.2358945*+01 | 1.2765761*+00 | 98 | 47 | 1.1942621*+01 | 1.350286*+00 | 99 | 47 | 1.153861*+01 | 1.3912366*+00 |
| 100 | 47 | 1.15035*+01 | 1.4646584*+00 | 101 | 47 | 1.0752459*+01 | 1.54261092*+00 | 102 | 47 | 1.041274*+01 | 1.624552*+00 |
| 103 | 46 | 1.06443*+01 | 1.1712262*+00 | 104 | 46 | 9.239080*+00 | 1.8197968*+00 | 105 | 46 | 9.3946778*+00 | 1.9333913*+00 |
| 106 | 46 | 9.080443*+00 | 1.0299288*+00 | 107 | 45 | 7.9185949*+00 | 2.7119824*+00 | 108 | 45 | 8.797273*+00 | 2.3555094*+00 |
| 109 | 45 | 8.1946429*+00 | 2.5305660*+00 | 110 | 45 | 7.9185949*+00 | 2.7119824*+00 | 111 | 44 | 7.6525418*+00 | 2.9291739*+00 |
| 112 | 44 | 7.3950915*+00 | 3.161154*+00 | 113 | 44 | 7.1463024*+00 | 3.4185684*+00 | 114 | 43 | 6.9058812*+00 | 3.7045600*+00 |
| 115 | 43 | 6.6735523*+00 | 4.0520784*+00 | 116 | 43 | 6.14919049*+00 | 4.405364*+00 | 117 | 43 | 4.791707*+00 | 4.791707*+00 |
| 118 | 43 | 6.0221137*+00 | 5.2276648*+00 | 119 | 43 | 5.0190409*+00 | 5.7049468*+00 | 120 | 43 | 5.224010123*+00 | 6.235554*+00 |
| 121 | 43 | 5.4348067*+00 | 6.151868*+00 | 122 | 43 | 5.2191664*+00 | 6.4676759*+00 | 123 | 43 | 5.075273*+00 | 8.1921132*+00 |
| 124 | 43 | 4.9045325*+00 | 9.9353595*+00 | 125 | 43 | 4.7393320*+00 | 1.06191631*+01 | 126 | 43 | 4.580852*+00 | 1.1049054*+01 |
| 127 | 43 | 4.4259197*+00 | 1.212324*+01 | 128 | 43 | 4.2770958*+01 | 1.3551349*+01 | 129 | 43 | 4.132038*+02 | 1.4711626*+01 |
| 130 | 43 | 3.9941526*+00 | 1.621919*+01 | 131 | 43 | 3.5957795*+02 | 1.78905604*+01 | 132 | 43 | 3.7299270*+02 | 1.974484*+01 |
| 133 | 43 | 3.604443*+00 | 2.8802261*+01 | 134 | 43 | 3.4831907*+02 | 2.4088200*+01 | 135 | 43 | 3.3565997*+02 | 2.671153*+01 |
| 136 | 43 | 3.2527575*+02 | 2.956597*+01 | 137 | 43 | 3.1433267*+02 | 3.2688099*+01 | 138 | 43 | 3.0375775*+02 | 3.6145761*+01 |
| 139 | 0 | 2.4461552*+00 | 2.4461552*+00 | | | | | | | | |

**** DISCONTINUITIES ** INDEX-SWITCH-ENERGY-RATIO**

| | | | | | | | | | | | |
|---|-----|---------------|---------------|---|----|---------------|----------------|---|----|----------------|---------------|
| 1 | -1 | 2.446155*+00 | 1.0000000*+00 | 2 | 21 | 2.4461552*+00 | 9.582936*+01 | 3 | 33 | 9.999922*+01 | 9.7371142*+01 |
| 4 | -10 | 4.1514364*+01 | 9.7829092*+01 | 5 | 71 | 3.3333325*+01 | 9.66355754*+01 | 6 | 71 | 2.35333563*+02 | 9.663575*+01 |

INTEGRAL OVER SCATTERED MOMENTS

| | | | | | | | | | | | |
|---|---|---------------|---|---|-----------|---|---|---------------|---|---|---------------|
| 0 | 0 | 3.4089314*+07 | 1 | 1 | 0.0000000 | 2 | 0 | 3.4613248*+07 | 2 | 2 | 0.0000000 |
| 4 | 0 | 3.5126633*+07 | 4 | 2 | 0.0000000 | 5 | 1 | 0.0000000 | 6 | 0 | 3.5029745*+07 |

SOURCE ENERGY

CROSS SECTION

DIRECT IS ADDED IN
 0 0 8.5036746-06 1 1 0.0000000
 4 0 1.9638220-06 4 2 0.0000000
 **** * 1.97091377+00
 COMPLETE SINGLE SCATTER SOURCE ---CCNL---
 0 0 5.9871023-05 1 1 1.9957008-05
 4 0 1.031235-04 4 2 1.3492129-05
 **** * 1.8944721+00
 **** * 1.81547056+00
 **** * 1.73976246+00
 **** * 1.56721150+00
 **** * 1.59768605+00
 **** * 1.53105992+00
 **** * 1.46721222+00
 **** * 1.40602755+00
 **** * 1.36739341+00
 **** * 1.29120468+00
 **** * 1.23735952+00
 **** * 1.18575560+00
 **** * 1.13631494+00
 **** * 1.08892244+00
 **** * 1.04351546+00
 **** * 9.93999151-01
 **** * 9.7371056-01
 **** * 9.48113188-01
 **** * 9.231383642-01
 **** * 8.98919352-01
 **** * 8.75288010-01
 **** * 8.52277927-01
 **** * 8.29872750-01
 **** * 8.08056571-01
 **** * 7.860135907-01
 **** * 7.66129667-01
 **** * 7.45989226-01
 **** * 7.26378225-01
 **** * 7.07282774-01
 **** * 6.88689314-01
 **** * 6.70584499-01
 **** * 6.5295527-01
 **** * 6.37906539-01
 **** * 6.19076602-01
 **** * 6.02801956-01
 **** * 5.86955145-01
 **** * 5.71524226-01
 **** * 5.56500345-01
 **** * 5.41870743-01
 **** * 5.27625732-01
 **** * 5.13755202-01
 **** * 5.00249304-01
 **** * 4.87098459-01
 **** * 4.74293533-01
 **** * 4.6182834-01
 **** * 4.4964113-01
 **** * 4.37862556-01

4.26451771-01
 * * * * *
 * * * * * 4.15145587-01
 * * * * * 4.06131256-01
 * * * * * 3.9731519-01
 * * * * * 3.88689186-01
 * * * * * 3.80251102-01
 * * * * * 3.71996202-01
 * * * * * 3.63920506-01
 * * * * * 3.56020126-01
 * * * * * 3.49291256-01
 * * * * * 3.40730172-01
 * * * * * 3.33335232-01
 * * * * * 3.22119094-01
 * * * * * 3.11282214-01
 * * * * * 3.00609912-01
 * * * * * 2.90689927-01
 * * * * * 2.80910403-01
 * * * * * 2.71459885-01
 * * * * * 2.62527306-01
 * * * * * 2.53501970-01
 * * * * * 2.44973540-01
 * * * * * 2.36732028-01
 * * * * * 2.28767781-01
 * * * * * 2.21071471-01
 * * * * * 2.13634083-01
 * * * * * 2.06446907-01
 * * * * * 1.99501524-01
 * * * * * 1.92789802-01
 * * * * * 1.86303678-01
 * * * * * 1.80036157-01
 * * * * * 1.73979297-01
 * * * * * 1.68126205-01
 * * * * * 1.62470026-01
 * * * * * 1.5704135-01
 * * * * * 1.51722129-01
 * * * * * 1.466617624-01
 * * * * * 1.4085240-01
 * * * * * 1.36918519-01
 * * * * * 1.322312320-01
 * * * * * 1.27661008-01
 * * * * * 1.00021330-01
 * * * * * 9.723590799-012
 * * * * * 9.39677181-02
 * * * * * 9.08064125-002
 * * * * * 8.77514612-012
 * * * * * 6.47992860-002
 * * * * * 6.19464289-002
 * * * * * 7.91695492-012
 * * * * * 7.65254181-002
 * * * * * 7.39509147-012
 * * * * * 7.14630242-002
 * * * * * 6.90583518-002

```

***** * 6.6735228-02
***** * 6.49403751-02
***** * 6.23207605-02
***** * 6.02241368-02
***** * 5.81980487-02
***** * 5.62401232-02
***** * 5.43380669-02
***** * 5.25198674-02
***** * 5.07527734-02
***** * 4.9045253-02
***** * 4.73953197-02
***** * 4.5808446-02
***** * 4.42699724-02
***** * 4.27075080-02
***** * 4.13320537-02
***** * 3.99412760-02
***** * 3.85977947-02
***** * 3.72992698-02
***** * 3.60443050-02
***** * 3.48331507-02
***** * 3.36569792-02
***** * 3.25277478-02
***** * 3.143335671-02
***** * 3.03757747-02

$KKK == +0+
LZRO == +0+
MZRO == +10+
NNL == +138+
NNENS == +1+
NSNRS == +1+
TOUT == +1+
LI == +200+
L2 == +121+
INDOSE == +33+
NOFD == +2+
NENSPP == +139+
IS == +1+
$END

```

DOSE RESPONSE FUNCTIONS

| ENERGY | DOSE(1) | DOSE(2) | DOSE(3) |
|----------|--------------|---------------|---------------|
| 100.0000 | 2.28000-02 | 1.62000-02 | 1.62000-02 |
| 80.0000 | 2.12040e-02 | 1.57000-02 | 1.57000-02 |
| 60.0000 | 2.10300e-02 | 1.52000-02 | 1.52000-02 |
| 50.0000 | 2.04200e-02 | 1.49000-02 | 1.49000-02 |
| 40.0000 | 1.96600e-02 | 1.45000-02 | 1.45000-02 |
| 30.0000 | 1.88100e-02 | 1.43000-02 | 1.43000-02 |
| 20.0000 | 1.76800e-02 | 1.41000-02 | 1.41000-02 |
| 15.0000 | 1.74900e-02 | 1.43000-02 | 1.43000-02 |
| 10.0000 | 1.74100e-02 | 1.51000-02 | 1.51000-02 |
| 8.0000 | 1.76400e-02 | 1.57000-02 | 1.57000-02 |
| 6.0000 | 1.82700e-02 | 1.68000-02 | 1.68000-02 |
| 5.0000 | 1.86600e-02 | 1.78000-02 | 1.78000-02 |
| 4.0000 | 1.97700e-02 | 1.89000-02 | 1.89000-02 |
| 3.0000 | 2.12400e-02 | 2.07000-02 | 2.07000-02 |
| 2.0000 | 2.37600e-02 | 2.36000-02 | 2.36000-02 |
| 1.5000 | 2.57700e-02 | 2.57000-02 | 2.57000-02 |
| 1.0000 | 2.890600e-02 | 2.60000-02 | 2.60000-02 |
| .8000 | 2.90100e-02 | 2.89000-02 | 2.89000-02 |
| .6000 | 2.97400e-02 | 2.95000-02 | 2.95000-02 |
| .5000 | 2.99300e-02 | 2.97000-02 | 2.97000-02 |
| .4000 | 2.98800e-02 | 2.95000-02 | 2.95000-02 |
| .3000 | 2.94700e-02 | 2.89000-02 | 2.89000-02 |
| .2000 | 2.90600e-02 | 2.68000-02 | 2.68000-02 |
| .1500 | 3.04700e-02 | 2.50000-02 | 2.50000-02 |
| .1000 | 4.474300e-02 | 2.34000-02 | 2.34000-02 |
| .0800 | 6.27600e-02 | 2.43000-02 | 2.43000-02 |
| .0600 | 1.24400e-01 | 3.05000-02 | 3.05000-02 |
| .0500 | 2.05300e-01 | 4.06000-02 | 4.06000-02 |
| .0400 | 3.96100e-01 | 6.69000-02 | 6.69000-02 |
| .0300 | 9.47300e-01 | 1.49000-01 | 1.49000-01 |
| .0200 | 3.26600e+00 | 5.10000-01 | 5.10000-01 |
| .0150 | 7.82600e+00 | 1.27000e+00 | 1.27000e+00 |
| .0100 | 2.62700e+01 | 4.e+01000e+00 | 4.e+01000e+00 |

NORMALIZED FLUX TO DOSE CONVERSION FACTORS

| 195.6924 | 1.1377e-01 | 8.e+0194e-02 |
|----------|--------------|--------------|
| 156.5539 | 1.09977e-01 | 7.85168e-02 |
| 117.4155 | 1.04935e-01 | 7.60182e-02 |
| 97.8462 | 1.e+0189e-01 | 7.55179e-02 |
| 78.2770 | 9.61014e-02 | 7.45174e-02 |
| 58.7077 | 9.38600e-02 | 7.15172e-02 |
| 39.1385 | 8.9219e-02 | 7.05162e-02 |
| 29.3539 | 8.7273e-02 | 7.15172e-02 |
| 19.3692 | 8.6874e-02 | 7.55181e-02 |
| 15.6554 | 8.e+0215e-02 | 7.85188e-02 |
| 11.7415 | 9.11655e-02 | 8.40202e-02 |
| 9.7846 | 9.e+0109e-02 | 8.90214e-02 |
| 7.8277 | 9.e+0650e-02 | 9.e+0522e-02 |
| 5.8708 | 1.0598e-01 | 1.03525e-01 |
| 3.9138 | 1.1856e-01 | 1.18029e-01 |
| 2.9354 | 1.2859e-01 | 1.28531e-01 |
| 1.9569 | 1.40017e-01 | 1.40034e-01 |
| 1.5655 | 1.44757e-01 | 1.44535e-01 |
| 1.1742 | 1.48400e-01 | 1.48039e-01 |
| .9765 | 1.4934e-01 | 1.48536e-01 |

| | | |
|-------|------------|------------|
| *7828 | 1.4909e-01 | 1.4755e-01 |
| *5871 | 1.4705e-01 | 1.4435e-01 |
| *3914 | 1.4500e-01 | 1.3432e-01 |
| *2935 | 1.5204e-01 | 1.2530e-01 |
| *1957 | 2.1172e-01 | 1.1728e-01 |
| *1566 | 3.1316e-01 | 1.2152e-01 |
| *1174 | 6.2074e-01 | 1.5253e-01 |
| *0978 | 1.0244e+00 | 2.0349e-01 |
| *0783 | 1.9765e+00 | 3.3480e-01 |
| *0587 | 4.7269e+00 | 7.4017e-01 |
| *0391 | 1.6297e+01 | 2.5561e+00 |
| *0294 | 3.9051e+01 | 6.3515e+00 |
| *0196 | 1.3108e+02 | 2.3055e+01 |

| DIRECT RADIATION MOMENTS | | E0 = 1.25 MeV | CONCRETE | 5-15-72 |
|--------------------------|---------------|---------------|---------------|-----------------------------------|
| ENERGY | 2.446155+00 | SIGMA | 2.840663-01 | INDEX 139 L2R0 0 M7R0 0 |
| 0 0 | 2.4461552+00 | 1 1 | 8.1534507-01 | 2 0 8.1534507-01 2 2 <2773963-06 |
| 4 0 | 1.2706981-15 | 4 2 | 1.6640896-06 | 5 1 3.5292139-06 6 0 9.3984310-06 |
| •23441465+01 | •1.3535382+00 | •107.93580+01 | •0.00000000 | •0.00000000 |
| •108.13379+01 | •108.13379+01 | •50296668-02 | •50326950-02 | •23040411-01 |
| •108.14374+01 | •108.14374+01 | •2379102-01 | •23596724-01 | •49953092-01 |
| •13650515+00 | •13650515+00 | •32571913-01 | •49953092-01 | •49953092-01 |
| •121527135+01 | •13735394+00 | •97814099+00 | •97814099+00 | •97814099+00 |
| •20629418+01 | •13872337+00 | •95151646+00 | •49034662-01 | •49034662-01 |
| •139702239+00 | •92661447+00 | •56761441-01 | •56761441-01 | •56761441-01 |
| •189447752+01 | •14079998+00 | •90539223+00 | •71330739-01 | •71334935-01 |
| •18154706+01 | •141474508+00 | •8868805+00 | •78165906-01 | •78191876-01 |
| •17397625+01 | •142422774+00 | •88693970+00 | •911126213-01 | •9111456-01 |
| •16072115+01 | •14358219+00 | •85483915+00 | •9724085-01 | •972566123-01 |
| •15786801+01 | •14491918+00 | •89240381+00 | •10857099-00 | •10857099-00 |
| •15314914+00 | •14522340+00 | •85471587+00 | •11574507+00 | •11574507+00 |
| •14672122+01 | •145294+00 | •82356164+00 | •1226229+00 | •1226229+00 |
| •14060270+01 | •1465552+00 | •817013187+00 | •1323744-00 | •1323744-00 |
| •13473934+01 | •1467969+00 | •814242274+00 | •13711502+00 | •13711502+00 |
| •12912049+01 | •14748168+00 | •80951461+00 | •1462271+00 | •1462271+00 |
| •99999915+00 | •1493887+00 | •82890983+00 | •181807042+00 | •18171286+00 |
| •99999922+00 | •1494324+00 | •82997829+00 | •183616107+00 | •183616107+00 |
| •97371066+00 | •1495588+00 | •83469493+00 | •1847644+00 | •1847644+00 |
| •94811319+00 | •14960681+00 | •84116010+00 | •1890382+00 | •1890382+00 |
| •9231885+00 | •14933258+00 | •84837475+00 | •1911452+00 | •1911452+00 |
| •89891932+00 | •1493615+00 | •85636760+00 | •1953117+00 | •1953117+00 |
| •85227793+00 | •1493754+00 | •86515819+00 | •1973480+00 | •1973480+00 |
| •82187275+00 | •1492774+00 | •87486354+00 | •2013387+00 | •2013387+00 |
| •80840565+00 | •1492575+00 | •88531716+00 | •20353140+00 | •20353140+00 |
| •78686139+00 | •1491172+00 | •89088739+00 | •20791670+00 | •20791670+00 |
| •76112669+00 | •1491024+00 | •92204558+00 | •21293479+00 | •21293479+00 |
| •63579064+00 | •14875808+00 | •10448886+00 | •2148429+00 | •2148429+00 |
| •61907660+00 | •14739198+00 | •95139048+00 | •21851785+00 | •21851785+00 |
| •70728277+00 | •1483963+00 | •96766307+00 | •22034356+00 | •22034356+00 |
| •68668931+00 | •14846645+00 | •98506527+00 | •22396463+00 | •22396463+00 |
| •67058465+00 | •14783454+00 | •10038155+01 | •22574432+00 | •22574432+00 |
| •65295593+00 | •14757500+00 | •10236888+01 | •2291706+00 | •2291706+00 |
| •63579064+00 | •1467968+00 | •10448886+01 | •23147306+00 | •23147306+00 |
| •61907660+00 | •14739198+00 | •10675165+01 | •23379827+00 | •23379827+00 |
| •60280196+00 | •147471939+00 | •10916165+01 | •2361900+00 | •2361900+00 |
| •58095515+00 | •147501510+00 | •11173173+00 | •23883058+00 | •23883058+00 |
| •57152493+00 | •14688697+00 | •11447301+01 | •2422611+00 | •2422611+00 |
| •5418704+00 | •14671748+00 | •12051378+01 | •24736777+00 | •24736777+00 |
| •52762573+00 | •14620204+00 | •1238488+01 | •2490776+00 | •2490776+00 |
| •513552+00 | •14621280+00 | •12739487+01 | •2546618+00 | •2546618+00 |
| •50024930+00 | •14621297+00 | •13191008+01 | •25351136+00 | •25351136+00 |

| | | | | |
|-----------------|----------------|----------------|----------------|---------------|
| * 48709846+00 | * 145930054+00 | * 13524850+01 | * 25757281+00 | * 25629239+00 |
| * 47429333+00 | * 14418265+00 | * 13987987+01 | * 25928045+00 | * 25793177+00 |
| * 46184833+00 | * 14418265+00 | * 14455115+00 | * 26226805+00 | * 2612123+00 |
| * 44968411+00 | * 14416158+00 | * 14953616+01 | * 2643905+00 | * 2663545+00 |
| * 43786256+00 | * 14429546+00 | * 15489161+01 | * 2683340+00 | * 26617470+00 |
| * 42635177+00 | * 14429546+00 | * 16061519+01 | * 26937031+00 | * 2677995+00 |
| * 41514359+00 | * 14445158+00 | * 16674626+01 | * 27308014+00 | * 2711173+00 |
| * 41514356+00 | * 14445158+00 | * 14087018+01 | * 27396810+00 | * 27151198+00 |
| * 40813126+00 | * 14462425+00 | * 140768613+01 | * 27456614+00 | * 2753257+00 |
| * 39731452+00 | * 14433722+00 | * 14095350+01 | * 27479257+00 | * 27479259+00 |
| * 38868919+00 | * 14500664+00 | * 14133347+01 | * 27819293+00 | * 27591974+00 |
| * 38025110+00 | * 14534046+00 | * 14188913+01 | * 28052544+00 | * 2780462+00 |
| * 37119963+00 | * 14570199+00 | * 14258870+01 | * 28167319+00 | * 27979776+00 |
| * 36392051+00 | * 14609634+00 | * 14342209+01 | * 28393512+00 | * 28115517+00 |
| * 35821213+00 | * 14651420+00 | * 14437373+01 | * 28505087+00 | * 28216240+00 |
| * 34829126+00 | * 14697399+00 | * 14543501+01 | * 28725471+00 | * 28413622+00 |
| * 34073017+00 | * 14747604+00 | * 14660027+01 | * 28834404+00 | * 28510378+00 |
| * 33333323+00 | * 14660607+00 | * 14822094+01 | * 29049981+00 | * 2870212+00 |
| * 33533325+00 | * 14680204+00 | * 14822094+01 | * 29102777+00 | * 28746708+00 |
| * 32211909+00 | * 14720643+00 | * 15035347+01 | * 29185095+00 | * 28819204+00 |
| * 310128221+00 | * 14868825+00 | * 15266257+01 | * 29510402+00 | * 29101139+00 |
| * 30080991+00 | * 15051622+00 | * 154999154+01 | * 29671567+00 | * 2928447+00 |
| * 29068935+00 | * 15270267+00 | * 15739247+01 | * 29991765+00 | * 2955811+00 |
| * 28091040+00 | * 15566254+00 | * 15975656+01 | * 29961653+00 | * 29689783+00 |
| * 2711452388+00 | * 15821334+00 | * 16196814+01 | * 30469030+00 | * 30013251+00 |
| * 2623232731+00 | * 16157605+00 | * 16390161+01 | * 31627783+00 | * 30944774+00 |
| * 19350197+00 | * 16537399+00 | * 16537392+01 | * 3102949+00 | * 3036948+00 |
| * 24497354+00 | * 16963448+00 | * 16615559+01 | * 3148003+00 | * 30553874+00 |
| * 236673203+00 | * 17049694+00 | * 16768636+01 | * 31572414+00 | * 3070853+00 |
| * 22876778+00 | * 17665696+00 | * 16948039+01 | * 31877296+00 | * 30304750+00 |
| * 22107147+00 | * 18202033+00 | * 16948039+01 | * 32028754+00 | * 31002286+00 |
| * 213636308+00 | * 18905900+00 | * 1641050+01 | * 32331185+00 | * 31194142+00 |
| * 206446691+00 | * 19705733+00 | * 16294358+01 | * 32482418+00 | * 31279116+00 |
| * 195050152+00 | * 20611280+00 | * 16136794+01 | * 32785182+00 | * 31450883+00 |
| * 19278980+00 | * 21633893+00 | * 1592944+01 | * 32936756+00 | * 31532951+00 |
| * 18630388+00 | * 22765671+00 | * 15662767+01 | * 33297271+00 | * 3210968+00 |
| * 18035616+00 | * 24084971+00 | * 15330221+01 | * 33240150+00 | * 31649361+00 |
| * 17397930+00 | * 25632112+00 | * 14985348+01 | * 33391806+00 | * 31736337+00 |
| * 16812620+00 | * 27270782+00 | * 1450304+01 | * 33596712+00 | * 31390352+00 |
| * 16247003+00 | * 2909334+00 | * 13938305+01 | * 33848430+00 | * 31969465+00 |
| * 15700613+00 | * 31115184+00 | * 1287136+01 | * 34149088+00 | * 32073193+00 |
| * 15172213+00 | * 3341120+00 | * 1258567+01 | * 34297271+00 | * 3210968+00 |
| * 132355945+00 | * 54464162+00 | * 74799705+00 | * 35522110+00 | * 32551198+00 |
| * 14661732+00 | * 35956319+00 | * 11828726+01 | * 35857385+00 | * 3228449+00 |
| * 14168524+00 | * 38806178+00 | * 11018420+01 | * 34730648+00 | * 32358200+00 |
| * 13691850+00 | * 42001906+00 | * 10164566+01 | * 35007074+00 | * 3239758+00 |
| * 1322313232+00 | * 45991684+00 | * 93279135+00 | * 35140435+00 | * 32441594+00 |
| * 12786101+00 | * 50002905+00 | * 84103145+00 | * 35399436+00 | * 32517199+00 |
| * 123555945+00 | * 54464162+00 | * 74799705+00 | * 35522110+00 | * 32551198+00 |
| * 9723980+01 | * 10426932+01 | * 20535567+00 | * 36473992+00 | * 32776332+00 |
| * 93967118+01 | * 1149875+01 | * 15656184+00 | * 3652494+00 | * 3287571+00 |
| * 90806413+01 | * 12695231+01 | * 1162328+00 | * 365961682+00 | * 32800422+00 |
| * 87751461+01 | * 14032195+01 | * 638495670+01 | * 32956156+01 | |

| | | | |
|----------------|----------------|---------------|---------------|
| * 84799286-01 | * 58456848-01 | * 36676363+00 | * 32814677+00 |
| * 81964429-01 | * 17246744+01 | * 353626-01 | * 36593989+00 |
| * 7918549-01 | * 19093795+01 | * 25819426-01 | * 32817803+00 |
| * 7652418-01 | * 21146975+01 | * 16239079-01 | * 3282230+00 |
| * 7395915-01 | * 23430149+01 | * 9404784-02 | * 3282734+00 |
| * 7143024-01 | * 259701042+01 | * 56763781-02 | * 3282575+00 |
| * 6915832-01 | * 28796593+01 | * 31416843-02 | * 32865392+00 |
| * 6673523-01 | * 32032776+01 | * 16439701-02 | * 32887174+00 |
| * 6449375-01 | * 32309216-03 | * 36750488+00 | * 3288740+00 |
| * 55536231+01 | * 35425791+01 | * 82309216-03 | * 3288760+00 |
| * 62302760-01 | * 39425791+01 | * 39038795-03 | * 32887729+00 |
| * 60224137-01 | * 43744164+01 | * 17467771-03 | * 32887799+00 |
| * 58198049-01 | * 48539137+01 | * 73569058-04 | * 32887815+00 |
| * 56240123-01 | * 53863640+01 | * 29208720-04 | * 32887829+00 |
| * 5434067-01 | * 59776585+01 | * 10794868-04 | * 32887832+00 |
| * 5251664-01 | * 66334470+01 | * 37047707-05 | * 32887834+00 |
| * 50756773-01 | * 73637148+01 | * 11818601-05 | * 32887835+00 |
| * 4904325-01 | * 81738657+01 | * 34710713-06 | * 32887835+00 |
| * 473932320-01 | * 90934036+01 | * 91752918-07 | * 32887835+00 |
| * 45800825-01 | * 109494293+02 | * 22494185-07 | * 32887835+00 |
| * 44259972-01 | * 11204785+02 | * 49194943-08 | * 32887835+00 |
| * 42770958-01 | * 12436820+02 | * 10044075-08 | * 32887835+00 |
| * 4133038-01 | * 13803629+02 | * 1865075-09 | * 32887835+00 |
| * 39944526-01 | * 15319881+02 | * 30627684-10 | * 32887835+00 |
| * 38597795-01 | * 17001831+02 | * 43710830-11 | * 32887835+00 |
| * 37299270-01 | * 18867490+02 | * 52493753-12 | * 32887835+00 |
| * 36044430-01 | * 20936622+02 | * 49875703-13 | * 32887835+00 |
| * 34831807-01 | * 23231943+02 | * 31217594-14 | * 32887835+00 |
| * 3365979-01 | * 25805138+02 | * 2828760-17 | * 32887835+00 |
| * 32527575-01 | * 28628591+02 | * 29403086-16 | * 32887835+00 |
| * 31433267-01 | * 31753493+02 | * 41189346-17 | * 32887835+00 |
| * 30375775-01 | * 35217847+02 | * 28287681-18 | * 32887835+00 |

NORMALIZING CONSTANT

$$1.43847384+00$$

$F_0 = 1.25 \text{ eV CONCRETE}$

$5-15-72$

PLANAR DOSE RATE INTEGRALS FOR THE 1 RESPONSE

| TOTAL DOSE | | 3.8934279-01 | | 2 0 7.8751358-01 | | 2 2 1.0688574-01 | | 3 1 4.0603958-01 | | 3 3 7.2167781-02 | |
|-----------------------------|-----|--------------|-----|------------------|------------------|------------------|------------------|------------------|--|------------------|--|
| 0 0 1.00038229400 | 1 1 | 3.8934279-01 | 2 0 | 7.8751358-01 | 2 2 1.0688574-01 | 3 1 4.0603958-01 | 3 3 7.2167781-02 | | | | |
| 4 0 8.0736414-01 | 4 2 | 2.1352197-01 | 5 1 | 4.3274310-01 | 6 0 8.5399375-01 | | | | | | |
| DIRECT DOSE CONTRIBUTION | | 1.573731-01 | | 2 0 1.5738073-01 | | 2 2 6.2951070-02 | | 3 1 9.4427023-02 | | 3 3 2.6978958-02 | |
| 0 0 4.7213783-01 | 1 1 | 5.3957597-02 | 5 1 | 6.7447807-02 | 6 0 6.7449667-02 | | | | | | |
| SCATTERED DOSE CONTRIBUTION | | 2.3246448-01 | | 2 0 6.3013286-01 | | 2 2 1.0393468-01 | | 3 1 3.1161255-01 | | 3 3 4.5148824-02 | |
| 0 0 5.2868514-01 | 1 1 | 1.5956397-01 | 5 1 | 3.6529530-01 | 6 0 7.055069-01 | | | | | | |
| 4 0 7.129554-01 | 4 2 | | | | | | | | | | |

$E_0 = 1.25 \text{ keV}$ CONCRETE

5-15-72

PLANE DOSE RATE INTEGRALS FOR THF 2 RESPONSE

| TOTAL DOSE | | | | DIRECT DOSE CONTRIBUTION | | | | SCATTERED DOSE CONTRIBUTION | | | |
|------------|---|--------------|---|--------------------------|--------------|---|---|-----------------------------|---|---|--------------|
| 0 | 0 | 9.4461367-01 | 1 | 1 | 3.8420069-01 | 2 | 0 | 7.1263745-01 | 2 | 2 | 1.0000553-01 |
| 4 | 0 | 7.2038032-01 | 4 | 2 | 2.1225995-01 | 5 | 1 | 4.2351782-01 | 6 | 0 | 7.5073150-01 |
| 0 | 0 | 4.7239387-01 | 1 | 1 | 1.5746366-01 | 2 | 0 | 1.5746607-01 | 2 | 2 | 0.935212-02 |
| 4 | 0 | 9.4479811-02 | 4 | 2 | 5.3987263-02 | 5 | 1 | 6.7484385-02 | 6 | 0 | 0.7485640-02 |
| 0 | 0 | 4.7221991-01 | 1 | 1 | 2.2681702-01 | 2 | 0 | 5.5517139-01 | 2 | 2 | 1.0301832-01 |
| 4 | 0 | 6.2590550-01 | 4 | 2 | 1.5827266-01 | 5 | 1 | 3.563344-01 | 6 | 0 | 0.8924588-01 |

$E_0 = 1.25 \text{ MeV}$ CONCRETE 5-1-1-72
 POINT DOSE RATE INTEGRALS FOR THF 1 RESPONSE
 TOTAL DOSE
 0 0 1.0000e229+00 1 1 1.1695284+00 2 0 2.3625408+00 2 2 1.e2516431+00
 4 0 4.0366e08+00 4 2 1.9683173+00 5 1 3.0292018+00 6 6 5.e-9719854+00
 DIRECT DOSE CONTRIBUTION
 0 0 4.7213783-01 1 1 4.7213496-01 2 0 4.e7214220-01 2 2 4.e7213303-01
 4 0 4.e7214305-01 4 2 4.e7213249-01 5 1 4.e7213467-01 6 0 4.e7214349-01
 SCATTERED DOSE CONTRIBUTION
 0 0 5.2868514-01 1 1 6.e9752343-01 2 0 1.e890386+00 2 2 7.e75107-01
 4 0 3.5646778+00 4 2 1.e3901844+00 5 1 2.e5570672+00 6 0 5.e5058550+00

$\text{EO} = 1.25 \text{ vEV CONCRETE}$

POINT DOSE RATE INTEGRALS FOR THE 2 RESPONSE

TOTAL DOSE $9.4461367 \cdot 01$ 1 1 $1.1528421 \cdot 00$ 2 0 $2.1379124 \cdot 00$ 2 2 $1.450265 \cdot 00$ 3 1 $1.920978 \cdot 00$ 3 3 $1.2605857 \cdot 00$
0 0 $3.6019416 \cdot 00$ 4 2 $1.8572744 \cdot 00$ 5 1 $2.9667249 \cdot 00$ 6 0 $5.2971207 \cdot 00$


DIRECT DOSE CONTRIBUTION $4.7239387 \cdot 01$ 1 1 $4.7239099 \cdot 01$ 2 0 $4.7239822 \cdot 01$ 2 2 $4.738909 \cdot 01$ 3 1 $4.7239118 \cdot 01$ 3 3 $4.723985 \cdot 01$
0 0 $4.7239907 \cdot 01$ 4 2 $4.7238857 \cdot 01$ 5 1 $4.7239072 \cdot 01$ 6 0 $4.723950 \cdot 01$

SCATTERED DOSE CONTRIBUTION $4.7221981 \cdot 01$ 1 1 $6.8045107 \cdot 01$ 2 0 $1.6655142 \cdot 00$ 2 2 $7.7253740 \cdot 01$ 3 1 $1.5197066 \cdot 00$ 3 3 $7.8819783 \cdot 01$
0 0 $3.1235425 \cdot 00$ 4 2 $1.3844858 \cdot 00$ 5 1 $2.4943342 \cdot 00$ 6 0 $4.8247213 \cdot 00$

REFERENCES

- [1] U. Fano, L. V. Spencer, and M. J. Berger, "Penetration and Diffusion of X-rays," Handbuch der Physik, XXXVIII (Springer-Verlag, Berlin, 1959).
- [2] L. V. Spencer, "Plural Series Representation of Functions, J. Res. Nat. Bur. Standards (to be published).
- [3] L. V. Spencer and U. Fano, "Penetration and Diffusion of X-Rays. Calculation of the Spatial Distributions by Polynomial Expansion," J. Res. Nat. Bur. Standards 46, 446 (1951).
- [4] H. Goldstein and J. Ernest Wilkins, Jr., "Calculations of the Penetration of Gamma Rays," AEC Report NYO-3075, June 30, 1954.
- [5] L. V. Spencer and J. C. Lamkin (unpublished).
- [6] L. V. Spencer and J. C. Lamkin, "Slant Penetration of γ -Rays in H_2O ," NBS Report 5944, unpublished.
- [7] L. V. Spencer and J. C. Lamkin, "Slant Penetration of γ -Rays: Mixed Radiation Sources," NBS Report 6322, unpublished.
- [8] L. V. Spencer and J. C. Lamkin, "Slant Penetration of γ -Rays in Concrete," NBS Report 6591, unpublished.
- [9] L. V. Spencer, "Structure Shielding Against Fallout Radiation from Nuclear Weapons," NBS Monograph 42, U.S. Gov't Printing Office, June, 1962.
- [10] C. Eisenhauer, "An Engineering Method for Calculating Protection Afforded by Structures Against Fallout Radiation," NBS Monograph 76, U.S. Gov't Printing Office, July, 1964.
- [11] "Design and Review of Structure for Protection from Fallout Gamma Radiation," PM-100-1, Office of Civil Defense, Feb., 1965.
- [12] E. T. Bramlitt and C. M. Eisenhauer, "A Discussion and Tabulation of the OCD Standard Method for Fallout Gamma Radiation Shielding Analysis," TR-70, Office of Civil Defense, December, 1971.
- [13] "Shelter Design and Analysis, Volume 1, Office of Civil Defense, June, 1968 (Rev: 1969, 1970, 1971).
- [14] C. Eisenhauer, G. L. Simmons and L. V. Spencer, "A Neutron Moments Computer Code, Moment I.," NBS Technical Note 725, June, 1972.

| | | | | |
|--|--|--|---|------------------------------|
| U.S. DEPT. OF COMM. BIBLIOGRAPHIC DATA SHEET | | 1. PUBLICATION OR REPORT NO. NBS TN-766 | 2. Gov't Accession No. | 3. Recipient's Accession No. |
| 4. TITLE AND SUBTITLE A Gamma Ray Moments Computer Code. GAMMOM-I | | 5. Publication Date April 1973 | | |
| | | 6. Performing Organization Code | | |
| 7. AUTHOR(S) Charles M. Eisenhauer, George L. Simmons, and Lewis V. Spencer | | 8. Performing Organization | | |
| 9. PERFORMING ORGANIZATION NAME AND ADDRESS NATIONAL BUREAU OF STANDARDS DEPARTMENT OF COMMERCE WASHINGTON, D.C. 20234 | | 10. Project/Task/Work Unit No. 2400434 - 2400439 | | |
| | | 11. Contract/Grant No. | | |
| 12. Sponsoring Organization Name and Address Defense Civil Preparedness Agency, Washington, D.C. 20310 Office of Naval Research, Arlington, Va. 22217 | | 13. Type of Report & Period Covered Final | | |
| | | 14. Sponsoring Agency Code | | |
| 15. SUPPLEMENTARY NOTES | | | | |
| 16. ABSTRACT (A 200-word or less factual summary of most significant information. If document includes a significant bibliography or literature survey, mention it here.) In this paper we describe a computer code for generating spatial-angular moments of gamma ray energy fluence in an infinite medium. The equation for moments of the energy fluence is given and the techniques used for the solution are discussed. The structure of the code and of the main subroutines is also given. Details of the input and output data are presented and the printout from a sample problem is included. | | | | |
| 17. KEY WORDS (Alphabetical order, separated by semicolons) Computer code; gamma rays; gamma ray transport; gauss quadrature; moments; shielding. | | | | |
| 18. AVAILABILITY STATEMENT <input checked="" type="checkbox"/> UNLIMITED. <input type="checkbox"/> FOR OFFICIAL DISTRIBUTION. DO NOT RELEASE TO NTIS. | | 19. SECURITY CLASS (THIS REPORT) X UNCLASSIFIED | 21. NO. OF PAGES 41 | |
| | | 20. SECURITY CLASS (THIS PAGE) UNCLASSIFIED | 22. Price \$.75 Domestic Postpaid \$.50 GPO Bookstore | |



NBS TECHNICAL PUBLICATIONS

PERIODICALS

JOURNAL OF RESEARCH reports National Bureau of Standards research and development in physics, mathematics, and chemistry. Comprehensive scientific papers give complete details of the work, including laboratory data, experimental procedures, and theoretical and mathematical analyses. Illustrated with photographs, drawings, and charts. Includes listings of other NBS papers as issued.

Published in two sections, available separately:

• Physics and Chemistry (Section A)

Papers of interest primarily to scientists working in these fields. This section covers a broad range of physical and chemical research, with major emphasis on standards of physical measurement, fundamental constants, and properties of matter. Issued six times a year. Annual subscription: Domestic, \$17.00; Foreign, \$21.25.

• Mathematical Sciences (Section B)

Studies and compilations designed mainly for the mathematician and theoretical physicist. Topics in mathematical statistics, theory of experiment design, numerical analysis, theoretical physics and chemistry, logical design and programming of computers and computer systems. Short numerical tables. Issued quarterly. Annual subscription: Domestic, \$9.00; Foreign, \$11.25.

TECHNICAL NEWS BULLETIN

The best single source of information concerning the Bureau's measurement, research, developmental, cooperative, and publication activities, this monthly publication is designed for the industry-oriented individual whose daily work involves intimate contact with science and technology—for engineers, chemists, physicists, research managers, product-development managers, and company executives. Includes listing of all NBS papers as issued. Annual subscription: Domestic, \$6.50; Foreign, \$8.25.

NONPERIODICALS

Applied Mathematics Series. Mathematical tables, manuals, and studies.

Building Science Series. Research results, test methods, and performance criteria of building materials, components, systems, and structures.

Handbooks. Recommended codes of engineering and industrial practice (including safety codes) developed in cooperation with interested industries, professional organizations, and regulatory bodies.

Special Publications. Proceedings of NBS conferences, bibliographies, annual reports, wall charts, pamphlets, etc.

Monographs. Major contributions to the technical literature on various subjects related to the Bureau's scientific and technical activities.

National Standard Reference Data Series. NSRDS provides quantitative data on the physical and chemical properties of materials, compiled from the world's literature and critically evaluated.

Product Standards. Provide requirements for sizes, types, quality, and methods for testing various industrial products. These standards are developed cooperatively with interested Government and industry groups and provide the basis for common understanding of product characteristics for both buyers and sellers. Their use is voluntary.

Technical Notes. This series consists of communications and reports (covering both other-agency and NBS-sponsored work) of limited or transitory interest.

Federal Information Processing Standards Publications. This series is the official publication within the Federal Government for information on standards adopted and promulgated under the Public Law 89-306, and Bureau of the Budget Circular A-86 entitled, Standardization of Data Elements and Codes in Data Systems.

Consumer Information Series. Practical information, based on NBS research and experience, covering areas of interest to the consumer. Easily understandable language and illustrations provide useful background knowledge for shopping in today's technological marketplace.

BIBLIOGRAPHIC SUBSCRIPTION SERVICES

The following current-awareness and literature-survey bibliographies are issued periodically by the Bureau:

Cryogenic Data Center Current Awareness Service (Publications and Reports of Interest in Cryogenics). A literature survey issued weekly. Annual subscription: Domestic, \$20.00; foreign, \$25.00.

Liquefied Natural Gas. A literature survey issued quarterly. Annual subscription: \$20.00.

Superconducting Devices and Materials. A literature survey issued quarterly. Annual subscription: \$20.00. Send subscription orders and remittances for the preceding bibliographic services to the U.S. Department of Commerce, National Technical Information Service, Springfield, Va. 22151.

Electromagnetic Metrology Current Awareness Service (Abstracts of Selected Articles on Measurement Techniques and Standards of Electromagnetic Quantities from D-C to Millimeter-Wave Frequencies). Issued monthly. Annual subscription: \$100.00 (Special rates for multi-subscriptions). Send subscription order and remittance to the Electromagnetic Metrology Information Center, Electromagnetics Division, National Bureau of Standards, Boulder, Colo. 80302.

Order NBS publications (except Bibliographic Subscription Services) from: Superintendent of Documents, Government Printing Office, Wash-

U.S. DEPARTMENT OF COMMERCE
National Bureau of Standards
Washington, D.C. 20234

—
OFFICIAL BUSINESS

Penalty for Private Use, \$300

POSTAGE AND FEES PAID
U.S. DEPARTMENT OF COMMERCE
215

