

Handbook 133

NIST

NIST PUBLICATIONS

National Institute of Standards and Technology

Technology Administration U.S. Department of Commerce

REFERENCE



Checking the Net Contents of Packaged Goods



.U51 no.133 2002

Fourth Edition

NIST Handbook 133 January 2002 he National Institute of Standards and Technology was established in 1988 by Congress to "assist industry in the development of technology ... needed to improve product quality, to modernize manufacturing processes, to ensure product reliability . . . and to facilitate rapid commercialization . . . of products based on new scientific discoveries."

NIST, originally founded as the National Bureau of Standards in 1901, works to strengthen U.S. industry's competitiveness; advance science and engineering; and improve public health, safety, and the environment. One of the agency's basic functions is to develop, maintain, and retain custody of the national standards of measurement, and provide the means and methods for comparing standards used in science, engineering, manufacturing, commerce, industry, and education with the standards adopted or recognized by the Federal Government.

As an agency of the U.S. Commerce Department's Technology Administration, NIST conducts basic and applied research in the physical sciences and engineering, and develops measurement techniques, test methods, standards, and related services. The Institute does generic and precompetitive work on new and advanced technologies. NIST's research facilities are located at Gaithersburg, MD 20899, and at Boulder, CO 80303. Major technical operating units and their principal activities are listed below. For more information contact the Publications and Program Inquiries Desk, 301-975-3058.

Office of the Director

- · National Quality Program
- · International and Academic Affairs

Technology Services

- Standards Services
- Technology Partnerships
- Measurement Services
- Information Services

Advanced Technology Program

- · Economic Assessment
- · Information Technology and Applications
- · Chemistry and Life Sciences
- Materials and Manufacturing Technology
- · Electronics and Photonics Technology

Manufacturing Extension Partnership Program

- Regional Programs
- · National Programs
- Program Development

Electronics and Electrical Engineering Laboratory

- Microelectronics
- · Law Enforcement Standards
- Electricity
- Semiconductor Electronics
- · Radio-Frequency Technology1
- Electromagnetic Technology¹
- Optoelectronics¹

Materials Science and Engineering Laboratory

- Intelligent Processing of Materials
- Ceramics
- Materials Reliability¹
- Polymers
- Metallurgy
- · NIST Center for Neutron Research

Chemical Science and Technology Laboratory

- · Biotechnology
- Physical and Chemical Properties²
- Analytical Chemistry
- · Process Measurements
- · Surface and Microanalysis Science

Physics Laboratory

- Electron and Optical Physics
- · Atomic Physics
- Optical Technology
- Ionizing Radiation
- Time and Frequency¹
- Quantum Physics¹

Manufacturing Engineering Laboratory

- Precision Engineering
- · Manufacturing Metrology
- Intelligent Systems
- · Fabrication Technology
- · Manufacturing Systems Integration

Building and Fire Research Laboratory

- Applied Economics
- Structures
- · Building Materials
- Building Environment
- Fire Safety Engineering
- Fire Science

Information Technology Laboratory

- Mathematical and Computational Sciences²
- · Advanced Network Technologies
- Computer Security
- · Information Access
- Convergent Information Systems
- Information Services and Computing
- Software Diagnostics and Conformance Testing
- · Statistical Engineering

¹At Boulder, CO 80303.

²Some elements at Boulder, CO.



NIST Handbook 133

Checking the Net Contents of Packaged Goods

Fourth Edition

(Supersedes NIST Handbook 133, Third Edition, September 1988; Supplement 1, 1990; Supplement 2, 1991; Supplement 3, 1992; and Supplement 4, 1994)

Editors:

Thomas Coleman Terry L. Grimes

Henry V. Oppermann, Office Director NIST Office of Weights & Measures Gaithersburg, MD 20899-2600 U.S. Department of Commerce
Donald L. Evans, Secretary
Technology Administration
Phillip J. Bond, Under
Secretary for Technology
National Institute of Standards
and Technology
Arden L. Bement, Jr., Director

NIST Handbook 133

Certain commercial entities, equipment, or materials may be identified in this document in order to describe an experimental procedure or concept adequately. Such identification is not intended to imply recommendation or endorsement by the National Institute of Standards and Technology, nor is it intended to imply that the entities, materials, or equipment are necessarily the best available for the purpose.

National Institute of Standards and Technology Handbook 133, 2002 Edition Natl. Inst. Stand. Technol. Handb. 133, 2002 Ed., 106 pages (Jan. 2002) CODEN: NIHAE2

U.S. GOVERNMENT PRINTING OFFICE WASHINGTON: 2002


Foreword

This handbook has been prepared as a procedural guide for compliance testing of net content statements on packaged goods. Compliance testing of packaged goods is the determination of the conformance of the results of the packaging, distribution, and retailing process (the packages) with specific legal requirements for net content declarations. This handbook has been primarily developed for use by government officials, it also should be useful to commercial and industrial establishments in the areas of packaging, distribution, and sale of commodities.

Table of Contents for the 4th Edition of Handbook 133

Ch	apter 1 – General Information	2
1.1	Scope	2
1.2	Package Requirements	
1.3	Sampling Plan	
1.4	Other Regulatory Agencies Responsible for Package Regulations and	7
	Applicable Requirements	5
1.5	Assistance in Testing Operations	
1.6	Health and Safety	
1.7	Good Measurement Practices	
Cha	apter 2 – Basic Test Procedure – Gravimetric Testing	7
2.1	Gravimetric TestProcedure for Checking the Net Contents of Packaged Goods	7
2.2	Measurement Standards and Test Equipment	
2.3	Basic Test Procedure	
2.4	Borax	
2.5	The Determination of Drained Weight	
2.6	Drained Weight for Glazed or Frozen Foods	
Cha	npter 3 – Test Procedures – For Packages Labeled by Volume	24
3.1	Scope	24
3.2	Gravimetric Test Procedure for Liquids	
3.3	Volumetric Test Procedures for Liquids	
3.4	Other Volumetric Test Procedures	
3.5	Mayonnaise and Salad Dressing.	
3.6	Goods Labeled by Capacity – Volumetric Test Procedure	
3.7	Pressed and Blown Glass Tumblers and Stemware	
3.8	Volumetric Test Procedures for Paint, Varnish, and Lacquers – Non Aerosol	
3.9	Testing Viscous Materials – Such as Caulking Compounds and Pastes	
	Peat Moss	
	Mulch and Soils Labeled by Volume	
	Ice Cream Novelties	
	Fresh Oysters Labeled by Volume	
	Determining the Net Contents of Compressed Gas in Cylinders	
	Volumetric Test Procedures for Packaged Firewood with a	-+ /
5.15	Labeled Volume of 113 L (4 Cu Ft) or less	50
3 16	Boxed Firewood	
	Crosshatched Firewood	
	Bundles and Bags of Firewood	
5.10	Dundles and Dags of Fire wood	<i>J</i> 1
Cha	apter 4 – Test Procedures - Packages Labeled by Count, Linear	
	Measure, Area, Thickness, and Combinations of Quantities	53
4.1	Scope	
4.2	Packages Labeled by Count	
4.3	Packages Labeled with 50 Items or Less	
4.4	Packages Labeled by Count of More than 50 Items	54
4.5	Paper Plates and Sanitary Paper Products	
4.6	Special Test Requirements for Packages Labeled by Linear or	
	Square Measure (Area)	58

4.7	Polyethylene Sheeting	59
	Packages Labeled by Linear or Square (Area) Measure	
4.9	Bailer Twine – Test Procedure for Length	64
4.10	Procedure for Checking the Area Measurement of Chamois	65
App	endix A	A-
App	endix B	B-1
App	endix C	C-1
App	endix D	D-1
App	endix E	E-1



Chapter 1. General Information

1.1 Scope

Routine verification of the net contents of packages is an important part of any weights and measures program to facilitate value comparison and fair competition. Consumers have the right to expect packages to bear accurate net content information. Those manufacturers whose products are sold in such packages have the right to expect that their competitors will be required to adhere to the same standards.

The procedures in this handbook are recommended for use to verify the net quantity of contents of packages kept, offered, or exposed for sale, or sold by weight, measure (including volume, and dimensions) or count at any location (e.g., at the point-of-pack, in storage warehouses, retail stores, and wholesale outlets).

When and where to use these procedures?

An effective program will typically include testing at each of the following levels.

Point of Pack

Testing packages at the "point of pack" has an immediate impact on the packaging process. Usually, a large number of packages of a single product are available for testing at one place. This allows the inspector to verify that the packer is following current good packaging practices. Inspection at the point of pack also provides the opportunity to educate the packer about the legal requirements that products must meet and may permit resolution of any net content issues or other problems that arise during the testing. Point of pack testing is not always possible because packing locations can be in other States or countries. Work with other State, county, and city jurisdictions to encourage point of pack inspection on products manufactured in their geographic jurisdictions. Point of pack inspections cannot entirely replace testing at wholesale or retail outlets, because this type of inspection does not include imported products or the possible effects of product distribution and moisture loss at retail. At the point of pack, only examine the manufacturing process. Therefore an effective testing program will also test at wholesale and retail outlets.

Wholesale

Testing packages at a distribution warehouse is an alternative to testing at the production point with respect to being able to test large quantities and a variety of products. Wholesale testing is a very good way to monitor products imported from other countries and to follow up on products suspected of being underfilled based on consumer complaints or findings made during other inspections, including those done at retail outlets.

Retail

Testing packages at retail outlets evaluates the soundness of the manufacturing, distributing, and retailing processes of the widest variety of goods at a single location. It is an easily accessible, practical means for State, county and city jurisdictions to monitor packaging procedures and to detect present or potential problems. Generally, retail package testing is not conducive to checking large quantities of individual products of any single production lot. Therefore, at the very least, follow-up inspections of a particular brand or lot code number at a number of retail and wholesale outlets, and ultimately at the point of pack, are extremely important aspects in any package-checking scheme. After the evaluation of an inspection lot is reached, the jurisdiction should consider what, if any, further investigation or follow-up is warranted. At the point of sale a large number of processes impinge on the quality or quantity of the product. Therefore, there are many possible reasons for an inspection lot being out of compliance. A shortage in weight or measure may result from mishandling the product in the store, or from the retailer's failure to rotate stock. Shortages may also be caused through mishandling by a distributor, or from failure of some part of the packaging process. Shortages

may also be caused by moisture loss (desiccation) if the product is packaged in permeable media. Therefore, being able to determine the cause of an error in order to correct defects is more difficult when retail testing is used.

What products can be tested?

Any commodity sold by weight, measure, or count may be tested. The product to be tested may be chosen in several ways. The decision may be based on different factors, such as (1) marketplace surveys (e.g., jurisdiction-wide surveys of all soft drinks or breads), (2) surveys based on sales volume, or (3) audit testing (see Section 1.3) to cover as large a product variety as possible at food, farm, drug, hardware stores, or specialty outlets, discount and department stores. Follow-up of possible problems detected in audit testing or in review of past performance tends to concentrate inspection resources on particular commodity types, brand names, retail or wholesale locations, or even particular neighborhoods. The expected benefits for the public must be balanced against the cost of testing. Expensive products should be tested because of their cost per unit. However, inexpensive items should also be tested because the overall cost to individual purchasers may be considerable over an extended period. Store packaged items, which are usually perishable and not subject to other official monitoring, should be routinely tested because they are offered for sale where they are packed. Products on sale and special products produced for local consumption should not be overlooked because these items sell quickly in large amounts.

Regardless of where the test occurs, remember that it is the inspector's presence in the marketplace through routine unannounced testing that ensures equity and fair competition in the manufacturing and distribution process. Finally, always follow up on testing to ensure that the problems are corrected; otherwise, the initial testing may be ineffective.

1.2 Package Requirements

The net quantity of content statement must be "accurate," but reasonable variations are permitted. Variations in package contents may be a result of deviations in filling. The limits for acceptable variation are based on current good manufacturing practices in the weighing, measuring, and packaging process. The first requirement is that accuracy is applied to the average net contents of the packages in the lot. The second requirement is applied to negative errors in individual packages. These requirements apply simultaneously to the inspection of all lots of packages except as specified in "Exceptions to the Average and Individual Package Requirements" in this section.

Inspection Lot

An "inspection lot" (called a "lot" in this handbook) is defined as a collection of identically labeled (except for quantity or identity in the case of random packages) packages available for inspection at one time. The collection of packages will pass or fail as a whole based on the results of tests on a sample drawn from this collection. This handbook describes procedures to determine if the packages in an "inspection lot" contain the declared net quantity of contents and if the individual packages variations are within acceptable limits.

Average Requirement

In general, the average net quantity of contents of packages in a lot must at least equal the net quantity of contents declared on the label. Plus or minus variations from the declared net weight, measure, or count are permitted when they are caused by unavoidable variations in weighing, measuring, or counting the contents of individual packages that occur in current good manufacturing practice. Such variations must not be permitted to the extent that the average of the quantities in the packages of a particular commodity or a lot of the commodity that is kept, offered, or exposed for sale, or sold, is below the stated quantity. (See Section 3.7 Pressed and Blown Glass Tumblers and Stemware and Section 4.3 Packages Labeled by Count of 50 Items or Less for exceptions to this requirement).

Individual Package Requirement

The variation of individual package contents from the labeled quantity must not be "unreasonably large." In this handbook, packages that are under filled by more than the Maximum Allowable Variation specified for the package are considered unreasonable errors. Unreasonable shortages are not generally permitted, even though overages in other packages in the same lot, shipment or delivery compensate for such shortage. This handbook does not specify limits of overfilling, which is usually controlled by the packer.

Maximum Allowable Variation

The limit of "reasonable variation" for an individual package is called a "Maximum Allowable Variation" (MAV). An MAV is a deviation from the labeled weight, measure, or count of an individual package beyond which the deficiency is considered to be unreasonable. Each sampling plan limits the number of negative package errors permitted to be greater than the MAV.

Deviations Caused by Moisture Loss or Gain

Deviations from the net quantity of contents caused by the loss or gain of moisture from the package are permitted when they are caused by ordinary and customary exposure to conditions that normally occur in good distribution practice and that unavoidably result in change of weight or measure. According to regulations adopted by the U.S. Environmental Protection Agency, no moisture loss is recognized on pesticides. (See Code of Federal Regulations 40 CFR 156.10.)

Why allow for moisture loss or gain?

Some packaged products may lose or gain moisture and, therefore, lose or gain weight or volume after packaging. The amount of lost moisture depends upon the nature of the product, the packaging material, the length of time it is in distribution, environmental conditions, and other factors. Moisture loss may occur even when manufacturers follow good distribution practices. Loss of weight "due to exposure" may include solvent evaporation, not just loss of water. For loss or gain of moisture, apply the moisture allowances to the maximum allowable variations permitted for individual packages and to the average net quantity of contents before determining the conformance of a lot.

This handbook provides "moisture allowances" for some meat and poultry products, flour, and dry pet food (see "Moisture Allowances" in Chapter 2). These allowances are based on the premise that when the average net weight of a sample is found to be less than the labeled weight, but not by an amount that exceeds the allowable limit, either the lot is declared to be within the moisture allowance, or more information must be collected before deciding lot compliance or noncompliance.

Exceptions to the Average and Individual Package Requirements

There is an exemption from the average requirement for packages labeled by count of 50 or fewer items. The reason for this exemption is that the package count does not follow a "normal" distribution even if the package is designed to hold the maximum count indicated by the label declaration (e.g., egg cartons and packages of chewing gum). Another exception permits an "allowable difference" in the capacity of glass tumblers and stemware because mold capacity doesn't follow a normal distribution.

1.3 Sampling Plans

This handbook contains two sampling plans to use to inspect packages: Category A and Category B. Use the Category B Sampling Plans to test meat and poultry products at point-of-pack locations that are subject to U. S. Department of Agriculture Food Safety and Inspection Service (FSIS) requirements. When testing all other packages, use the Category A Sampling Plan.

Why is sampling used to test packages?

Inspections by weights and measures officials must provide the public with the greatest benefit at the lowest possible cost. Sampling reduces the time to inspect a lot of packages, so a greater number of items can be inspected. Net content inspection, using sampling plans for marketplace surveillance, protects consumers who cannot verify the net quantity of contents. This ensures fair trade practices and maintains a competitive marketplace. It also encourages manufacturers, distributors, and retailers to follow good manufacturing and distribution practices.

Why is the test acceptance criteria statistically corrected, and what are the confidence levels of the sampling plans?

Testing a "sample" of packages from a lot instead of every package is efficient, but the test results have a "sampling variability" that must be corrected before determining if the lot passes or fails. The Category A sampling plans give acceptable lots a 97 percent or better probability of passing. Where an "acceptable" lot is defined as one in which the "average" net quantity of contents of the packages equals or exceeds the labeled quantity. The Category B sampling plans give acceptable lots at least a 50 percent probability of passing. The sampling plans used in this handbook are statistically valid. That means the test acceptance criteria are statistically adjusted, so they are both valid and legally defensible. This handbook does not discuss the statistical basis, risk factors, or provide the operating characteristic curves for the sampling plans. For information on these subjects, see explanations on "acceptance sampling" in statistical reference books.

Why random samples?

A randomly selected sample is necessary to ensure statistical validity and reliable data. This is accomplished by using random numbers to determine which packages are chosen for inspection. Improper collection of sample packages can lead to bias and unreliable results.

May audit tests and other shortcuts be used to identify potentially violative lots?

Shortcuts may be used to speed the process of detecting possible net content violations. These audit procedures may include the following: using smaller sample sizes, spot checks using tare lists provided by manufacturers, selecting samples without collecting a random sample. These and other shortcuts allow spot checking of more products than is possible with the more structured techniques, but do not take the place of Category A or B testing.

Can audit tests and other shortcuts be used to take enforcement action?

No. Do not take enforcement action using audit test results.

If after an audit test there is suspicion that a lot of packages is not in compliance, use the appropriate Category A or Category B sampling plan to determine if the lot complies with the package requirements.

1.4 Other Regulatory Agencies Responsible for Package Regulations and Applicable Requirements

In the United States, several Federal agencies issue regulations regarding package labeling and net contents. The U.S. Department of Agriculture regulates meat and poultry. The Food and Drug Administration regulates food, drugs, and cosmetic products, and medical devices under the Food, Drug, and Cosmetic Act and the Fair Packaging and Labeling Act (FPLA). The Federal Trade Commission regulates most non-food consumer packaged products as part of the agency's responsibility under the FPLA. The Environmental Protection Agency regulates pesticides. The Bureau of Alcohol, Tobacco, and Firearms in the U.S. Department of the Treasury promulgates regulations for packaged tobacco and alcoholic beverages as part of its responsibility under the Federal Alcohol Administration Act.

Packaged goods produced for distribution and sale also come under the jurisdiction of State and local weights and measures agencies that adopt their own legal requirements for packaged goods. Federal statutes set requirements that pre-empt State and local regulations that are or may be less stringent or not identical to Federal regulation depending on the Federal law that authorizes the Federal regulation. The application of Handbook 133 procedures occurs in the context of the concurrent jurisdiction among Federal, State, and local authorities. Therefore, all agencies using this handbook should keep abreast of the revisions to Federal agency regulations that may contain sampling or testing information not in the regulations at the time of publication of this handbook. See Table 1-1 in Appendix A for information on the responsible agencies for package regulations and the requirements of this handbook that must be used when testing products concurrently subject to pre-emptive federal regulations.

1.5 Assistance in Testing Operations

If the storage, display, or location of any lot of packages requires special equipment or an abnormal amount of labor for inspection, the owner or the operator of the business must supply the equipment and/or labor as required by the weights and measures official.

1.6 Health and Safety

This handbook cannot address all of the health and safety issues associated with its use. The inspector is responsible for determining the appropriate safety and health practices and procedures before starting an inspection (e.g., contact the establishment's health and safety official). Comply with all handling, health, and safety warnings on package labels and those contained in any associated material safety data sheets. The inspector must also comply with Federal, State, or local health and safety laws or other appropriate requirements in effect at the time and location of the inspection. Contact your supervisor to obtain information regarding your agencies safety and health policies and to obtain appropriate safety equipment.

1.7 Good Measurement Practices

The procedures in this handbook are designed to be technically sound and represent good measurement practices. To assist in documenting tests, we have included "model" inspection report forms designed to record the information.

Traceability Requirements for Measurement Standards and Test Equipment

Each test procedure presented in this handbook includes a list of the equipment needed to perform the inspection. The scales and other measurement standards used (e.g., balances, mass standards, volumetric, and linear measures) to conduct any test must be traceable to the National Institute of Standards and Technology (NIST). Use these standards in the manner in which they were designed and calibrated for use.

Certification Requirements for Standards and Test Equipment

All measurement standards and test equipment identified in this handbook or associated with the test procedures must be calibrated or standardized before initial use. This must be done according to the instructions found in NIST Handbook 145, "Handbook for the Quality Assurance of Metrological Measurements," or other recognized procedures (e.g., those adopted for use by a State weights and measures laboratory). After initial certification, the standards must be routinely recertified according to your agency's measurement assurance policies.

Chapter 2. Basic Test Procedure – Gravimetric Testing

2.1 Gravimetric Test Procedure for Checking the Net Contents of Packaged Goods

The gravimetric test method uses weight measurement to determine the net quantity of contents of packaged goods. This handbook includes general test methods to determine the net quantity of contents of packages labeled in terms of weight and special test methods for packages labeled in terms of fluid measure or count. Gravimetric testing is the preferred method of testing most products because it reduces destructive testing while maximizing inspection resources.

2.2 Measurement Standards and Test Equipment

What type of scale is required to perform the gravimetric test method?

Use a scale (for this handbook the term scale includes balances) that has at least 100 scale divisions. It must have a load-receiving element of sufficient size and capacity to hold the packages during weighing. It also requires a scale division no larger than 1/6 of the Maximum Allowable Variation (MAV) for the package size being weighed. The MAV/6 requirement is crucial to ensure that the scale has adequate resolution to determine the net contents of the packages. Subsequent references to product test criteria agreeing within one scale division are based on scale divisions that are equal to or only slightly smaller than the MAV/6.

Example: The MAV for packages labeled 113 g (0.25 lb) is 7 g (0.016 lb) (see Table 2-5). MAV/6 is 1.16 g (0.002 lb). In this example, a 1 g (0.002 lb) scale division would be the largest unit of measure appropriate for weighing these packages.

How often should I verify the accuracy of a scale?

Verify the accuracy of a scale before each initial daily use, each use at a new location, or when there is any indication of abnormal equipment performance (e.g., erratic indications). Recheck the scale accuracy if it is found that the lot does not pass, so there can be confidence that the test equipment is not at fault.

Which accuracy requirements apply?

Scales used to check packages must meet the acceptance tolerances specified for their accuracy class in the current edition of NIST Handbook 44, "Specifications, Tolerances, and Other Technical Requirements for Weighing and Measuring Devices" (NIST HB 44). The tolerances for Class II and Class III digital scales are presented in Section 2.20. Scales, in NIST HB 44.

Note: If the package checking scale is not marked with a "class" designation, use Table 1-1 to determine the applicable tolerance.

What considerations affect measurement accuracy?

Always use good weighing and measuring practices. For example, be sure to use weighing and measuring equipment according to the manufacturer's instructions and make sure the environment is suitable. Place scales and other measuring equipment (e.g., flasks and volumetric measures) on a rigid support and maintain them in a level condition if being level is a requirement to ensure accuracy.

In testing, which tolerances apply to the scale?

Do not use a scale if it has an error that exceeds the specified tolerance in any of the performance tests described in the following section.

1. Determine the total number of divisions (i.e., a division is the minimum increment or graduation indicated by the scale) of the scale by dividing the scale's capacity by the minimum division.

Example: A scale with a capacity of 5,000 g and a minimum division of 0.1 g has 50,000 divisions.

2. From Table 1-1, determine the class of the scale using the minimum scale division and the total number of scale divisions.

Example: On a scale with a minimum division of 0.1 g and 50,000 total scale divisions the appropriate class of scale is "II."

Note: If a scale is used where the number of scale divisions is between 5,001 and 10,000 and the division size is 0.1 g or greater and is not marked with an accuracy Class II marking, Class III scale tolerances apply.

Table 1-1. Class of Scale			
Value of Scale Division ¹	Minimum and Total Number of Divisions	Class of Scale	
1 mg to 0.05 g	At least 100, but not more than 100,000	II	
0.1 g or more	More than 5,000, but not more than 100,000	II	
0.1 g to 2 g 0.0002 lb to 0.005 lb 0.005 oz to 0.125 oz	More than 100, but not more than 10,000	III	
5 g or more 0.01 lb or more 0.25 oz or more	More than 500, but not more than 10,000	III	

On some scales, manufacturers designated and marked the scale with a verification division (e) for testing purposes (e = 1 g and d = 0.1 g). For scales marked Class II, the verification division is larger than the minimum displayed division. The minimum displayed division must be differentiated from the verification scale division by an auxiliary reading means such as a vernier, rider, or at least significant digit that is differentiated by size, shape, or color. Where the verification division is less than or equal to the minimum division, use the verification division instead of the minimum division. Where scales are made for use with mass standards (e.g., an equal arm balance without graduations on the indicator) the smallest mass standard used for the measurement is the minimum division.

3. Determine the tolerance from Table 1-2 in divisions appropriate for the test load and class of scale.

Example: Determine the number of divisions for any test load by dividing the value of the mass standard being applied by the minimum division indicated by the scale. For example, if the scale has a minimum division of 0.1 g and a 1,500 g mass standard is applied, the test load is equal to 15,000 divisions (1500/0.1). On a class II scale with a test load between 10,000 and 20,000 divisions, Table 1-2 shows the tolerance is plus or minus one division.

Table 1-2. Acceptance Tolerances for Class of Scale based on Test Load in Divisions			
Test Loa	Test Load in Divisions		
Class II Scale	Class III Scale	Tolerance	
0 to 5,000	0 to 500	Plus or Minus 0.5 Division	
5,001 to 20,000	501 to 2,000	Plus or Minus 1 Division	
20,001 or more	2,001 to 4,000	Plus or Minus 1.5 Divisions	
Not Applicable	4,001 or more	Plus or Minus 2.5 Divisions	

Which performance tests should be conducted to ensure the accuracy of a scale?

Use the following procedures to verify the scale. The following procedures, based on those required in NIST Handbook 44, have been modified to reduce the amount of time required for testing scales in field situations.

Increasing-Load Test

Use certified mass standards to conduct an "increasing-load test" with all test loads centered on the load receiving element. Start the test with the device on zero and progress with increasing test loads to a "maximum test load" of at least 10 percent more than the gross weight of the packages to be tested. Use at least three different test loads of approximately equal value to test the device up to the "maximum test load." Verify the accuracy of the device at each test load. Include the package tare weight as one of the test points.

Decreasing-Load Test

For all types of scales, other than one with a beam indicator or equal-arm balance, conduct a "decreasing-load test" with all test loads centered on the load-receiving element. Use the same test loads used in the "increasing-load test" of this section, and start at the "maximum test load." Remove the test loads in the reverse order of the increasing-load test until all test loads are removed. Verify the accuracy of the scale at each test load.

Shift Test

Use a test load equal to one-half of the "maximum test load" used for the "increasing-load test." For bench scales (see Diagram 1) place the test load in the center of four separate quadrants, equidistant between the center and edge of the load-receiving element and determine the accuracy in each quadrant for equal-arm balances. For example, where the load-receiving element is a rectangular or circular shape, place the test load in the center of the area represented by the shaded boxes in the following diagrams.

Diagram 1. Bench Scales


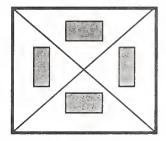


Diagram 2. Equal-Arm Balance

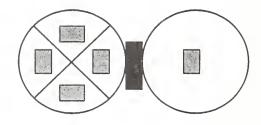

Return to Zero

Conduct the return to zero test whenever all the test weights from the scale are removed, check to ensure that it returns to a zero indication.

Which standards apply to the other test equipment?

Specifications, tolerances, and other technical requirements for the other measurement standards and test equipment cited in this handbook are specified in the following NIST publications. These publications may be obtained from the Office of Weights and Measures or the U.S. Government Printing Office.

- Mass Standards Use NIST Handbook 105-1, "Specifications and Tolerances for Reference Standards and Field Standard Weights and Measures-Field Standard Weights (NIST Class F)." (1990)
- Volumetric Flasks and Cylinders Use NIST Handbook 105-2, "Specifications and Tolerances for Reference Standards and Field Standard Weights and Measures-Field Standard Measuring Flasks." (1996)
- Stopwatches Use NIST Handbook 105-5, "Specifications and Tolerances for Reference Standards and Field Standard Weights and Measures-Field Standard Stopwatches." (1997)
- Thermometers Use NIST Handbook 105-6, "Specifications and Tolerances for Reference Standards and Field Standard Weights and Measures-Specifications and Tolerances for Thermometers." (1997)

2.3 Basic Test Procedure

The following steps apply when gravimetrically testing any type of packaged product except for Borax and glazed or frozen foods. If the tested products contain Borax, refer to Section 2.4 Borax. If glazed or frozen food is tested, refer to Section 2.6 Drained Weight for Glazed or Frozen Foods.

The Basic Test Procedure:

- 1. Identify and define the inspection lot.
- 2. Select the sampling plan.
- 3. Select the random sample.
- 4. Measure the net contents of the packages in the sample.
- 5. Evaluate compliance with the Maximum Allowable Variation (MAV) requirement.
- 6. Evaluate compliance with the average requirement.

Define the inspection lot

The official defines which packages are to be tested and the size of the inspection lot. The lot may be smaller or larger than the production lot defined by the packer. Only take action on the packages contained in the lot that has been defined.

Note: Normally, there will never be access to the entire "production lot" from a manufacturer. The "inspection lot" is selected from packages that are available for inspection/test at any location in the product distribution chain.

Example: An inspection lot should consist of all of the cans of a single brand of peach halves, labeled with a net quantity of 453 g (1 lb). When packages are tested in retail stores, it is not necessary to sort by lot code. If lot codes are mixed during retail testing, be sure to record the lot codes for all of the packages included in the sample so that the inspector and other interested parties can follow up on the information. For special

reasons, such as a large number of packages or the prior history of problems with the product or store, the inspector may choose to define a lot as only one type of packaged product (e.g., ground beef). Another reason to narrowly define the lot is if the results of an audit test indicate the possibility of a shortage in one particular lot code within a particular product.

What is the difference between standard and random weight packages?

Standard packages are those with identical net content declarations such as containers of soda in 2 L bottles and 2.27 kg

(5 lb) packages of flour. "Random packages" are those with differing or no fixed patterns of weight, such as packages of meat, poultry, fish, or cheese.

Sampling Plans

Where are sampling plans located for Category A inspections?

Use Table 2-1. Sampling Plans for Category A in Appendix A to conduct Category A inspections.

Where are sampling plans located for Category B inspections?

Use Table 2-2. Sampling Plans for Category B in Appendix A to conduct Category B inspections.

Basic Inspection Procedure and Record Keeping

How are the specific steps of the Basic Test Procedure and document the inspection identified?

Use an official inspection report to record the inspection information. Attach additional worksheets, test notes, and other information as needed. This handbook provides random and standard packaged products model inspection report forms in Appendix E. The references to box numbers in these instructions refer to the random and standard package reports in Appendix E. Modify the model reports and the box numbers to meet your agency's needs. Other formats that contain more or less information may be acceptable.

Note: Inspection reports should be legible and complete. Good record keeping practices typically include record retention for a specified period of time (e.g., 1 to 3 years).

- Record the product identity, packaging description, lot code, location of test, and other pertinent data.
- Record the labeled net quantity of contents in box 1. Record both metric and inch-pound declarations if they are provided on the package label.

Example: If the labeled weight is "453 g (1 lb)," record this in box 1.

When the declaration of net quantity on the package includes both the International System of Units (SI) (metric) and inch-pound units, the larger of the two declarations must be verified. The rounding rules in the Uniform Packaging and Labeling Regulation in NIST Handbook 130 permit packers to round declarations up or down based on their knowledge of their package filling targets and the accuracy of packaging equipment.

Determine the larger of the values by converting the SI declaration to inch-pound units, or vice versa, using conversion factors that are accurate to at least 6 places. Compare the values, and use the larger value in computing the nominal gross weight (see later steps). Indicate on the report which of the declarations are being verified when packages labeled with two units of measure are encountered.

Example: If the net weight declared on a package is 1 lb, the metric equivalent (accurate to six significant digits) is 453.592 g. Do not round down or truncate values in the calculations until the nominal gross weight is determined and recorded. If the package is also labeled 454 g, then the metric declaration is larger than the inch-pound declaration and should be used to verify the net contents of the package. The Basic Test Procedure does not prohibit the use of units of weight instead of dimensionless units when recording package errors, nor does it prohibit the use of net content computer programs to determine product compliance. Record the unit of measure in box 2. The unit of measure is the minimum division of the unit of measurement used to conduct the test. If a scale is used that reads to thousandths of a pound, the unit of measure is 0.001 lb even if the scale division is 0.002 lb or 0.005 lb.

Example: If the scale has a scale division of 0.5 g, the unit of measure is 0.1 g. If a weighed package that has an error of "-0.5 g," record the error as "-5" using "dimensionless units." If the scale indicates in increments of 0.002 lb, the unit of measure is 0.001 lb. If a weighed package has an error of "0.016," record the error as "16" using "dimensionless units." When using dimensionless units, multiply package errors by the unit of measure to obtain the package error in weight.

Enter the appropriate MAV value in box 3 for the type of package (weight, volume, etc.), the labeled net contents, and the unit of measure.

Where are Maximum Allowable Variations found?

Find the MAV values for packages labeled by weight, volume, count, and measure in the tables listed below in Appendix A.

•	packages labeled by weight	See Table 2-5
•	packages labeled by volume - liquid or dry	See Table 2-6
•	packages labeled by count	See Table 2-7
•	packages labeled by length, (width), or area	See Table 2-8
•	packages labeled with USDA seal of inspection – Meat and Poultry	See Table 2-9
•	textiles, polyethylene sheeting and film, mulch and soil labeled by volume, packaged firewood, and packages labeled by count with less than 50 items	See Table 2-10

How is the value of an MAV found?

Refer to the appropriate table of MAVs and locate the declared quantity that is on the package label in the column marked "Labeled Quantity." Read across the table to find the value in the column titled "Maximum Allowable Variation." Record this number in box 3. Determine the MAV in dimensionless units and record in box 4 on the Standard Package Report Form (a dimensionless unit is obtained by dividing the MAV recorded in box 3 by the unit of measure recorded in box 2). Refer to Appendix C, "The Glossary," for the definition of dimensionless units.

How is it determined how many MAVs are permitted in a sample?

To find out how many minus package errors are permitted to exceed the MAV, see Column 4 in either Table 2-1(Category A) or Table 2-2 (Category B). Record this number in box 8.

Random Sample Selection

How are the sample packages selected?

Randomly select a sample from the inspection lot. Random number tables (See Appendix B) or a calculator to generate the numbers may be used to collect the sample. If the packages for the sample are not randomly selected, the test results may not be statistically valid.

Note: If the inspector and the party that is ultimately responsible for the packing and declaration of net weight for the product agree to an alternative method of sample selection, document how the sample packages were selected as part of the inspection record.

How is the size of the "Lot" determined?

Count the number of packages comprising the inspection lot or estimate the size to within 5 percent and record the inspection lot size in box 5.

How is the sample size determined?

Refer to Table 2-1 or Table 2-2 to determine the sample size. In column 1, find the size of the inspection lot (the number recorded in box 5 of the report form). Read across from Column 1 to find the appropriate sample size in Column 2 and record this number in box 6 of the report form.

Tare Procedures

What types of tare are or may be used to determine the net weight of package goods?

This handbook defines three types of tare for the inspection of packaged goods. The tare weight may vary considerably from package to package as compared with the variability of the package net contents, even for packages in the same production lot. Although this is not common for most packaging, the basic test procedure in this handbook considers the variation for all tare materials.

Used Dry Tare

Used Dry Tare is defined as follows: Used tare material that has been air dried, or dried in some manner to simulate the unused tare weight. It includes all packaging materials that can be separated from the packaged product, either readily (e.g., by shaking) or by washing, scraping, ambient air drying, or other techniques involving more than "normal" household recovery procedures, but not including laboratory procedures like oven drying. Labels, wire closures, staples, prizes, decorations, and such are considered tare. Used Dry Tare is available regardless of where the packages are tested. The net content procedures described in this handbook reference Used Dry Tare.

Unused Dry Tare

If testing packages in retail store locations where they are packaged, and sold in small quantities to the ultimate consumers, the basic test procedure may be modified by using samples of the packaging material available in the store. Unused Dry Tare is defined as:

All unused packaging materials (including glue, labels, ties, etc.) that contain or enclose a product. It includes prizes, gifts, coupons, or decorations that are not part of the product.

Wet Tare

If the jurisdiction uses wet tare to determine net weight, follow the procedures described below that reference Used Dry Tare, except make no effort to dry the tare material. If Wet Tare is used to verify the

net weight of packages of fresh poultry, hot dogs, and franks that are subject to the USDA regulations, the inspector must allow for moisture loss. Wet Tare is defined as: Used tare material where no effort is made to dry the tare material. Free-flowing liquids are considered to be part of the tare weight.

How is a tare weight determined?

Except in the instance of applying Unused Dry Tare, select the packages for the initial tare sample from the sample packages. Mark the first two (three or five) packages in the order the random numbers were selected; these packages provide the initial tare sample. Determine the gross weight of each package and record it in block a, "Gross Wt," under the headings "Pkg. 1," "Pkg. 2," "Pkg. 3," etc. on the report form. Except for aerosol or other pressurized packages, open the sample packages, empty, clean, and dry them as appropriate for the packaging material.

Does the inspection of aerosol containers require special procedures?

Yes, aerosol containers are handled differently for two reasons. First, regulations under the Uniform Packaging and Labeling Regulation in NIST HB 130 require that packages designed "to deliver" the product under pressure, "must state the net quantity of the contents that will be expelled when the instructions for use as shown on the container are followed." This means that any product retained in aerosol containers after fill dispersion is included in the tare weight. Second, aerosol containers must not be opened because they are pressurized, hence for safety reasons should not be punctured or opened. When emptying aerosol containers to determine a tare weight, exhaust them in a well-ventilated area (e.g., exhaust hood or outdoors) at least 15 m (50 ft) from any source of open flame or spark.

To ensure that the container properly dispenses the product, read and follow any dispensing instructions on the package. If shaking during use is specified in the instructions, periodically shake (at least two or three times during expulsion of the product). If directions are not given, shake the container five times with a brisk wrist-twisting motion. If the container has a ball agitator, continue the shaking procedure for one minute after the ball has shaken loose.

How is the tare of vacuum-packed coffee determined?

The gross weight of a can of vacuum-packed coffee will be more after the seal is broken and air enters the can. In the procedure to determine the tare weight of the packaging material, correct the gross weight determined for unopened cans as follows. Use the initial tare sample packages and weigh and record the gross weight of the product-filled cans before and after breaking the vacuum seal. Compute the average gross weight difference (open weight minus sealed weight) and record this in box 13a of the report form. The nominal gross weight equals the average tare weight minus the average difference in gross weights plus the labeled weight (box 14): box 13 - box 13a + box 1.

How is it determined how many packages to select for the initial tare sample?

For the initial tare sample size, see Column 5 under initial tare sample size in Table 2-1, or Column 3 under initial tare sample size in Table 2-2. Record the initial tare sample size in box 7 on the report form.

Note: The initial tare sample size is considered to be the total tare sample size when the sample size is less than 12.

How is it determined the tare sample and the tare weight of the packaging material?

- 1. Except for Unused Dry Tare at the point of pack, first determine the tare weight for each package in the initial tare sample and record the value in row b, "Tare Wt." under the appropriate package number column.
- 2. For sample sizes of 12 or more, subtract the individual tare weights from the gross weights (block a,

minus block b, on the report form) to obtain the net weight for each package and record these values in block c, "Net Wt," on the report form.

Proceed as follows depending on the types of packages being tested:

- Standard Weight Packages: Determine and record the "range of net weights" (called R_c) for the initial tare sample in box 9 on the report form. [The range is the difference between the package net weights.]
- Random Weight Packages: Determine and record the "range of package errors" (called R_c) for the initial tare sample in box 9 on the report form. [The range is the difference between the package errors.]
- 3. Determine and record the "range of tare weights" (called R_i) in box 10.
- 4. Compute the ratio R_c/R_t by dividing the value in box 9 by the value in box 10. Record the resulting value in box 11. [R_c and R_t must both be in the same unit of measure or both in dimensionless units.]
- 5. Determine and record in box 12 the total number of packages to be opened for the tare determination from either Table 2-3 for a Category A test or Table 2-4 for a Category B test.
 - In the first column (titled Ratio of R_c/R_t) locate the range in which the computed R_c/R_t falls. Then, read across to the column headed with the appropriate sample size.
 - If the total number of packages to open equals the number already opened go to Step 6.
 - If the total number of packages to open is greater than the number of packages already opened, compute the number of additional packages to open for the tare determination and go to Step 6. Enter the total number of tare samples in box 12.
- 6. Determine the average tare weight using the tare weight values for all the packages opened and record the average tare weight in box 13.

When and where is Unused Dry Tare used, and how is it used to determine an average tare weight?

Determine the average tare weight using samples of Unused Dry Tare when testing meat, poultry, or any other products that are not subject to regulation of the Food and Drug Administration (FDA). Use Unused Dry Tare samples when conducting inspections at locations where the point-of-pack and sale are identical (e.g., store-packed products in a supermarket meat case). To determine Unused Dry Tare at the point of sale, randomly select two (2) samples of Unused Dry Tare, and weigh each separately. If there is no measurable variation in weight between the samples, proceed with the test using the weight of one of the samples. If the weight of the two (2) initial samples differ, randomly select three (3) additional tare samples and determine the average weight of all five (5) samples. Use this value as the average tare weight.

Determine Nominal Gross Weight and Package Errors for Tare Sample

What is a nominal gross weight?

A nominal gross weight is used to simplify the calculation of package errors. To compute the nominal gross weight, add the average tare weight (recorded in box 13) to the labeled weight (recorded in box 1). To obtain the package error, subtract a package's gross weight from the nominal gross weight. The nominal gross weight is represented by the formula:

Nominal gross weight = average tare + labeled weight

How are individual package errors determined for the tare sample packages?

Determine the errors of the packages opened for tare by subtracting the nominal gross weight recorded in box 14 from the individual package gross weights recorded for each package ("Pkg 1," "Pkg 2," etc.) in block a, "Gross Wt." The nominal gross weight must be used, rather than the actual net weight, for each package to determine the package error. This ensures that the same average tare weight is used to determine the error for every package in the sample, not just the unopened packages.

- For standard packages, record the package error in the appropriate plus or minus column on the report form for each package opened for tare.
- For random packages, determine the package error for the tare sample using a nominal gross weight for each package so that all of the package errors are determined with the same tare weight value. Record the package error on the Random Package Report Form in the appropriate plus or minus column under Package Errors.

Note: Converting the package error to dimensionless units allows the inspector to record the package errors as whole numbers disregarding decimal points and zeroes in front and unit of measure after the number.

Example: If weighing in 0.001 lb increments, the unit of measure is also 0.001 lb. If the package error for the first package opened for tare is ± 0.008 lb., instead of recording 0.008 lb. in the plus column, record the error as "8" in the plus column. If the second package error is ± 0.060 lb, record the package error as "60" in the plus column, and so on. (This section does not prohibit the use of units of weight instead of dimensionless units or computer programs.)

How are individual package errors determined for the other packages in the sample?

Compare the gross weight of each of the unopened sample packages with the nominal gross weight (box 14). Record the package errors in the "Package Errors" section of the report form using either units of weight (lb or g) or dimensionless units.

How is the total package error computed?

Add all the package errors for the packages in the sample. Be sure to subtract the minus package errors from the plus package errors and to record the total net error in box 15.

Evaluating Results

How is it determined if a sample passes or fails?

The following steps lead the inspector through the process to determine if a sample passes or fails. If the product is subject to moisture allowance, follow the procedures under "Moisture Allowances" in this chapter to correct the MAV.

How is it determined if packages exceed the Maximum Allowable Variation?

Compare each minus package error with the MAV recorded in box 3 or box 4 (if using dimensionless units). Circle the package errors that exceed the MAV. These are "unreasonable errors." Record the number of unreasonable minus errors found in the sample in box 16.

How is it determined if the negative package errors in the sample exceed the number of MAVs allowed for the sample?

Compare the number in box 16 with the number of unreasonable errors allowed (recorded in box 8.) If the number found exceeds the allowed number, the lot fails. Record in box 17 whether the number of unreasonable errors found is less or more than allowed.

Note: If the total error recorded in box 15 is a plus value and box 17 is "No", then the number of unreasonable errors is equal to or less than the number allowed (recorded in box 8) and the lot passes.

How is the average error of the sample and if it passes or fails the average requirement determined?

Determine the average error by dividing the total error recorded in box 15 by the sample size recorded in box 6. Record the average error in box 18 if using dimensionless units or in box 19 if using units of weight. Compute the average error in terms of weight (if working in dimensionless units up to this time) by multiplying the average error in dimensionless units by the unit of measure and record the value in box 19.

- 1. If the average error is positive, the inspection lot passes the average requirement.
- 2. If the average error is negative, the inspection lot fails under a Category B test. Record in box 20.
- 3. If the average error is a negative value when testing under the Sampling Plans for Category A, compute the Sample Error Limit (SEL) as follows:
 - Compute the Sample Standard Deviation and record it in box 21.
 - Obtain the Sample Correction Factor from Column 3 of Table 2-1 for Category A test. Record this value in box 22.
 - Compute the Sample Error Limit using the formula:

Sample Error Limit (box 23) = Sample Standard Deviation (box 21) x Sample Correction Factor (box 22)

- 4. Compliance Evaluation of the Average Error:
 - ➤ If the value of the Average Error (box 18) is smaller than the SEL (box 23), the inspection lot passes.
 - ➤ If the value of the Average Error (disregarding the sign) (box 18) is larger than the SEL (box 23) the inspection lot fails. However, if the product is subject to moisture loss, the lot does not necessarily fail. Follow the procedures under "Moisture Allowances" in this chapter.

Moisture Allowances

How is reasonable moisture loss allowed?

If the product tested is subject to moisture loss, provide for the moisture allowance by following the steps listed below.

Determine the value of the moisture allowance if the product is listed below.

What is the moisture allowance for flour and dry pet food?

The moisture allowance for flour and dry pet food is 3 percent of the labeled net weight.

Note: Dry pet food means all extruded dog and cat foods and baked treat products packaged in kraft paper bags and/or cardboard boxes with a moisture content of 13 percent or less at the time of pack.

What moisture allowance is used with Used Dry Tare when testing packages that bear a USDA Seal of Inspection?

There is no moisture allowance when inspecting meat and poultry from a USDA inspected plant when Used Dry Tare and a Category A sampling plan are used.

What moisture allowance is used with wet tare when testing packages bearing a USDA seal of inspection?

- Use the following guideline when testing meat and poultry from any USDA inspected plant using Wet Tare and a Category A sampling plan.
- For packages of fresh poultry that bear a USDA seal of inspection, the moisture allowance is 3 percent of the labeled net weight. For net weight determinations only, fresh poultry is defined as poultry above 3 °C (26 °F). This is a product that yields or gives when push with the thumb.
- For packages of franks or hotdogs that bear an USDA seal of inspection, the moisture allowance is 2.5 percent of the labeled net weight.
- For packages of bacon, fresh sausage, and luncheon meats that bear a USDA seal of inspection, there is no moisture allowance if there is no free-flowing liquid or absorbent materials in contact with the product and the package is cleaned of clinging material. Luncheon meats are any cooked sausage product, loaves, jellied products, cured products, and any sliced sandwich style meat. This does not include whole hams, briskets, roasts, turkeys, or chickens requiring further preparation to be made into ready-to-eat sliced product. When there is no free-flowing liquid inside the package and there are no absorbent materials in contact with the product, Wet Tare and Dried Used Tare are equivalent.

When there is free flowing liquid or absorbent packaging materials in contact with the product all free liquid is part of the wet tare.

Calculations

How is a moisture allowance computed to be applied to the average error?

To compute moisture allowance, multiply the labeled quantity by the decimal percent value of the allowance.

Example: Labeled net quantity of flour is 907 g (2 lb)

Moisture Allowance is 3 percent (0.03)

Moisture Allowance = 907 g (2 lb) x 0.03 = 27 g (0.06 lb) record this value in box 13a.

How is the Maximum Allowable Variation corrected for the moisture allowance?

• Adjust the MAV by adding the moisture allowance to the MAV.

Example: 907g (2 lb) package of flour: moisture allowance added to the MAV = 32 g (0.07 lb) (MAV for 907 g [2 lb] package) + 27 g (0.06 lb) moisture allowance = a corrected MAV of 59 g (0.13 lb)

• Correct MAV in dimensionless units by converting the moisture allowance to dimensionless units = 0.06 lb ÷ 0.001 lb = 60. Go to box 4 and add the moisture allowance in dimensionless units to the MAV in dimensionless units.

Example: MAV = 70 (MAV for 2 lb/unit of measure = 0.001 lb) + 60 (moisture allowance in dimensionless units) = 130. Minus package errors must exceed the MAV + gray area before they are declared "unreasonable errors."

• If the number of unreasonable errors exceeds the allowed number (recorded in box 8) the inspection lot fails.

How is the Average Error for the moisture allowance corrected?

If the minus average error (box 18) is larger (disregarding the sign) than the SEL (box 23) and moisture loss applies, compare the difference between box 18 and box 23 with the moisture allowance recorded in box 13a. (Make sure that all the values are in units of weight or in dimensionless units before making this comparison.) If box 13a is larger than the difference between box 18 and 23, then the lot is considered to be in the gray area.

Example: Box 13a for 2-lb flour is 60 (dimensionless units); box 18 is 2 (dimensionless units); box 23 is .550 (dimensionless units). The difference between box 18 and box 23 is 1.450 (dimensionless units). Since box 13a is 60 (dimensionless units), 13a is larger than the difference between box 18 and box 23, the lot is considered to be in the gray area and further investigation is necessary before ruling out moisture loss as the reason for shortweight.

2.4 Borax

How is it determined if the net weight labeled on packages of borax is accurate?

Use the following procedures to determine if packages of borax are labeled correctly. This procedure applies to packages of powdered or granular products consisting predominantly (more than 50 percent) of borax. Such commodities are labeled by weight, but borax can lose more than 23 percent of its weight due to moisture loss. However, it does not lose volume upon moisture loss, and this property makes possible a method of volume testing based on a density determination in the event that the net weight of the product does not meet the average or individual package requirements. This method may be used for audit testing to identify possible short-filling by weight at point of pack. Since the density of these commodities can vary at point of pack, further investigation is required to determine whether, such short filling has occurred.

Test Equipment

- Metal density cup with a capacity of 550.6 mL or (1 dry pint).
- Metal density funnel with slide-gate and stand.
- Scale or balance having a scale division not larger than 1 g or (0.002 lb).
- Rigid straightedge or ruler
- Pan suitable for holding overflow of density cup

Test Procedure

Follow Section 2.3 Basic Test Procedure in Chapter 2. Define the inspection lot. Use a Category A sampling plan in the inspection; select a random sample; then use the following test procedure to determine product compliance.

- 1. If the lot does not comply by weight with the sampling plan requirements (either the average or individual package requirements), select the lightest package and record the net weight of this package.
- 2. Determine the weight of the density cup.
- 3. Place the density cup in the pan and put the funnel on top of the density cup. Close the funnel slide-gate.
- 4. Pour sufficient commodity into the funnel so that the density cup can be filled to overflowing.
- 5. Quickly remove the slide-gate from the funnel, allowing the commodity to flow into the density cup.
- 6. Carefully, without agitating the density cup, remove the funnel and level off the commodity with the ruler or straight edge. Hold the ruler or straight edge at a right angle to the rim of the cup, and carefully draw it back across the top of the density cup to leave an even surface.
- 7. Weigh the filled density cup. Subtract the weight of the density cup from the gross weight of the commodity plus the density cup to obtain the net weight of commodity in the cup.

How is the volume determined?

- 1. Multiply the net weight (in pounds) as found for the package under test by 550.6.
- 2. Divide the answer just obtained by the weight of the commodity in the density cup (step 7). The result is the net volume of commodity in the package in mL.
- 3. Compare the net volume of the commodity in the package with the volume declared on the package. The volume declaration is not located on the principal display panel. The following example is how the declaration of volume should appear.

Volume 2530 cc per NIST Handbook 133

Note. (1mL=1 cc)

What action can be taken based on the results of the density test?

If the net volume of commodity in the lightest package equals or exceeds the declared volume on the package, treat the lot as being in compliance on the basis of volume and take no further action. If the net volume of borax in the lightest package is less than the declared volume on the package, further compliance testing will be necessary. Take further steps to determine if the lot was in compliance with net weight requirements at point of pack or was short-filled by weight. To determine this, perform a laboratory moisture loss analysis to ascertain the weight of the original borax product when it was fully hydrated; obtain additional data at the location of the packager; and/or investigate the problem with the packager of the commodity.

2.5 The Determination of Drained Weight

Since the weight per unit volume of a drained product is of the same order of magnitude as that of the packaging liquid which is drained off, an "average nominal gross weight" cannot be used in checking packages of this type. The entire sample must be opened. The procedure is based upon a test method accepted by the Food and Drug Administration.

A tare sample is not needed because all the packages in the sample will be opened and measured.

The weight of the container plus drained-away liquid is determined. This weight is then subtracted from the gross weight to determine the package error.

Equipment

- Scales and weights recommended in Section 2.2 are suitable for the determination of drained weight.
- Sieves
 - For drained weight of 1.36 kg or (3 lb) or less, one 20 cm or (8 in) No. 8 mesh U.S. Standard Series Sieve, receiving pan, and cover
 - For drained weight greater than 1.36 kg or (3 lb), one 30 cm or (12 in) sieve, with same specifications as above
- Stopwatch

Test Procedure

Follow the Basic Test Procedure in Section 2.3. Define the inspection lot. Use a Category A or a Category B sampling plan in the inspection (depending on the location of test); select a random sample; then use the following test procedure to determine lot compliance.

- 1. Fill out boxes 1 through 8 on the standard pack report form on page E-4. Select the random sample. Determine and record on a worksheet the weight of the receiving pan.
- 2. Determine and record on a worksheet the gross weight of each individual package comprising the sample.
- 3. Pour the contents of the first package into the dry sieve with the receiving pan beneath it, incline sieve to a 17° to 20° angle to facilitate drainage, and allow the liquid from the product to drain into receiving pan for 2 minutes [Do not shake or shift material on the sieve.] Remove sieve and product.
- 4. Weigh the receiving pan, liquid, wet container, and any other tare material. [Do not include sieve and product.] Record this weight as tare and receiving pan.
- 5. Subtract the weight of the receiving pan, determined in step 1, from the weight obtained in step 4 to obtain the package <u>tare weight</u> (which includes the weight of the liquid).
- 6. Subtract the tare weight, found in step 5, from the corresponding package gross weight determined in step 2 to obtain the drained weight of that package. Determine the package error (drained weight labeled drained weight).
- 7. Repeat steps 3 through 6 for the remaining packages in the sample, cleaning and drying the sieve and receiving pan between measurements of individual packages.
- 8. Transfer the individual package errors to the standard pack report form, page E-4.
- 9. To determine lot conformance, return to "Evaluating Results" Section 2.3, in Chapter 2.

2.6 Drained Weight for Glazed or Frozen Foods

How is the drained weight of frozen shrimp and crabmeat determined?

When determining the net weight of frozen shrimp and crabmeat, use the test equipment and procedure provided below. Immerse the product directly in water in a mesh basket or open container to thaw (e.g., it is not placed in a plastic bag). Direct immersion does not result in the product absorbing moisture because the freezing process causes the tissue to lose its ability to hold water. Maintain the water temperature between 23 °C to 29 °C (75 °F to 85 °F). This is accomplished by maintaining a constant flow of warm water into the container holding the product (e.g., place a bucket in a sink to catch the overflow, and feed warm water into the bottom of the bucket through a hose). After thawing, drain the product on a sieve for 2 minutes and then weigh it.

Equipment

- Partial immersion thermometer or equivalent with 1 °C (2 °F) graduations and a -35 °C to +50 °C (-30 °F to +120 °F) accurate to ±1 °C (±2 °F)
- Water source and hose with a 4 L to 15 L (1 gal to 4 gal) per minute flow rate
- Sink or other receptacle [i.e., 15 L (4 gal) bucket].
- A wire mesh basket or other container that is large enough to hold the contents of 1 package [e.g., 2.26 kg or (5 lb) box of shrimp] and has openings small enough to retain all pieces of the product (e.g., an expanded metal test tube basket lined with standard 16 mesh screen)
- Number 8 mesh, 20 cm (8 in) or 30 cm (12 in) sieve
- Stopwatch

Test Procedure

Follow the Basic Test Procedure in Section 2.3. Define the inspection lot. Use a Category A or a Category B sampling plan in the inspection (depending on the location of test); select a random sample; then use the following test procedure to determine lot compliance.

- 1. Place the unwrapped frozen shrimp or crabmeat in the wire mesh basket and immerse in a 15 L (4 gal) or larger container of fresh water at a temperature between 23 °C to 29 °C (75 °F to 85 °F). Submerge the basket so that the top of the basket extends above the water level.
- 2. Maintain a continuous flow of water into the bottom of the container to keep the temperature within the specified range.
- 3. As soon as the product thaws, determined by loss of rigidity, transfer all material to a sieve [20 cm (8 in) for packages less than 453 g (1 lb) or 30 cm (12 in) for packages weighing more than 453 g (1 lb)] and distribute it evenly over the sieve.
- 4. Without shifting the product, incline the sieve 30° from the horizontal position to facilitate drainage, and drain for 2 min.
- 5. At the end of the drain time, immediately transfer the product to a tared pan for weighing to determine the net weight.

How is the net weight of glazed raw seafood and fish determined?

For glazed raw seafood and fish, determine the net weight after removing the glaze using the following procedure. Use this method for any frozen glazed food product.

Equipment

Use the equipment listed in Section 2.6.

Test Procedures

Follow the Basic Test Procedure in Section 2.3. Define the inspection lot. Use a Category A sampling plan in the inspection; select a random sample; then use the following test procedure to determine lot compliance.

- 1. Fill out a report form and select the random sample. A tare sample is not needed.
- 2. Weigh sieve and receiving pan. Record this weight on a worksheet as "sieve weight."
- 3. Remove each package from low temperature storage; open it immediately and place the contents under a gentle spray of cold water. Carefully agitate the product to avoid breaking the product. Continue the spray until all ice glaze that is seen or felt is removed. In general, the product should remain rigid; however, the ice glaze on certain products, such as small to medium-sized shrimp, sometimes cannot be removed without defrosting the product. Nonetheless, remove the glaze because it is a substantial part of the gross package weight.
- 4. Transfer the product to the weighed sieve. Without shifting the product, incline the sieve to an angle of 17° to 20° to facilitate drainage and drain (into waste receptacle or sink) for exactly 2 min.
- 5. Place the product and sieve on the receiving pan and weigh. Record this weight on a worksheet as the "sieve + product weight."
- 6. The net weight of product is equal to the weight of the pan plus the sieve plus the product (recorded in step 5) minus the "sieve weight" (recorded in step 2). Record the product net weight on the worksheet. The package error is equal to the net weight of the product as measured minus the labeled weight. Record the package error on the worksheet and transfer it to the report form.
- 7. Repeat steps 3 through 6 for each package in the sample, cleaning and drying the sieve and the receiving pan between package measurements.

Evaluation of Results

Follow the procedures in "Evaluating Results" in Section 2.3 of Chapter 2, to determine lot conformance.

Chapter 3. Test Procedures – For Packages Labeled by Volume

3.1 Scope

What types of packaged goods can be tested using these procedures?

Use this procedure to determine the net contents of packaged goods labeled in fluid volume such as milk, water, beer, oil, paint, distilled spirits, soft-drinks, juices, liquid cleaning supplies, or liquid chemicals. This chapter also includes procedures for testing the capacities of containers such as paper cups, bowls, glass tumblers, and stemware.

What types of packages are not covered by these procedures?

These procedures do not cover berry baskets and rigid-dry measures that are covered by specific code requirements in NIST Handbook 44.

When can the gravimetric test procedure be used to verify the net quantity of contents of packages labeled by volume?

The gravimetric procedure may be used to verify the net quantity of contents of packages labeled in volume when the density (density means the weight of a specific volume of liquid determined at a reference temperature) of the product being tested does not vary excessively from one package to another.

What procedure is followed if the gravimetric test procedure cannot be used?

Test each package as described in Section 3.3, Volumetric Test Procedure for Liquids.

What considerations besides density affect measurement accuracy?

In addition to possible package-to-package variations in product density, the temperature of the liquid will affect the volume of product. The product will expand or contract based on a rise or fall in product temperature.

Example: The volume of a liquid cleaning product might be 5 L (1.32 gallons) at 20 $^{\circ}$ C (68 $^{\circ}$ F) and

5.12 L (1.35 gallons) at 25 °C (77 °F) which represents a 2.2 percent change in volume.

Note: This extreme example is for illustrative purposes, a 2.2 percent volume change will not occur in normal testing.

What reference temperature should be used to determine the volume of a liquid?

Use the reference temperature specified in **Table 3-1. Reference Temperatures for Liquids** to determine volume. When checking liquid products labeled by volume using the gravimetric procedure, maintain the packages used to determine product densities at reference temperatures. If testing the packages in a sample volumetrically, each package in the sample must be maintained at or corrected to the reference temperature when its volume is determined.

Note. When checking liquid products using a volumetric or gravimetric procedure, the temperature of the samples must be maintained at the reference temperature \pm 2 °C (\pm 5 °F).

	Table 3-1. Reference Temperatures for Liquids			
	If the Liquid Commodity is	Then, the reference temperature is		
1	Frozen food labeled by volume (e.g., fruit juice)	-18 °C (0 °F)		
2	Beer	3.9 °C (39.1 °F)		
3	Food that must be kept refrigerated (e.g., milk and other dairy products. Usually labeled "Keep Refrigerated")	4.4 ° C (40 °F)		
4	Distilled spirits or petroleum	15 °C (60 °F)		
5	Unrefrigerated products (e.g., includes liquids sold unchilled, such as soft-drinks and wine)	20 °C (68 °F)		

3.2 Gravimetric Test Procedure for Liquids

Equipment

• A scale that meets the requirements in Chapter 2, Section 2.2 Measurement Standards and Test Equipment.

Note: To verify that the scale has adequate resolution for use, it is first necessary to determine the density of the liquid; next verify that the scale division is no larger than MAV/6 for the package size under test. The smallest graduation on the scale must not exceed the weight value for MAV/6.

Example: Assume the inspector is using a scale with 1 g (0.002 lb) increments to test packages labeled 1 L (33.6 fl oz) that have an MAV of 30 mL (1 fl oz). Also, assume the inspector finds that the weight of 1 L of the liquid is 943 g (2.078 lb). This will result in an MAV/6 value in weight of $4.715 \, \mathrm{g}$ (0.010 lb):

$$30 \text{ mL/6} = 5 \text{ mL}$$
 (1 fl. oz/6 = 0.1666 fl oz)
 $943 \text{g/1000 mL} = 0.943 \text{ g/mL}$ (2.078 lb/33.6 fl oz = 0.0618 lb/fl oz)
 $5 \text{ mL} \times 0.943 \text{ g/mL} = 4.715 \text{ g}$ (0.1666 fl oz x 0.0618 lb/fl oz = 0.010 lb)

In this example, the 1 g (0.002 lb) scale division, is smaller than the MAV/6 value of 4.715 g (0.10 lb) so the scale is suitable for making a density determination.

- A partial immersion thermometer (or equivalent) with a range of -35 °C to +50 °C (-30 °F to 120 °F), at least 1 °C (1 °F) graduations, and with a tolerance of ± 1 °C (± 2 °F)
- Volumetric measures

Example: When checking packages labeled in SI units, flask sizes of 100 mL, 200 mL, 500 mL, 1 L, 2 L, 4 L, and 5 L and a 50 mL cylindrical graduate with 1 mL divisions may be used. When checking packages labeled in inch-pound units the use of measuring flasks and graduates with capacities of gill, half-pint, pint, quart, half-gallon, gallon, and a 2 fl oz cylindrical graduate, graduated to 1/2 fluid dram is recommended.

• Defoaming agents may be necessary for testing liquids such as beer and soft drinks that effervesce or are carbonated. Two such products are Hexanol or Octanol (Capryl Alcohol).

Note: The mention of trade or brand names does not imply that these products are endorsed or recommended by the Department of Commerce over similar products commercially available from other manufacturers.

- Bubble level at least 15 cm (6 in) in length
- Stopwatch

Test Procedure

- 1. Follow the Basic Test Procedure in Section 2.3. Define the inspection lot. Use a Category A sampling plan in the inspection. Select a random sample; then use the following procedure to determine lot compliance.
- 2. Bring the sample packages and their contents to the reference temperature as specified in **Table 3-1**. **Reference Temperatures for Liquids**. To determine if the liquid is at its reference temperature, immerse the thermometer in the liquid prior to starting the test. Verify the temperature again immediately after the flask and liquid is weighed. If the product requires mixing for uniformity, mix it before opening in accordance with any instructions specified on the package label. Shaking liquids, such as flavored milk, often entraps air that will affect volume measurements, so use caution when testing these products. Often, less air is entrapped if the package is gently rolled to mix the contents.
- 3. For milk, select a volumetric measure equal to the label declaration. For all other products, select a volumetric measure that is one size smaller than the label declaration. For example, if testing a 1L bottle of juice or a soft drink, select a 500 mL volumetric measure.

Note: When determining the density of milk, if the product from the first container does not fill the volumetric measure to the nominal capacity graduation, product may be added from another container as long as product integrity is maintained (i.e., brand, identity, lot code, and temperature).

- 4. Prepare a clean volumetric measure to use according to the following procedures:
 - Because flasks are ordinarily calibrated on a "to deliver" basis, they must be "wet down" before using. Immediately prior to use, fill the volumetric flask(s) or graduate with water. The water should be at the reference temperature of the product being tested. Fill the flask(s) with water to a point slightly below the top graduation on the neck. The flask should be emptied in 30 seconds (± 5 seconds). Tilt the flask gradually so the flask walls are splashed as little as possible as is is emptied. When the main flow stops, the flask should be nearly inverted. Hold the flask in this position for 10 seconds more and touch off the drop of water that adheres to the tip. If necessary, dry the outside of the flask. The flask or graduate is then ready to fill with liquid from a package. This is called the "wet down" condition.

Note: When using a volumetric measure that is calibrated "to contain", the measure must be dry prior to each measurement.

- If the liquid effervesces or foams when opened or poured (such as carbonated beverages) add two drops of a defoaming agent to the bottom of the volumetric measure before filling with the liquid. If working with a carbonated beverage, make all density determinations immediately upon placing the product into the standard. This reduces the chance of volume changes occurring from the loss of carbonization.
- Prior to making additional measurements of a liquid, use water to wash or rinse and prepare the volumetric measure. Between each two measurements of liquid from the sample packages, prepare the volumetric measure as described above, dry the outside of the flask, and drain the volumetric measure as described in earlier paragraphs of this section, as appropriate.
- 5. If the flask capacity is equal to the labeled volume, pour the liquid into the volumetric measure tilting the package to a nearly vertical position. If the flask capacity is smaller than the package's labeled

- volume, fill the flask to its nominal capacity graduation. If conducting a volumetric test, drain the container into the volumetric measure for 1 minute after the stream of liquid breaks into drops.
- 6. Position the volumetric measure on a level surface at eye level. For clear liquids, place a material of some dark color outside the flask immediately below the level of the meniscus. Read the volume from the lowest point of the meniscus. For opaque liquids, read volume from the center top rim of the liquid surface.
- 7. Use the gravimetric procedure to determine the volume if the limit specified for the difference in density is not exceeded.
- Select a volumetric measure equal to or one size smaller than the labeled volume (depending on the product) and prepare it as described in paragraph 4 of this section. Then determine and record its empty weight.
- Determine acceptability of the liquid density variation, using two packages selected for tare according to Chapter 2 as follows:
 - > Determine the gross weight of the first package.
 - Pour the liquid from the first package into a volumetric measure exactly to the nominal capacity marked on the neck of the measure.
 - Weigh the filled volumetric measure and subtract its empty weight to obtain the weight of the liquid. Determine density by dividing the weight of the liquid by the capacity of the volumetric measure.
 - Determine the weight of the liquid from a second package using the same procedure.
 - > If the difference between the densities of the two packages exceeds one division, use the volumetric procedure in Section 3.3. Volumetric Test Procedure for Liquids.

How is "nominal gross weight" determined?

Determine the "nominal gross weight" as follows:

- Determine the Average Used Dry Tare Weight of the sample according to provisions of Section 2.3.
- 2. Calculate the Average Product Density by adding the densities of the liquid from the two packages and dividing the sum by two.
- 3. Calculate the "nominal gross weight" using the following formula if the flask capacity is equal to the labeled volume:

Nominal Gross Weight = (Average Product Density (in weight units)) +(Average Used Dry Tare Weight)

Note: If the flask size is smaller than the labeled volume, the following formula is used:

Nominal Gross Weight = (Average Product Density x (Labeled Volume/ Flask Capacity)) + (Average Used Dry Tare Weight)

How are the errors in the sample determined?

1. Weigh the remaining packages in the sample.

Subtract the nominal gross weight from the gross weight of each package to obtain package errors in terms of weight. All sample packages are compared to the nominal gross weight.

2. To convert the average error or package error from weight to volume, use the following formula:

Package Error in Volume = Package Error in Weight/Average Product Density Per Volume Unit of Measure

Evaluation of Results

Follow the procedures in "Evaluating Results" in Chapter 2, Section 2.3, to determine lot conformance.

3.3 Volumetric Test Procedure for Liquids

How is the volume of liquid contained in a package determined volumetrically?

Follow steps 1 through 6 in Section 3.2. (Gravimetric Test Procedure for Liquids) for each package in the sample.

How are the errors in the sample determined?

Read the package errors directly from the graduations on the measure. The reference temperature must be maintained within ± 2 °C (± 5 °F) for the entire sample.

Evaluation of Results

Follow the procedures in "Evaluating Results" Chapter 2, Section 2.3, to determine lot conformance.

3.4 Other Volumetric Test Procedures

What other methods can be used to determine the net contents of packages labeled by volume?

Depending on how level the surface of the commodity is, use one of two headspace test procedures. Use the first headspace test procedure to determine volume where the liquid has a smooth surface (e.g., oils, syrups, and other viscous liquids). Use the second procedure to determine volume where the commodity does not have a smooth surface (e.g., mayonnaise and salad dressing).

Test Procedure

Before conducting any of the following volumetric test procedures, follow Section 2.3 Basic Test Procedure in Chapter 2. Define the inspection lot. Use a Category A sampling plan in the inspection; select a random sample; then use the following procedure to determine lot compliance.

Test Equipment

- Micrometer depth gage (ends of rods fully rounded) 0 mm to 225 mm (0 in to 9 in) or longer
- Level (at least 15 cm or (6 in) in length)
- Laboratory pipets and/or buret

- 500 mL Class A buret that conforms to ASTM E 287-94, "Standard Specification for Laboratory Glass Graduated Burets"
- Class A Pipets, calibrated "to deliver" that conform to ASTM E 969-95, "Standard Specification for Glass Volumetric Pipets"
- Volumetric measures
- Water
- Rubber bulb syringe
- Plastic disks that are 3 mm (1/8 in) thick with diameters equal to the seat diameter or larger than the brim diameter of each container tested. The diameter tolerance for the disks is 50 μm (± 0.05 mm [± 0.002 in]). The outer edge should be smooth and beveled at a 30° angle with the horizontal to 800 μm (0.8 mm [1/32 in]) thick at the edge. Each disk must have a 20 mm (3/4 in) diameter hole through its center and a series of 1.5 mm (1/16 in) diameter holes 25 mm (1 in) from the outer edge.
- Stopwatch

How is the volume of oils, syrups, and other viscous liquids that have smooth surfaces determined?

- 1. Make all measurements on a level surface
- 2. Bring the temperature of both the liquid and the water to be used to measure the volume of the liquid to the reference temperature specified in Table 3-1. Reference Temperatures for Liquids.
- 3. Measure the headspace of the package at the point of contact with the liquid using a depth gauge with a fully rounded, rather than a pointed, rod end. If necessary, support the package to prevent the bottom of the container from distorting.
- 4. Empty, clean, and dry the package.
- 5. Refill the container with water measured from a volumetric standard to the original liquid headspace level measured in paragraph (3) of this section until the water touches the depth gauge.
- 6. Determine the amount of water used in paragraph (5) of this section to obtain the volume of the liquid and calculate the "package error" based on that volume.

Evaluation of Results

Follow the procedures in "Evaluating Results" in Chapter 2, Section 2.3 to determine lot conformance.

3.5 Mayonnaise and Salad Dressing

Volumetric Headspace Test Procedure

Use the volumetric headspace procedure described in this section to determine volume when the commodity does not have a smooth surface (e.g., mayonnaise, salad dressing, and other water-immiscible products without a level liquid surface). The procedure guides the inspector to determine the amount of headspace above the product in the package and the volume of the container. Determine the product volume by subtracting the headspace volume from the container volume. Open every package in the sample.

- 1. Make all measurements on a level surface.
- 2. Bring the temperature of both the commodity and the water used to measure the volume to the appropriate temperature designated in Table 3-1. Reference Temperatures for Liquids.
- 1. Open the first package and place a disk larger than the package container opening over the opening.

4. Measurement Procedure

- Deliver water from a flask (or flasks), graduate, or buret, through the central hole in the disk onto the top of the product until the container is filled. If it appears that the contents of the flask may overfill the container, do not empty the flask. Add water until all of the air in the container has been displaced and the water begins to rise in the center hole of the disk. Stop the filling procedure when the water fills the center disk hole and domes up slightly due to the surface tension. Do not add additional water after the level of the water dome has dropped.
- If the water dome breaks on the surface of the disk, the container has been overfilled and the test is void; dry the container and start over.
- 5. To obtain the headspace capacity, record the volume of water used to fill the container and subtract 1 mL (0.03 fl oz), which is the amount of water held in the hole in the disk specified.
- 6. Empty, clean, and dry the package container.
- 7. Repeat steps 4 and 5 of this section. Refill the package container with water measured from a volumetric measure to the maximum capacity of the package, subtract 1 mL (0.03 fl oz), and record the amount of water used as the container volume; and
- 8. From the container volume determined in paragraph 7 of this section, subtract the headspace capacity in paragraph (5) of this section to obtain the measured volume of the product and calculate the "package error" for that volume where "package error" equals labeled volume minus the measured volume of the product.

Evaluation of Results

Follow the procedures in "Evaluating Results" in Chapter 2, Section 2.3, to determine lot conformance.

3.6 Goods Labeled by Capacity - Volumetric Test Procedure

What type of measurement equipment is needed to perform the headspace test procedures?

Use the test equipment in 3.4 (except for the micrometer depth gage) to perform these test procedures.

How is it determined if goods labeled by capacity meet the average and individual requirements?

Before conducting any of the following volumetric test procedures, refer to Section 2.3 Basic Test Procedure in Chapter 2. Define the inspection lot. Use a Category A sampling plan in the inspection; select a random sample; then use the following test procedure to determine lot compliance.

- 1. Make all measurements on a level surface.
- 2. When testing goods labeled by capacity, use water at a reference temperature of 20 °C (68 °F) \pm 2 °C (\pm 5 °F).
- 3. Select a sample container and place a disk larger than the container opening over the opening.

4. Measurement Procedure

- Add water to the container using flask (or flasks), graduate, or buret corresponding to labeled capacity of the container. If it appears that the contents of the flask may overfill the container, do not empty the flask. Add water until all of the air in the container has been displaced and the water begins to rise in the center hole of the disk. Stop filling the container when the water fills the center disk hole and domes up slightly due to the surface tension.
- If the water dome breaks on the surface of the disk, the container has been overfilled and the test is void; dry the container and start over.
- Record the amount of water used to fill the container and subtract 1 mL (0.03 fl oz) (this is the amount of water held in the hole in the disk specified) to obtain the total container volume.
- 5. Test the other containers in the sample according to the procedures in paragraph (4) of this section.
- 6. To determine package errors, subtract the total container volume obtained in paragraphs (4) and (5) from the labeled capacity of the container.

Evaluation of Results

Follow the procedures in "Evaluating Results" in Chapter 2, Section 2.3, to determine lot compliance.

3.7 Pressed and Blown Glass Tumblers and Stemware

What requirements apply to pressed and blown glass tumblers and stemware?

This handbook provides a tolerance to the labeled capacity of glass tumblers and stemware. The average requirement does not apply to the capacity of these products. See Table 3-2. Allowable Differences for Pressed and Blown Glass Tumblers and Stemware.

How is it determined if tumblers and stemware meet the individual package requirement?

Follow the Basic Test Procedure in Section 2.3. Define the inspection lot and determine which sampling plan to use in the inspection, select a random sample, and then use the following volumetric test procedure to determine container capacity and volume errors.

What type of measuring equipment is needed to perform the test procedures?

Use the equipment specified in Section 3.4. (except for the micrometer depth gage) to perform these test procedures.

What are the steps of the test procedure?

Follow steps 1 through 6 in 3.6, Goods Labeled by Capacity - Volumetric Test Procedure.

How is it determined if the samples conform to the allowable difference?

Compare the individual container error with the allowable difference that applies in Table 3-2. Allowable Differences for Pressed and Blown Glass Tumblers and Stemware. If a package contains more than one container, all of the containers in the package must meet the allowable difference requirements in order for the package to pass.

Table 3-2. Allowable Differences for Pressed and Blown Glass Tumblers and Stemware					
Unit of measure	enton the second of the second				
If the capacity in metric units is:	Then the allowable difference is:				
200 mL or less	± 10 mL				
More than 200 mL	± 5 % of the labeled capacity				
If the capacity in inch-pound units is:	Then the allowable difference is:				
5 fluid ounces or less	± ¼ fluid ounce				
More than 5 fluid ounces	± 5 % of the labeled capacity				

Evaluation of Results

Count the packages in the sample with volume errors greater than the allowable difference and compare the resulting number with the number given in column 3 of Table 2-11 in Appendix A.

- If the number of containers in the sample with errors exceeding the allowable difference exceeds the number allowed in column 3, the lot fails.
- If the number of packages with errors exceeding the allowable difference is less than or equal to the number in column 3, the lot passes.

Note: The average capacity error is not calculated because the lot passes or fails based on the individual volume errors. Act on the individual units containing errors exceeding the allowable difference individually even though the lot passes the requirement.

3.8 Volumetric Test Procedure for Paint, Varnish, and Lacquers - Non-aerosol

How is the volume of paint, varnish, and lacquers contained in a package determined?

Use one of three different test methods depending upon the required degree of accuracy and the location of the inspection. The procedures include both retail and in-plant audits and a "possible violation" method which is designed for laboratory or in-plant use because of clean-up and product collection requirements. The procedures are suitable to use with products labeled by volume and packaged in cylindrical containers with separate lids that can be resealed.

Equipment

- A scale that meets the requirements in Chapter 2, Section 2.2. Measurement Standards and Test Equipment
- Volumetric measures
- Micrometer depth gage (ends of rods fully rounded), 0 mm to 225 mm (0 in to 9 in)
- Diameter (Pi) tape measure, 5 cm to 30 cm (2 in to 12 in)
- Spanning bar, 2.5 cm by 2.5 cm by 30 cm or (1 in by 1 in by 12 in)
- Rule, 30 cm (12 in)
- Paint solvent or other solvent suitable for the product being tested
- Cloth, 25 cm (12 in) square
- Wood, 5.08 cm (2 in) thick, by 15.2 cm (6 in) wide, by 25 cm (12 in) long

- Rubber mallet
- Metal disk, 6.5 mm (1/4 in) thick and slightly smaller than the diameter of package container bottom.
- Rubber spatula
- Level at least 15 cm (6 in) in length
- Micrometer (optional)
- Stopwatch

What test procedure is used to conduct a retail audit test?

Conduct a retail audit using the following test procedure that is suitable for checking cylindrical containers up to 4 L (1 gal) in capacity. Use step 2 in the retail audit test procedure with any size container, but step 3 must be used for containers with capacities of 4 L (1 gal). The method determines the volume of a single can in the sample selected as most likely to contain the smallest volume of product. Do not empty any containers because only their critical dimensions are being measured.

How accurate is the dimensional test procedure?

The configuration of the bottom of the can, paint clinging to the lid, and slight variations in the wall and label thicknesses of the paint container may produce an uncertainty estimated to be at least 0.6 percent in this auditing procedure. Therefore this method is recommended solely to eliminate from more rigorous testing those packages that appear to be full measure. Use the violation procedures when the volume determined in step 10 is less than the labeled volume or in any case where short measure is suspected.

What worksheets make data recording easier?

Use the following format to develop worksheets to perform audits and determine the volume when checking paint. Follow the procedure and it will indicate the column in which the various measurements made can be recorded.

	Exa	ample: Audi	it Worksheet	for Checkin	g Paint – Ad	d addition	ial rows as n	eeded	
1. Can Height	Can Diameter				6. Avg Liquid Diameter	7. Avg Liquid Level	8. Avg Container Depth	9. Avg Liquid Depth	10. Volume*
	2. Top	3. Middle	4. Bottom	5. Average					
*10. Volu	ime = 0.78	354 x 6 x 6 x	9						

Note: When the following instructions require recording a measurement, refer to the numbered columns in the "Audit Worksheet for Checking Paint" shown above.

How is a retail audit test performed?

- 1. Select a random sample. A tare sample is not needed.
- 2. For containers less than 4 L or (1 gal); measure the outside diameter of each container near its middle

to the closest 0.02 mm (0.001 in). Use a diameter tape measure to record the measurements in column 3. Place the containers on a level surface and using the micrometer depth gage, record their heights in column 1 on the worksheet. If the range of outside diameters exceeds 0.125 mm (0.005 in) or the range in heights exceeds 1.58 mm (0.0625 in), do not use this procedure. If the ranges are within the specified limits, weigh all cans in the sample and select the container with the lightest gross weight and remove its lid. Continue with step 4 below.

- 3. For 4 L (1 gal) containers: gross weigh each package in the sample. Select the package with the lightest gross weight and remove its lid.
- 4. Use a direct reading diameter tape measure to measure the outside diameter of the selected container near its top, middle (already measured if step 2 was followed), and bottom to the closest 0.02 mm (0.001 in). Record these measurements in columns 2, 3, and 4. Add the three diameter values and divide by three to obtain the average diameter and record this value in column 5.
- 5. If a micrometer is available, measure the wall and the paper label thickness of the container; otherwise, assume the wall and label thicknesses given in Table 3-3. Thickness of Paint Can Walls and Labels below

Table 3-3. Thickness of Paint Can Walls and Labels					
Can Size	Wall Thickness				
4 L (1 gal)	250 µm (0.25 mm) [0.010 in]				
2 L (1/2 gal)	250 µm (0.25 mm) [0.010 in]				
1 L (1 qt)	230 µm (0.23 mm) [0.009 in]				
500 mL (1 pt)	230 µm (0.23 mm) [0.009 in}				
250 mL	200 µm (0.20 mm) [0.008 in]				
Label Thickness* for all can sizes: 100 µm (0.10 mm) [0.004 in]					
(*paper only – ignore labels lithographed directly onto the container)					

Subtract twice the thickness of the wall of the can and paper label from the average can diameter (step 4) to obtain the average liquid diameter. Record the liquid diameter in column 6.

- 6. On a level surface, place the container on the circular metal disk that is slightly smaller in diameter than the lower rim of the can so the bottom of the container nests on the disk to eliminate any "sag" in the bottom of the container.
- 7. Place the spanning bar and depth gage across the top of the paint can and mark the location of the spanning bar on the rim of the paint container. Measure the distance to the liquid level to the nearest 20 µm (0.02 mm) (0.001 in) at three points in a straight line. Take measurements at points approximately 1 cm (3/8 in) from the inner rim for cans 15 cm (5 in) in diameter or less (and at 1.5 cm [1/2 in] from the rim for cans exceeding 15 cm [5 in]) in diameter and at the center of the can. Add the three readings and divide by three to obtain the average distance to the liquid level in the container. Record the average distance to the liquid level in column 7.
- 8. Measure the distance to the bottom of the container at three points in a straight line in the same manner as outlined in step 7. Add the three readings and divide by three to obtain the average height of the container and record it in column 8.
- 9. Subtract the average distance to the liquid level (column 7) from the average height of the container (column 8) to obtain the average height of the liquid column and record it in column 9.
- 10. Determine the volume of paint in the container by using the following formula:

 $Volume = 0.7854 D^{2}H$

Where D = average liquid diameter (column 6) and <math>H = average liquid height (column 9)

11. Record this value in column 10. If the calculated volume is less than labeled volume, go to the Violation Procedure.

How is an in-plant audit conducted?

Use the following procedures to conduct an in-plant audit inspection. This method applies to a container that probably contains the smallest volume of product. Duplicate the level of fill with water in a can of the same dimensions as the one under test. Use this method to check any size of package provided that the liquid level is within the measuring range of the depth gage. If any paint is clinging to the side wall or lid, carefully scrape the paint into the container using a rubber spatula.

- 1. Follow steps 1 through 6 of the retail audit test.
- 2. Place the spanning bar and depth gage across the top of the paint can. Measure the liquid level at the center of the surface and record the level in column 7.
- 3. Select an empty can with the same bottom configuration as the container under test and with a diameter and height equal to that of the container under test within plus or minus the following tolerances:
 - a. For 500-mL or (1 pt) cans within 25 μ m (0.025 mm) (0.001 in)
 - b. For 1-L or (1 qt) cans within 50 μ m (0.05 mm) (0.002 in)
 - c. For 2-L or (1/2 gal) cans within 75µm (0.75 mm) (0.003 in)
 - d. For 4-L or (1 gal) cans within 100 µm (0.1 mm) (0.004 in)

Set the empty can on a level work surface with a circular metal disk that is slightly smaller in diameter than the bottom can rim underneath the can to eliminate sag. Set up the spanning bar and depth gage as in step 2 above. Fill the container with water from a volumetric measure of the same volume as the labeled volume. Measure the distance to the liquid level at the center of the container and record this level in column 7 below the reading recorded in step 2. If this distance is equal to or greater than the distance determined in step 2, assume that the package is satisfactory. If the distance is less than the distance determined in step 2, the product may be short measure. Use the possible violation procedure given in the next section when the audit test indicates that short measure is possible.

Violation Procedure

How is it determined if the containers meet the package requirements?

Use the following method provided that the liquid level is within the measuring range of the micrometer. The first step is to follow the Basic Test Procedure in Section 2.3. Define the inspection lot to determine which Category A sampling plan to use; select a random sample; and then use the following procedure. The steps noted with an (*) are required if there is paint adhering to the lid and it cannot removed by scraping into the can.

1. Do not shake or invert the containers selected as the sample. Determine the gross weight of these packages and record in column 2 of the "Example Worksheet for Possible Violation in Checking Paint" below.

	Example Worksheet for Possible Violation in Checking Paint – Add additional rows as needed							
l. Labeled Volume	2. Gross Weight	3. Lid Paint Weight (Wet - Dry)	4. Liquid Level	5. Tare	6. Water Volume	7. Net Wt. = 2 - 5	8. Weight of Labeled Volume = 7 x 1÷6	9. Package Volume = 6 + [(3 ÷7) x 6)]

Record the labeled volume of the first tare sample package in column 1 of the worksheet. Use a circular metal disk to eliminate can "sag" and remove the lid. If paint clings to the lid of the container, scrape it off with a spatula.

- 2.* If paint that adheres to the lid cannot be completely removed by scraping the paint into the can o, determine the weight of the lid plus any adhering paint. Clean the paint lid with solvent and weigh again. Subtract the clean lid weight from the lid weight with paint to determine the weight of the paint adhering to the lid. Record this weight in column 3.
- 3. Place the spanning bar and depth gage across the top of the paint can. Mark the location of the spanning bar on the rim of the paint container. Measure the distance to the liquid level at the center of the container to the nearest 20 µm (0.02 mm) (0.001 in). Record the distance in column 4.
- 4. Empty and clean the sample container and lid with solvent; dry and weigh the container and lid. Record the tare weight in column 5.
- 5. Set up the container in the same manner as in step 1.
- 6. Place the spanning bar at the same location on the rim of the paint container as marked in step 3. With the depth gage set as described in step 3, deliver water into the container in known amounts until the water reaches the same level occupied by the paint as indicated by the depth gage. Record this volume of water (in mL or fl oz) in column 6 of the worksheet. This is the volume occupied by the paint in the container. Follow steps, 7a, 8a, and 9a if scraping does not remove the paint from the lid. In order to determine if gravimetric testing can be used to test the other packages in the sample, follow only steps 7, 8, and 9 when no paint adheres to the lid.
- 7. Subtract the weight of the container (column 5) from the gross weight (column 2) to arrive at the net weight of paint in the selected container. Record the net weight in column 7 of the worksheet.
 - 7a* Subtract the weight of the container (column 5) and the weight of product on the lid (column 3) from the gross weight (column 2) to arrive at the net weight of paint in the container. Record in column 7 (excluding the weight of the paint on the lid).
- 8. Calculate the weight of the labeled volume of paint (for the first package opened for tare) = on the lid).

net weight (col. 7) x labeled volume (col. 1) ÷ volume of paint in can (col. 6)

Record this value in column 8.

8a* Calculate the package volume =

volume in can (col.6) + [lid paint weight (col. 3) x (volume in can (col. 6) / net weight (col.7)]

Record it in column 9 of the worksheet.

9. Calculate the package error. Use the following formula if paint does not adhere to the lid:

Package error = (column 6 value) - (labeled volume)

9a* Use the following formula if paint does adhere to the lid and will not come off by scraping.

Package error = (column 9 value) - (labeled volume)

10. Repeat steps 1 through 9 for the second package chosen for tare.

When a gravametric procedure be used?

A gravimetric procedure is used if the weights of the labeled volume for the first two packages do not differ from each other by more than one division on the scale (if they meet this criterion, check the rest of the sample gravimetrically and record in column 8).

How is "nominal gross weight" determined?

Determine the "nominal gross weight" for use with Chapter 2, Section 2.3 as follows:

The nominal gross weight equals the sum of the average weight of the labeled volume (average of values recorded in column 8) plus the average tare (average of values recorded in column 3) for the packages selected for tare. Note that the weight of a given volume of paint often varies considerably from container to container; therefore, volumetric measurements may prove necessary for the entire sample.

Evaluation of Results

Follow the procedures in "Evaluating Results" in Chapter 2, Section 2.3 to determine lot conformance.

3.9 Testing Viscous Materials - Such As Caulking Compounds and Pastes

How are viscous materials such as caulking compounds and paste tested?

Use the following procedure for any package of viscous material labeled by volume. It is suitable for very viscous materials such as cartridge-packed caulking compounds, glues, pastes, and other similar products. It is best to conduct this procedure in a laboratory using a hood to ventilate solvent fumes. If it is used in the field, use in a well-ventilated area. Except for the special measurement procedures to determine the weight of the labeled volume, this procedure follows the basic test procedure. For each weight of a known volume determination, pack a portion of the packaged product into a pre-weighed cup of known volume (called a "density cup" or "pycnometer") and weigh. From the weight of the known volume, determine the weight of the labeled volume. Compare the nominal gross weight with the gross weight to determine the package error.

What type of measurement equipment is needed to test packages of caulk, pastes, and glues?

• A scale that meets the requirements in Chapter 2, Section 2.2 Measurement Standards and Test Equipment.

- Pycnometer, a vessel of known volume used for weighing semifluids. The pycnometer can be bought or made. If it is made, refer to it as a "density cup." To make a 150 mL or 5 fl oz density cup, cut off the lip of a 150 mL beaker with an abrasive saw and grind the lip flat on a lap wheel. The slicker plate is available commercially. Calibrate the density cup gravimetrically with respect to the contained volume using the procedure in ASTM E 542–94, "Standard Practice for Calibration of Laboratory Volumetric Apparatus."
- Appropriate solvents (water, Stoddard solvent, kerosene, alcohol, etc.)
- Caulking gun (for cartridge-packed products)

How is pycnometer prepared for use?

Before using, weigh and calibrate the pycnometer (or the density cup and slicker plate) with respect to volume (mL or fl oz). If applicable, comply with any special instructions furnished by the manufacturer to calibrate a pycnometer that has not been calibrated. It is not necessary to reweigh or recalibrate for each test; however, mark the pieces of each unit to prevent interchange of cups and slicker plates.

How is it determined if the containers meet the package requirements?

- 1. First, follow the Basic Test Procedure in Section 2.3. Define the inspection lot. Use a Category A sampling plan in the inspection; select a random sample; then, use the following procedure to determine lot compliance.
- 2. Weigh a calibrated pycnometer and slicker plate and record as "pycnometer weight" and record this weight and the volume of the pycnometer.
- 3. Determine the gross weight of the first package and record the weight value. Open the package and transfer the product to the pycnometer by filling it to excess. Use a caulking gun to transfer product from the caulking cartridges. If using a pycnometer, cover it with a lid and screw the cap down tightly. Excess material will be forced out through the hole in the lid, so the lid must be clean. If using a density cup, place the slicker plate over 3/4 of the cup mouth, press down and slowly move the plate across the remainder of the opening. With the slicker plate in place, clean all the exterior surfaces with solvent and dry.
- 4. Completely remove the product from the package container; clean the package container with solvent; dry and weigh it to determine the tare weight.
- 5. Weigh the filled pycnometer or filled density cup with slicker plate and record this weight. Subtract the weight of the empty pycnometer from the filled weight to determine the net weight of the product contained in the pycnometer and record this weight.
- 6. Clean the pycnometer and repeat steps 3, 4, and 5 for the second package in the tare sample.

Determine acceptability of the density variation on the two packages selected for tare. If the difference between the densities of both packages exceeds one division of the scale, do not use the gravimetric procedure to determine the net quantity of contents. Instead, use the procedure in steps 9 and 10.

Note: If the gravimetric procedure can be used perform steps 8 and 10.

7. Calculate the weight of product corresponding to the labeled volume of product according to the following formula:

Weight of Product in Pycnometer ÷ Pycnometer Volume = Product Density

- 8. Test each package individually by determining the product density in each package using the pycnometer and record the gross, tare, and net weight of each package. Subtract the weight of the labeled volume (determined for each package) from the net weight of product to arrive at each individual package error in units of weight.
- 9. Convert the package errors to units of volume using the following formula:

Package Error (volume) = (Package Error (weight) x Pycnometer Volume) ÷ (Weight of Product in Pycnometer)

10. Record the package errors on the report form using an appropriate unit of measure.

Evaluation of Results

Follow the procedures in "Evaluation Results" in Chapter 2, Section 2.3 to determine lot conformance.

3.10 Peat Moss

How are packages of peat and peat moss labeled by compressed volume inspected?

Measure the dimensions of the compressed material to determine if it contains the labeled quantity.

How are packages of peat and peat moss labeled by uncompressed volume inspected?

Use the following method to test peat moss sold using an uncompressed volume as the declaration of content. The procedure is based on ASTM D 2978-90, "Standard Method of Test for Volume of Processed Peat Materials."

Equipment

- 12.5 mm (or 1/2 in) sieve.
- Use one of the following measures as appropriate for the package size (see Table 3-4. Specifications for Test Measures for Mulch and Soils, for additional information on test measure construction).
 - > 28.3 L (1cu ft) measure with inside dimensions of 30.4 cm (12 in) by 30.4 cm (12 in) by 30.4 cm (12 in). Mark the inside of the measure with horizontal lines every 1.2 cm (1/2 in) so that package errors package errors can be directly determined.
 - > 100-L (3.5 cu ft) measure with inside dimensions of 50 cm (19.75 in) by 50 cm (19.75 in) by 40 cm (15.7 in). The inside of the measure should be marked with horizontal lines every 1.2 cm (1/2 in) so that package errors can be directly determined.
- Straight edge, 50 cm (20 in) in length.
- Sheet for catching overflow of material.
- Level (at least 15 cm (6 in) in length).

How is it determined if the packages meet the requirements in this handbook?

1. Follow Basic Test Procedure in Section 2.3. Define the inspection lot. Use a Category A sampling plan in the inspection; select a random sample; then, use the following procedure to determine lot compliance.

2. Open each package in turn, remove the contents, and pass them through the sieve directly into the measuring container (overfilling it). Use this method for particulate solids (such as soils or other garden materials) labeled in cubic dimensions or dry volume. Some materials may not pass through the sieve for peat moss; in these instances, separate the materials by hand (to compensate for packing and settling of the product after packaging) before filling the measure.

Note: Separated material (product not passing through the sieve) must be included in the product volume.

Shake the measuring container with a rotary motion at one rotation per second for 5 seconds. Do not lift the measuring container when rotating it. If the package contents are greater than the measuring container capacity, level the measuring container with a straight edge using a zigzag motion across the top of the container. Empty the container. Repeat the filling operations as many times as necessary, noting the partial fill of the container for the last quantity delivered using the interior horizontal markings as a guide. Record the total volume.

3. To compute each package error, subtract the labeled quantity from the total volume and record it.

Evaluation of Results

Follow the procedures in "Evaluating Results" in Chapter 2, Section 2.3 to determine lot conformance.

3.11 Mulch and Soils Labeled by Volume

What products are defined as mulch and soil?

- Mulch is defined as "any product or material except peat or peat moss that is advertised, offered for sale, or sold for primary use as a horticultural, above-ground dressing, for decoration, moisture control, weed control, erosion control, temperature control, or other similar purposes."
- Soil is defined as "any product or material, except peat or peat moss that is advertised or offered for sale, or sold for primary use as a horticultural growing media, soil amendment, and/or soil replacement."

What type of measurement equipment is needed to test packages of mulch and soil?

• A test measure appropriate for the package size that meets the specifications for test measures in Table 3-4.

Table 3-4. Specifications for Test Measures for Mulch and Soils								
Nominal Volume of Test Measure	Interi	or Wall Dimen	sions*	Marked Intervals on Interior Walls ***	Volume Equivalent of Marked Intervals			
	Length	Width	Height**					
30 L (1.07 cu ft) for testing packages that contain less than 28.3 L (1 cu ft) or (25.7 dry qt)	20.3 cm (8 in)	21.3 cm (8.4 in)	73.6 cm (29 in)	1.2 cm (1/2 in)	518 mL (32 cu in)			
28.3 L (1 cu ft)	30.4 cm (12 in)	30.4 cm (12 in)	30.4 cm (12 in)	1.2 cm (1/2 in)	1108 mL (72 cu in)			
56.6 L (2 cu ft)	40.6 cm (16 in)	22.8 cm (9 in)	122 cm (48 in)	1.2 cm (1/2 in)	1110 mL (72 cu in)			
84.9 L (3 cu ft)	40.6 cm (16 in)	22.8 cm (9 in)	122 cm (48 in)	1.2 cm (1/2 in)	1110 mL (72 cu in)			

Measures are typically constructed of 1.2 cm (1/2 in) marine plywood. A transparent side-wall is useful for determining the level of fill, but must be reinforced if it is not thick enough to resist distortion. If the measure has a clear front, place the level gage at the back (inside) of the measure so that the markings are read over the top of the mulch.

Notes

- * Other interior dimensions are acceptable if the test measure approximates the configuration of the package under test and does not exceed a base configuration of the package cross-section.
- **The height of the test measure may be reduced, but this will limit the volume of the package that can be tested.
- *** When lines are marked in boxes, they should extend to all four sides of the measure if possible to improve readability. It is recommended that a line indicating the MAV level also be marked to reduce the possibility of reading errors when the level of the mulch is at or near the MAV.
- Drop cloth/polyethylene sheeting for catching overflow of material.
- Level (at least 15 cm (6 in) in length).

How is it determined if the packages meet the package requirements?

Use the following procedure:

- 1. Follow the Basic Test Procedure in Section 2.3. Define the inspection lot. Use a Category A sampling plan in the inspection, select a random sample, then, use the following procedure to determine lot conformance.
- 2. Open each package in turn. Empty the contents of the package into a test measure and level the contents by hand. Do not rock, shake, drop, rotate, or tamp the test measure. Read the horizontal marks to determine package net volume.

Note: Some types of mulch are susceptible to clumping and compacting. Take steps to ensure that the material is loose and free flowing when placed into the test measure. Gently roll the bag before opening to reduce the clumping and compaction of material.

3. Exercise care in leveling the surface of the mulch/soil and determine the volume reading from a position that minimizes errors caused by parallax.

How are package errors determined?

Determine package errors by subtracting the labeled volume from the package net volume in the measure. Record each package error.

Package Error = Package Net Volume - Labeled Volume

Evaluation of Results

Follow the procedures in "Evaluating Results" in Chapter 2, Section 2.3 to determine lot conformance.

Note: In accordance with Table 2-10 in Appendix A, apply an MAV of 5 percent of the declared quantity to mulch and soil sold by volume. When testing mulch and soil with a net quantity in terms of volume, one package out of every 12 in the sample may exceed the 5 percent MAV (e.g., one in a sample of 12 packages; two in a sample of 24 packages; four in a sample of 48 packages.) However, the sample must meet the average requirement of the Category A Sampling Plan.

3.12 Ice Cream Novelties

Note: The following procedure can be used to test packaged products that are solid or semisolid and that will not dissolve in, mix with, absorb, or be absorbed by the fluid into which the product will be immersed. For example, ice cream labeled by volume can be tested using ice water or kerosene as the immersion fluid.


How are ice cream novelties inspected to see if the labeled volume meets the package requirements?

Use the following volume displacement procedure that uses a displacement vessel specifically designed for ice cream novelties such as ice cream bars, ice cream sandwiches, or cones. The procedure determines the volume of the novelty by measuring the amount of water displaced when the novelty is submerged in the vessel. Two displacements per sample are required to subtract the volume of sticks or cups. The procedure first determines if the densities of the novelties are the same from package to package (in the same lot) so that a gravimetric test can be used to verify the labeled volume. If a gravimetric procedure is used, compute an average weight for the declared volume from the first two packages and weigh the remainder of the sample. If the gravimetric procedure cannot be used, use the volume displacement procedure for all of the packages in the sample.

Equipment

- A scale that meets the requirements in Chapter 2, Section 2.2. Measurement Standards and Test Equipment.
- Volumetric measures
- Displacement vessel with dimensions that are appropriate for the size of novelties being tested. Figure
 3-1 shows an example of a displacement vessel. It includes an interior baffle that reduces wave action
 when the novelty is inserted and the downward angle of the overflow spout reduces dripping. Other
 designs may be used.

Figure 3-1. Example of a Displacement Vessel

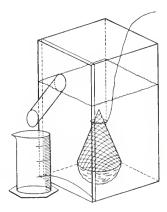

Note: This displacement vessel can be constructed or may be obtained from Custom Design Products, 4116 D, West Broad Street, Richmond, VA 23230. The use of firm names does not imply that the Department of Commerce endorses or recommends them over similar commercially available products from other manufacturers.

• Thin wire, clamp, or tongs

- Freezer or ice chest and dry ice
- Single-edged razor or sharp knife (for sandwiches only)
- Ice water/kerosene maintained at 1 °C (33 °F) or below
- Indelible marker (for ice pops only)
- Level, at least 15 cm (6 in) in length
- A partial immersion thermometer (or equivalent) with a range of -35 °C to +50 °C (-30 °F to 120 °F), at least 1 °C (1 °F) graduations, and with a tolerance of \pm 1 °C (\pm 2 °F)
- A table-top, laboratory-type jack of sufficient size to hold the displacement vessel
- Stopwatch

Test Procedure

Follow the Basic Test Procedure in Section 2.3. Define the inspection lot. Use a Category A sampling plan in the inspection; select a random sample; then use the following procedure to determine lot compliance.

- 1. Maintain the samples at the reference temperature for frozen products that is specified in Table 3-1. Reference Temperatures for Liquids in this chapter (i.e., -18 °C (0 °F)). Place the samples in the freezer or ice chest until they are ready to be tested, then remove packages from the freezer one at a time.
- 2. According to the type of novelty, prepare the sample products as follows:
 - ➤ Ice-pop. Mark on the stick(s) with the indelible marker the point to which the pop will be submerged in the ice water. (After the ice-pop contents have been submerged, remove the novelty to determine the volume of the stick.)
 - Cone. Make a small hole in the cone below the ice cream portion to allow air to escape.
 - Sandwich. Determine whether the declared volume is (a) the total volume of the novelty (that is, including the cookie portion) or (b) the volume of the ice-cream-like portion only. If the declared volume is the volume of only the ice-cream-like portion, shave off the cookie with a razor or knife, leaving some remnants of cookie to ensure that no ice cream is accidentally shaved off. Work quickly, and return the novelty to the freezer before the sandwich softens.
 - > Cup. Remove the cap from the cup. (After the cup and novelty contents have been submerged, remove the novelty from the cup to determine the volume of the cup.)

How is it determined if the ice cream novelty packages meet the requirements in this handbook?

- 1. Follow the Basic Test Procedure in Section 2.3. Define the inspection lot. Use a Category A sampling plan in the inspection; select a random sample; then use the following procedure to determine lot compliance.
- 2. Fill the displacement vessel with ice water until it overflows the spout. Allow it to sit until dripping stops. Raise the displacement vessel as necessary and place the graduate beneath the spout.
- 3. Remove a package from the freezer, determine its gross weight and record it.

- 4. Submerge the novelty as suggested until it is below the surface level of the water.
 - Ice-pop. Use a clamp, tongs, or your fingers to hold the stick(s) and submerge the pop to the level marked in Step 2 of the Test Procedures.
 - Cone. Shape the wire into a loop, and use it to push the cone, headfirst (ice cream portion first) into the ice water. Do not completely submerge the cone immediately: let water fill the cone through the hole made in Step 2 of the Test Procedures before completely submerging the novelty.
 - Sandwich or cup. Skewer the novelty with the thin wire or form a loop on the end of the wire to push the sandwich or ice-cream-portion or cup completely below the liquid level.
- 5. Record the total water volume in the graduate. For a cone or sandwich, record the water volume as the net volume and go to step (7). For ice-pops or cups, record the water volume in the graduate as the gross volume and go to step (6).
- 6. Refill the displacement vessel with water to overflowing and reposition the empty graduate under the spout.
 - Ice-pop. Melt the ice pop off the stick or sticks. Submerge the stick or sticks to the line marked in step (4). Record the volume of tare material (i.e., stick) by measuring the water displaced into the graduate. The net volume for the ice-pop is the gross volume recorded in step (5) minus the volume of the tare materials in this step. Record this volume as the "volume of novelty." To determine the error in the package, subtract the labeled quantity from the volume of novelty.
 - > Cup. Remove the novelty from the cup. Rinse the cup, then submerge it in the displacement vessel. Small pinholes in the base of the cup can be made to make submersion easier. Record the volume of water displaced into the graduate by the cup as the volume of tare material. The net volume for the novelty is the gross volume determined in step (5) minus the volume of the tare materials determined in this step. Record this as the net volume of the novelty. To determine the error in the package, subtract the labeled quantity from the volume of novelty.
- 7. Clean and air-dry the tare materials (sticks, wrappers, cup, lid, etc.). Weigh and record the weight of these materials for the package.
- 8. Subtract the tare weight from the gross weight to obtain the net weight and record this value.
- 9. Compute the weight of the labeled volume for the package using the following formula and then record the weight:

Product Density = (weight in item 3) = (the total water volume in item 5) Weight of labeled volume = (labeled volume) x (Product Density)

- 10. Repeat steps (3) through (9) for a second package.
- 11. If the weight of the labeled volume in steps (9) and (10) differ from each other by more than one division on the scale, the gravimetric test procedure cannot be used to test the sample for compliance. If this is the case, steps (2) through (6) for each of the remaining packages in the sample must be used to determine their net volumes and package errors. Then go to evaluation of results.

How is "nominal gross weight" determined?

1. Determine the Average Used Dry Tare Weight of the sample according to provisions in Chapter 2, Section 2.3.

- 2. Using the weights determined in step (11) calculate the Average Product Weight by adding the densities of the liquid from the two packages and dividing the sum by two.
- 3. Calculate the "nominal gross weight" using the formula:

Nominal Gross Weight = Average Product Weight + Average Used DryTare Weight

How are the errors in the sample determined?

- 1. Weigh the remaining packages in the sample.
- 2. Subtract the nominal gross weight from the gross weight of each package to obtain package errors in terms of weight.

Note: Compare the sample packages to the nominal gross weight.

3. Follow the Basic Test Procedure in Section 2.3

To convert the average error or package error from weight to volume, use the following formula:

Package Error in Volume = (Package Error in Weight) ÷ (Product Density)

Evaluation of Results

Follow the procedures in "Evaluating Results" in Chapter 2, Section 2.3 to determine lot conformance.

3.13 Fresh Oysters Labeled by Volume

What requirements apply to packages of fresh oysters labeled by volume?

Packaged fresh oysters removed from the shell must be labeled by volume. The maximum amount of permitted free liquid is limited to 15 percent by weight. Testing the quantity of contents of fresh oysters requires the inspector to determine total volume, total weight of solids and liquid, and the weight of the free liquid.

Equipment

- A scale that meets the requirements in Chapter 2, Section 2.2 Measurement Standards and Test Equipment
- Volumetric measures
- Micrometer depth gage (ends of rods fully rounded), 0 to 225 mm (0 to 9 in)
- Strainer for determining the amount of drained liquid from shucked oysters. Use as a strainer a flat bottom metal pan or tray constructed to the following specifications:
 - > Sides: 5 cm (2 in)
 - Area: 1900 cm² (300 sq in) or more for each 3.78 L (1 gal) of oysters
 - Perforations:

Diameter: 6 mm (1/4 in)

Location: 3.2 cm (1-1/4 in) apart in a square pattern, or perforations of equivalent area and

distribution.

- Spanning bar, 2.5 cm by 2.5 cm by 30.4 cm (1 in by 1 in by 12 in)
- Rubber spatula
- Level, at least 15 cm (6 in) in length
- Stopwatch

How is it determined if the containers meet the package requirements?

Follow the Basic Test Procedure in Section 2.3. Define the inspection lot. Use a Category A sampling plan in the inspection; select a random sample; then, use the following test procedure to determine lot compliance.

- 1. Determine and record the gross weight of a sample package.
- 2. Set the container on a level surface and open it. Use a depth gage to determine the level of fill. Lock the depth gauge. Mark the location of the gauge on the package.
- 3. Weigh a dry 20.3 cm or 30.5 cm (8 in or 12 in) receiving pan and record the weight. Set sieve over the receiving pan.
- 4. Pour the contents from the container onto the sieve without shaking it. Tip the sieve slightly and let it drain for 2 minutes. Remove sieve with oysters. It is normal for oysters to include mucous (which is part of the product) that will not pass through the sieve, so do not force it.
- 5. Weigh the receiving pan and liquid and record the weight. Subtract the weight of the dry receiving pan from the weight of pan and liquid to obtain the weight of free liquid and record the value.
- 6. Clean, dry, and weight the container and record the tare weight. Subtract the tare weight from the gross weight to obtain the total weight of the oysters and liquid and record this value.
- 7. Determine and record the percent of free liquid by weight as follows:
 - Percent of free liquid by weight = ([weight of free liquid] ÷ [weight of oysters + liquid]) x 100.
- 8. Set up the depth gauge on the dry package container as in step 2. Pour water from the flasks and graduate as needed to re-establish the level of fill obtained in step 2. Add the volumes delivered as the actual net volume for the container and record the value.

Note: Some containers will hold the declared volume only when filled to the brim; they may have been designed for other products, rather than for oysters. If the net volume is short-measure (per step 8), determine if the container will reach the declared volume only if filled to the brim. Under such circumstance, the package net volumes will all be short measure because the container cannot be filled to the brim with a solid and liquid mixture. A small headspace is required in order to get the lid into the container without losing any liquid.

Evaluation of Results

Follow the procedures in "Evaluating Results" in Chapter 2, Section 2.3 to determine lot conformance.

3.14 Determining the Net Contents of Compressed Gas in Cylinders

What type of compressed gases may be tested with these procedures?

These procedures are for industrial compressed gas. Compressed gas may be labeled by weight (for example, Liquefied Petroleum [LP] gas, or carbon dioxide) or by volume. Acetylene, liquid; oxygen, nitrogen, nitrous oxide, and argon are all filled by weight. Acetylene is sold by liters or by cubic feet. Helium, gaseous oxygen, nitrogen, air, and argon are filled according to pressure and temperature tables.

What type of test procedures must be used?

Checking the net contents of compressed gas cylinders depends on the method of labeling; those labeled by weight are generally checked by weight. Cylinders filled by using pressure and temperature charts must be tested using a pressure gauge that is connected to the cylinder. Determine the volume using the pressure and temperature of the cylinder.

Should any specific safety procedures be followed?

Yes, be aware of the hazards of the high pressure found in cylinders of compressed gas. An inspector should handle compressed gas only if the inspector has been trained and is knowledgeable regarding the product, cylinder, fittings, and proper procedures (see *Compressed Gas Association [CGA] pamphlet P-1, "Safe Handling of Compressed Gases in Containers,"* for additional information). Additional precautions that are necessary for personal safety are described in the CGA Handbook of Compressed Gases. All personnel testing compressed gases should have this manual for reference and be familiar with its contents. It is essential that the inspector be certain of the contents before connecting to the cylinder. Discharging a gas or cryogenic liquid through a system for which the material is not intended could result in a fire and/or explosion or property damage due to the incompatibility of the system and the product. Before connecting a cylinder to anything, be certain of the following:

- Always wear safety glasses.
- The cylinder is clearly marked or labeled with the correct name of the contents and that no conflicting marks or labels are present. Do not rely on the color of the cylinder to identify the contents of a cylinder. Be extremely careful with all gases because some react violently when mixed or when coming in contact with other substances. For example, oxygen reacts violently when it comes in contact with hydrocarbons.
- The cylinder is provided with the correct Compressed Gas Association (CGA) connection(s) for the product. A proper connection will go together smoothly, so excessive force should not be used. Do not use an adapter to connect oxygen to non-oxygen cleaned equipment. When a cylinder valve is opened to measure the internal pressure, position the body away from the pressure gauge blowout plug or in front of the gauge if the gauge has a solid cast front case. If the bourdon tube should rupture, do not be in a position to suffer serious injuries from gas pressure or fragments of metal.
- Thoroughly know the procedure and place emphasis on safety precautions before attempting any tests. Do not use charts referred to in the procedure until the necessary training has been completed. When moving a cylinder, always place the protective cap on the cylinder. Do not leave spaces between cylinders when moving them. This can lead to a "domino" effect if one cylinder is pushed over.
- Open all valves slowly. A failure of the gauge or other ancillary equipment can result in injuries to nearby persons. Remember that high gas pressure can propel objects with great force. Gas ejected under pressure can also cause serious bodily injuries if someone is too close during release of pressure.
- One of the gauges will be reserved for testing oxygen only and will be prominently labeled "For Oxygen Use Only." This gauge must be cleaned for oxygen service and maintained in that "clean"

condition. The other gauge(s) may be used for testing a variety of gases if they are compatible with one another.

Observe special precautions with flammable gas in cylinders in addition to the several precautions
necessary for the safe handling of any compressed gas in cylinders. Do not "crack" cylinder valves of
flammable gas before connecting them to a regulator or test gauge. This is extremely important for
hydrogen or acetylene.

What type of measurement equipment is needed to test cylinders of compressed gas?

- Use a scale that meets the requirements in Chapter 2, Section 2.2 Measurement Standards and Test Equipment. Use a wooden or non-sparking metal ramp to roll the cylinders on the scale to reduce shock loading.
- Two calibrated precision bourdon tube gauges or any other approved laboratory-type pressure-measuring device that can be accurately read within plus or minus 34 kilopascal (kPa) [5 pounds per square inch {psi}]. A gauge having scale increments of 172 kPa (25 psi) or smaller shall be considered as satisfactory for reading within plus or minus
 - 34 kPa (5 psi). The range of both gauges shall be a minimum of 0 to 2268 kPa (0 to 5000 psi) when testing cylinders using standard industrial cylinder valve connections. These standardized connections are listed in "CGA Standard V-1, Standard for Compressed Gas Cylinder Valve Outlet and Inlet for use with Gas Pressures up to 20 680 kPa (3000 psi)." For testing cylinders with cylinder valve connections rated for over 20 680 kPa (3000 psi), the test gauge and its inlet connection must be rated at 13 790 kPa (2000 psi) over the maximum pressure that the connection is rated for in CGA V-1. Note: there are standard high-pressure industrial connections on the market that are being used up to their maximum pressure of 51 711 kPa (7500 psi).

Note: Any gauge or connectors used with oxygen cylinders must be cleaned for oxygen service, transported in a manner which will keep them clean, and never used for any other gas including air or oxygen mixtures. Oxygen will react with hydrocarbons and many foreign materials that may cause a fire or explosion.

- An approved and calibrated electronic temperature measuring device or three calibrated mercury-inglass thermometers having either a digital readout or scale division of no more than 1 °F (0.5 °C). The electronic device equipped with a surface temperature sensor is preferred over a mercury-in-glass thermometer because of its shorter response time.
- Two box-end wrenches of 29 mm (1-1/8 inch) for oxygen, nitrogen, carbon dioxide, argon, helium, and hydrogen and 21 mm (7/8 inch) for some sizes of propane. All industrial CGA connections are limited to these two hex sizes. Avoid using an adjustable wrench because of the tendency to round the edges of the fittings, which can lead to connections not being tightened properly.
- Use a separate gauge and fitting for each gas to be tested. If adapters must be used, do not use on oxygen systems.

Test Procedure For Cylinders Labeled By Weight

How is it determined if the containers meet the package requirements using the gravimetric test procedure?

- 1. Follow the Basic Test Procedure in Section 2.3. Define the inspection lot. Use a Category A sampling plan in the inspection; select a random sample; then use the following test procedure to determine lot compliance.
- 2. The cylinder should be marked or stenciled with a tare weight. The marked value may or may not be used by the filling plant when determining the net weight of those cylinders sold or filled by weight. If

there is a tare weight marked on the net contents tag or directly on the cylinder, then an actual tare weight was determined at the time of fill. If there is no tare weight marked on a tag or on the cylinder, then the stamped or stenciled tare weight is presumed to have been used to determine the net contents.

Note: Check the accuracy of the stamped tare weights on empty cylinders whenever possible. The actual tare weight must be within (a) 1/2 percent of the stamped tare weight for 9 kg (20 lb) tare weights or less, or (b) 1/4 percent of the stamped tare weight for greater than 9 kg (20 lb) tare weights (See NIST Handbook 130, Section 2.16 in the "Method of Sale Regulation").

3. Place cylinder on scale and remove protective cap. The cap is not included in the tare weight.

Weigh the cylinder and determine net weight, using either the stamped or stenciled tare weight, or the tare weight marked on the tag. Compare actual net weight with labeled net weight, or use the actual net weight to look up the correct volume declaration (For Acetylene Gas), and compare that with the labeled volume.

Note: The acetone in acetylene cylinders is included in the tare weight of the cylinder. Therefore, as acetylene is withdrawn from the cylinder, some acetone will also be withdrawn, changing the tare weight. Most producers will replace acetone in the cylinder before the cylinder is refilled, filling the cylinder with acetone to the stamped tare weight. Other producers, although not following recommended procedures, do not replace the acetone until it drops to a predetermined weight. In the latter situation, the refilling plant must note the actual tare weight of the cylinder and show it on the tag containing the net content statement or on the cylinder itself. Refer to tables for acetylene if necessary (if the acetylene is labeled by volume).

Test Procedure for Cylinders Labeled by Volume

How is it determined if the containers meet the package requirements using the volumetric test procedure?

Follow the Basic Test Procedure in Section 2.3. Define the inspection lot. Use a Category A sampling plan in the inspection; select a random sample; then use the following test procedure to determine lot compliance.

- 1. Determine the temperature of the cylinders in the sample. Place the thermometer approximately halfway up a cylinder in contact with the outside surface. Take the temperature of three cylinders selected at random and use the average temperature of the three values.
- 2. Using the appropriate pressure gauge, measure the pressure of each cylinder in the sample.
- 3. Determine the cylinder nominal capacity from cylinder data tables or from the manufacturer. (These tables must be obtained in advance of testing.)
- 4. Using NIST Technical Note 1079 "Tables of Industrial Gas Container Contents and Density for Oxygen, Argon, Nitrogen, Helium, and Hydrogen" determine the value (SCF/CF) from the content tables at the temperature and pressure of the cylinder under test.
- 5. Multiply the cylinder nominal capacity by the value (SCF/CF) obtained from the content tables. This is the actual net quantity of gas.
- 6. Subtract the labeled net quantity from the actual net quantity to determine the error.

Evaluation of Results

Follow the procedures in "Evaluating Results" in Chapter 2, Section 2.3 to determine lot conformance.

3.15 Volumetric Test Procedure for Packaged Firewood with a Labeled Volume of 113 L (4 Cu Ft) or less.

How are packages of firewood tested?

Follow the Basic Test Procedure in Section 2.3. Define the inspection lot. Use a Category A sampling plan in the inspection; select a random sample, then use the test procedure provided in Section 3.17 to determine lot compliance.

Equipment

- Linear Measure. Take all measurements in increments of 0.5 cm (1/8 in) or less and round up.
- Binding Straps. Binding Straps are used to hold wood bundles together if the bundles need to be removed from the package/wrapping material.

How is it determined if the containers meet the package requirements?

Unless otherwise indicated, take all measurements without rearranging the wood or removing it from the package. If the layers of wood are crosshatched or not ranked in discrete sections in the package, remove the wood from the package re-stack and measure accordingly.

3.16 Boxed Firewood

How is it the volume of firewood contained in a box determined?

Follow the Basic Test Procedure in Section 2.3. Define the inspection lot. Use a Category A sampling plan in the inspection; select a random sample; then use the following test procedure to determine lot conformance.

1. Open the box to determine the average height of wood within the box; measure the internal height of the box. Take three measurements (record as "d₁, d₂...etc.") along each end of the stack. Measure from the bottom of a straight edge placed across the top of the box to the highest point on the two outermost top pieces of wood and the center-most top piece of wood. Round measurements down to the nearest 0.5 cm (1/8 in). If pieces are obviously missing from the top layer of wood, take additional height measurements at the highest point of the uppermost pieces of wood located at the midpoints between the three measurements on each end of the stack. Calculate the average height of the stack by averaging these measurements and subtracting from the internal height of the box according to the following formula.

Average Height of Stack = (Internal Height of Box) – (sum of measurements) \div (number of measurements)

2. Determine the average width of the stack of wood in the box by taking measurements at three places along the top of the stack. Measure the inside distance from one side of the box to the other on both ends and in the middle of the box. Calculate the average width.

Average Width =
$$(W_1 + W_2 + W_3) \div (3)$$

3. To determine the average length of the pieces of wood, remove the wood from the box and select the five pieces with the greatest girth. Measure the length of each of the five pieces from center-to-center. Calculate the average length of the five pieces.

Average Length =
$$(L_1 + L_2 + L_3 + L_4 + L_5) \div (5)$$

4. Calculate the volume of the wood within the box. Use dimensions for height, width, and length.

Volume in liters = (height in cm x width in cm x length in cm) \div (1000)

Volume in cubic feet = (height in inches x width in inches x length in inches) \div (1728)

5. For boxes of wood that are packed with the wood ranked in two discrete sections perpendicular to each other, calculate the volume of wood in the box as follows: (1) determine the average height, width, and length as in 1, 2 and 3 above for each discrete section, compute total volume, and (2) total the calculated volumes of the two sections. Take the width measurement for Volume 2 (V₂) from the inside edge of the box adjacent to V₂ to the plane separating V₁ and V₂. Compute total volume by adding Volume 1 (V₁) and V₂ according to the following formula.

Total Volume =
$$V_1 + V_2$$

6. Follow the procedures in "Evaluating Results" in Chapter 2, Section 2.3 to determine lot conformance.

3.17 Crosshatched Firewood

How must the volume of stacked or crosshatched firewood be measured?

Follow the Basic Test Procedure in Section 2.3. Define the inspection lot. Use a Category A sampling plan in the inspection; select a random sample; then use the following test procedure to determine lot compliance.

- 1. Stack the firewood in a ranked and well-stowed geometrical shape that facilitates volume calculations (i.e., rectangular). The number of measurements for each dimension given below is the minimum that should be taken.
- 2. Determine the average measurements of the stack:
 - Height: Start at one end of the stack; measure the height of the stack on both sides at four equal intervals. Calculate and record the average height.
 - Length: Start at the base of the stack; Measure the length of the stack in four equal intervals. Calculate and record the average length.
 - Width: Select the five pieces with the greatest girth. Measure the length of the pieces, calculate and record the average piece length.(3) Calculate Volume:

Volume in liters = (Avg. Height (cm) x Avg. Width (cm) x Avg. Length in (cm)) \div (1,000)

Volume in cubic feet = (Avg. Height (inches) x Avg. Width (inches) x Avg. Length (inches)) ÷ (1,728)

3. Follow the procedures in "Evaluating Results" in Chapter 2, Section 2.3 to determine lot conformance.

3.18 Bundles and Bags of Firewood

How is the volume of bundles and bags of firewood measured?

Follow the Basic Test Procedure in Section 2.3. Define the inspection lot. Use a Category A sampling plan in the inspection; select a random sample; then use the following test procedure to determine lot compliance.

- 1. Average area of ends: secure a strap around each end of the bundle or bag of wood to prevent movement during testing and to provide a definite perimeter. Use two or more straps to secure the wood.
- 2. Set one end of the bundle or bag on tracing paper large enough to cover the end completely. Draw a line around the perimeter of the bundle or bag on the tracing paper.
- 3. Transfer the tracing paper to a template graduated in square centimeters or square inches. Count the number of square inches that are enclosed within the perimeter line. Estimate portions of square centimeters or square inches not completely within the perimeter line to the nearest one-quarter square inch (in²).
- 4. Repeat this process on the opposite end of the bundle or bag.
- 5. Calculate the Average Area.

Average Area =
$$(Area 1 + Area 2) \div 2$$

6. Average length of the pieces of wood: select the five pieces with the greatest girth and measure the length of the pieces. Calculate the average length of the pieces of wood.

Average Length =
$$(L_1 + L_2 + L_3 + L_4 + L_5) \div 5$$

7. Calculate Volume:

Volume in liters = (Average Area (cm 2) x Average Length (cm)) \div (1000)

Volume in cubic feet = (Average Area (in²) x Average Length (in)) \div (1728)

Evaluation of Results

Follow the procedures in "Evaluating Results" in Chapter 2, Section 2.3 to determine lot conformance.

Note: As specified in Table 2-10 in Appendix A, maximum allowable variations for individual packages are not applied to packages of firewood.

Chapter 4. Test Procedures – Packages Labeled by Count, Linear Measure, Area, Thickness, and Combinations of Quantities

4.1 Scope

What types of packaged goods can be tested using these procedures?

Use these procedures to determine the net contents of products sold by count, area, thickness, and linear measure. If a package includes more than one declaration of quantity, each declaration must meet the package requirements.

Can the gravimetric test procedure be used to verify the net quantity of contents of packages labeled by count and linear measure?

Use the gravimetric procedure to test products sold by measure or count if the density of the product does not vary excessively from one package to another.

What procedures may be used if the gravimetric test procedure cannot be used?

Open each package in the sample and measure or count the items.

4.2 Packages Labeled by Count

How are packages tested labeled by count?

If the labeled count is 50 items or less, use Section 4.3. If the labeled count is more than 50 items see Section 4.4.

Can a gravimetric test procedure be used to verify the labeled count of a package?

Yes, if the scale being used is sensitive enough to determine the weight of individual items. Use the following procedures to determine if the sample packages can be tested gravimetrically.

- 1. For packages labeled with a count of 84 or higher, calculate the weight equivalent for the MAV/6 for the labeled count of the package. MAV/6 must be at least equal to one-half scale division on a mechanical scale or one division on a digital scale.
- 2. For packages with a labeled count of 83 or fewer, when each unit weighs at least 2 scale divisions, consider the scale acceptable.

Example: According to Table 2-7 in Appendix A, the MAV is 7 for a package labeled with a count of 250 items. The scale should be capable of measuring differences corresponding to MAV/6 or, in this example, the weight of one item.

- If the scale meets the appropriate requirement, gravimetric testing can be used to determine package count or,
- If the scale does not meet the criteria, count the content in each package in the sample.

4.3 Packages Labeled with 50 Items or Less

Test Procedure

- 1. Follow the Basic Test Procedure in Section 2.3. Define the inspection lot. Use a Category A sampling plan in the inspection; select a random sample; then use the following test procedure to determine lot compliance.
- 2. Open the packages and count the number of items in each. Record the number of packages that contain less than the labeled count.

Evaluation of Results

- 1. For the sample size indicated in column 1 of Table 2-11 Accuracy Requirements for Packages Labeled by Low Count of (50 or less), refer to column 2 to determine the number of packages that are allowed to contain less than the labeled count.
- 2. If the number of packages in the sample that contain less than the labeled count exceeds the number permitted in column 2, the sample and the lot fail to meet the package requirement.

Note: For statistical reasons, the average requirement does not apply to packages labeled by count of 50 or fewer items, and the MAV does not apply to the lot. It only applies to the packages in the sample.

3. Maximum Allowable Variations: The MAVs listed in Table 2-7 MAVs for Packages Labeled by Count define the limits of reasonable variation for an individual package even though the MAV is not directly used in the sampling plan. Individual packages that are undercount by more than the MAV are considered defective. Even if the sample passes, these should be repacked, relabeled, or otherwise handled.

Example: If testing a lot of 160 packages of pencils labeled "50 pencils," choose a random sample of 12 packages from the lot. If the scale cannot discriminate between differences in count, open every package and count the pencils. For example, assume the 12 package counts are: 50, 52, 50, 50, 51, 53, 52, 50, 50, 50, 47, and 50.

Because only one package contains fewer than 50 pencils, the sample passes the test (refer to Table 2-11). However, the package containing 47 pencils should not be introduced into commerce even though the lot complies with the package requirements because it is undercount by more than the MAV (1item) permitted in Table 2-7.

4.4 Packages Labeled by Count of More than 50 Items

Test Procedures

There are two procedures to determine count without opening all packages in the sample. Both use the weight of a counted number of items in the package. If the weight of discrete items or numbers of items in a package varies, the packaged items must be counted rather than weighed.

Equipment

Use a scale that meets the requirements in Chapter 2, Section 2.2 Measurement Standards and Test Equipment.

Audit Procedure

Use this procedure to audit lots of packages labeled by count of more than 50 items, but the precision of this procedure is only \pm 1 percent. Determine the lot compliance on the basis of actual count or the violation procedure.

- 1. Follow the Basic Test Procedure in Section 2.3. Define the inspection lot. Use a Category A sampling plan in the inspection; select a random sample; then use the following test procedure to determine lot compliance.
- 2. Select an initial tare sample according to Chapter 2, Section 2.3.
- 3. Gross weigh the first package in the tare sample and record this weight.
- 4. Select the number of items from the first tare package that weighs the greater:
 - > 10 percent of the labeled count; or
 - a quantity equal to at least 50 minimum divisions on the scale.

Example: Using a scale with 1 g divisions, the selected count must weigh at least 50 g. If a scale with 0.001 lb divisions is used, the selected count must weigh at least 0.05 lb. Record the count and weight.

5. Calculate the weight of the labeled count using the following formula:

Weight of the Labeled Count = (labeled count x weight of items in (step 4)) \div (count of items in (step 4))

Record the result as "labeled count weight."

- 6. Gross weigh the remaining packages of the tare sample and keep contents of opened packages separated in case all of the items must be counted.
- 7. Determine the Average Used Dry Tare Weight of the sample according to Chapter 2, Section 2.3.
- 8. The weight of the labeled count plus the average tare weight represents the "nominal gross weight."
- 9. Subtract the nominal gross weight from the gross weight of the individual packages and record the

(Package error (weight)) = (actual package gross weight) - (nominal gross weight)

10. Convert the package errors in units of weight to count:

Package error (count) = (Package error (weight) x labeled count) ÷ (labeled count weight)

Round any fractional counts up to whole items in favor of the packager. Record the package error in units of count. Compute the average error.

- If the average error is minus, go to the "procedure to use if the inspector suspects the lot violates the package requirements" below
- If the average error is zero or positive, the sample is presumed to conform to the package requirements.

Procedures to use if the inspector suspects the lot violates the package requirements

If possible, use the gravimetric procedure to determine compliance. To minimize the number of packages to be opened, combine the measurement of the weight of the number of units in the package with the determination of tare. Therefore, it will not be necessary to open more packages than the tare sample. If the audit procedure in this section has been used, the possible violation procedure below can be followed with the same sample if package contents have been kept separate and can still be counted. Use the following steps to determine if the sample passes or fails.

- 1. Follow the Basic Test Procedure in Section 2.3. Define the inspection lot. Use a Category A sampling plan in the inspection; select a random sample; then use the following test procedure to determine lot compliance. Use a scale that meets the criteria specified in 4.2.
- 2. Select an initial tare sample according to Chapter 2, Section 2.3.
- 3. Gross weigh the packages selected for the tare sample and record these weights. Open these packages and determine the tare and net weights of the contents, and count the exact number of items in the packages. Record this information.
- 4. Calculate and record the weights of the labeled counts for the first two packages using the formula:

Weight of labeled count = (labeled count) x (contents weight \div contents count)

To avoid round-off errors, carry at least two extra decimal places in the calculation until the weight of the labeled count is obtained. To use the gravimetric procedure, the difference in weights of the labeled counts of the two packages must not exceed one scale division.

- If the difference in weights exceeds this criterion, determine the actual count per package for every package in the sample recording plus and minus errors. Then, follow the procedures in "Evaluating Results" in Chapter 2, Section 2.3, to determine lot conformance.
- If the difference is within the criterion, average the weights of the labeled count and go on to step
- 5. Determine the Average Used Dry Tare Weight of the sample according to provisions in Chapter 2, Section 2.3.
- 6. Determine and record the nominal gross weight by adding the average weight of the labeled count of items in the package (step 4) to the average tare weight (step 5).
- 7. Weigh the remaining packages in the sample and subtract the nominal gross weight from the gross weight of the individual packages and record the errors.

Package Error (weight) = (Actual Package Gross Weight) - (Nominal Gross Weight)

8. Look up the MAV for the package size from Table 2-7 and convert it to weight using the formula:

MAV (weight) = (MAV (count) x Avg. Wt. of Labeled Count (step 4)) ÷ (Labeled Count)

Convert the MAV to dimensionless units by dividing the MAV (weight) by the unit of measure and record.

Evaluation of Results

Follow the procedures in "Evaluation Results" in Chapter 2, Section 2.3 to determine lot conformance.

Convert back to count when completing the report form using following the formula:

Avg. Pkg. Error (count) = (Avg. Pkg. Error (dimensionless units)) x (Unit of Measure) x (Labeled Count) = (Avg. Weight of Labeled Count.)

4.5 Paper Plates and Sanitary Paper Products

How are the labeled dimensions of paper plates and sanitary paper products verified?

Follow the Basic Test Procedure in Section 2.3. Define the inspection lot. Use a Category A sampling plan in the inspection; select a random sample; then use the following procedure to determine lot compliance.

The following procedures are used to verify the size of paper plates and other products. The following procedure may be used to verify the size declarations of other disposable dinnerware.

Note: Do not distort the item's shape during measurement.

The count of sanitary paper products cannot be adequately determined by weighing. Variability in sheet weight and core weight requires that official tests be conducted by actual count. However, weighing can be a useful audit method. These products often declare total area as well as unit count and sheet size. If the actual sheet size measurements and the actual count comply with the average requirements, the total area declaration is assumed to be correct.

Equipment

• Steel tapes and rules. Determine measurements of length to the nearest division of the appropriate tape or rule.

Metric Units:

For labeled dimensions 40 cm or less, Linear Measure: 30 cm in length, 1mm divisions; or a 1 m rule with 0.1mm divisions, overall length tolerance of 0.4 mm.

For labeled dimensions greater than 40 cm, 30 m tape with 1 mm divisions.

> Inch-pound Units:

For labeled dimensions 25 in or less, use a 36 in rule with 1/64 -in or 1/100 in divisions and an overall length tolerance of 1/64 in.

For dimensions greater than 25 in, use a 100 ft tape with 1/16 in divisions and an overall length tolerance of 0.1 in.

Measuring Base

Note: A measuring base may be made of any flat, sturdy material approximately 40 cm (15 in) square. Two vertical side pieces approximately 3 cm (1 in) high and the same length as the sides of the measuring base are attached along two adjoining edges of the measuring base to form a 90° corner. Trim all white borders from two or more sheets of graph paper (10 divisions per centimeter or 20 divisions per inch). Place one sheet on the measuring base and position it so that one corner of graph paper is snug in the corner of the measuring base and vertical sides. Tape the sheet to the measuring base. Overlap other sheets on the first sheet so that the lines of top and bottom sheet coincide, expanding the graph area to a size bigger than

plates to be measured; tape these sheets to the measuring base. Number each line from the top and left side of base plates: 1, 2, 3, etc.

How are paper products inspected?

- 1. Follow the Basic Test Procedure in Section 2.3. Define the inspection lot. Use a Category A sampling plan in the inspection; select a random sample; then use the following test procedure to determine lot compliance.
- 2. Select an initial tare sample according to Chapter 2, Section 2.3.
- 3. Open each package and select one item from each.

Note: Some packages of plates contain a combination of different-sized plates. In this instance, take a plate of each declared size from the package to represent all the plates of that size in the package. For example, if three sizes are declared, select three different plates from each package.

How are paper products measured?

Note: Occasionally, packages of plates declared to be one size contain plates that can be seen by inspection to be of different sizes in the same package. In this instance, select the smallest plate and use the methods below to determine the package error. If the smallest plate is not short measure by more than the MAV, measure each size of plate in the package and calculate the average dimensions.

Example: If 5 plates measure 21.44 cm (8.43 in) and 15 measure 21.74 cm (8.56 in), the average dimension for this package of 20 plates is 21.67 cm (8.53 in).

4. For paper plates: place each item on the measuring base plate (or use the linear measure) with the eating surface down so two sides of the plate touch the sides of the measuring base. For other products, use either the measuring base or a linear measure to determine actual labeled dimensions (e.g., packages of napkins, rolls of paper towels). If testing folded products, be sure that the folds are pressed flat so that the measurement is accurate.

If the measurements reveal that the dimensions of the individual items vary, select at least 10 items from each package. Measure and average these dimensions. Use the average dimensions to determine package error in step 5 below.

5. The package error equals the actual dimensions minus the labeled dimensions.

Evaluation of Results

Follow the procedures in "Evaluating Results" in Chapter 2, Section 2.3 to determine lot conformance.

4.6 Special Test Requirements for Packages Labeled by Linear or Square Measure (Area)

Are there special measurement requirements for packages labeled by dimensions?

Yes, products labeled by length (such as yarn) or area often require the application of tension to the ends of the product in order to straighten the product before measuring. When testing yarn and thread apply tension and use the specialized equipment specified in ASTM D1907-97, "Standard Method of Test for Yarn Number by the Skein Method," in conjunction with the sampling plans and package requirements described in this handbook.

Evaluation of Results

Follow the procedures in "Evaluating Results" in Chapter 2, Section 2.3 to determine lot conformance.

4.7 Polyethylene Sheeting

Which procedures are used to verify the declarations on polyethylene sheeting and bags?

Follow the Basic Test Procedure in Section 2.3. Define the inspection lot. Use a Category A sampling plan in the inspection; select a random sample; then use the following test procedure to determine lot compliance.

Note: Most polyethylene products are sold by length, width, thickness, area, and net weight.

Equipment

- A scale that meets the requirements in Chapter 2, Section 2.2, Measurement Standards and Test Equipment.
- Steel measuring tapes and rules as specified in 4.5.
- Deadweight dial micrometer (or equal) equipped with a flat anvil, 6 mm or (1/4 in) diameter or larger, and a 4.5 mm (3/16 in) diameter flat surface on the head of the spindle. The anvil and spindle head surfaces should be ground and lapped, parallel to within 0.002 mm (0.0001 in), and should move on an axis perpendicular to their surfaces. The dial spindle should be vertical, and the dial should be at least 50 mm (2 in) in diameter. The dial indicator should be continuously graduated to read directly to 0.002 mm (0.0001 in) and should be capable of making more than one revolution. It must be equipped with a separate indicator to indicate the number of complete revolutions. The dial indicator mechanism should be fully jeweled. The frame should be of sufficient rigidity that a load of 1.4 kg (3 lb) applied to the dial housing, exclusive of the weight or spindle presser foot, will not cause a change in indication on the dial of more than 0.02 mm (0.001 in). The indicator reading must be repeatable to 0.0012 mm (0.00005 in) at zero. The mass of the probe head (total of anvil, weight 102 g or (3.6 oz), spindle, etc.) must be 113.4 g (4 oz). The micrometer should be operated in an atmosphere free from drafts and fluctuating temperature and should be stabilized at ambient room temperature before use.
- Gage blocks covering the range of thicknesses to be tested should be used to check the accuracy of the micrometer
- T-square

Test Procedure

- 1. Follow the Basic Test Procedure in Section 2.3. Define the inspection lot. Use a Category A sampling plan in the inspection; select a random sample; then use the following test procedure to determine lot compliance.
- 2. Be sure the product is not mislabeled. Check the label declaration to confirm that all of the declared dimensions are consistent with the required standards. The declaration on sheeting, film, and bags shall be equal to or greater than the weight calculated by using the formulas below. Calculate the final value to four digits and declare to three digits dropping the final digit (e.g., if the calculated value is 2.078 lb, then the declared net weight is truncated to 2.07 lb).

Example Label:

Polyethylene Sheeting

1.8 m (6 ft) x 30.4 m (100 ft)

101.6 µm (4 mil)

5.03 kg (11.1 lb)

- 3. Use the following formulas to compute a target net weight. The labeled weight should equal or exceed the target net weight or the package is not in compliance.
 - > For metric dimensions:

Target Mass in Kilograms = $(T \times A \times D) \div 1000$

Where: T = nominal thickness in centimeters

A = nominal length in centimeters x nominal width (the nominal width for bags is twice the labeled width) in centimeters

D = density in grams per cubic centimeter*

For inch-pound dimensions:

Target Weight in Pounds = $T \times A \times D \times 0.03613$

Where: T = nominal thickness in inches;

A = nominal area; that is the nominal length in inches x nominal width (the nominal width for bags is twice the labeled width) in inches;

D = density in grams per cubic centimeter; 0.03613 is a factor for converting g/cm³ to lb/in³.

*Determined by ASTM Standard D1505-98, "Standard Method of Test for Density of Plastics by the Density Gradient Technique." For the purpose of this handbook, the minimum density shall be 0.92 g/cm³ when the actual density is not known.

Evaluation

1. Perform the calculations as shown in the following samples. If the product complies with the label declaration, go to step (2).

Sample Calculations

> For metric units:

 $(0.01016 \text{ cm x } 547,200 \text{ cm}^2 \text{ x } 0.92 \text{ g/cm}^3) \div 1000 = \text{a target net mass of } 5.11 \text{ kg}$

In this example, the labeled net mass of 5.03 kg does not meet the target net mass, so the product is not in compliance.

For inch-pound units:

 $(0.004 \text{ in}) \times [(100 \text{ ft x } 12 \text{ in}) \times (6 \text{ ft x } 12 \text{ in})] \times 0.03613 \times 0.92 = a \text{ target net weight of } 11.48 \text{ lb}$

In this example, the labeled net weight of 11.1 lb does not meet the target net weight, so the product is not in compliance.

- 2. Select packages for tare samples. Determine and record the gross weights of the initial tare sample.
- 3. Extend the product in the sample packages to their full dimensions and remove by hand all creases and folds.
- 4. Measure the length and width of the product to the closest 3 mm (1/8 in). Make all measurements at intervals uniformly distributed along the length and width of the sample and record the results. Compute the average length and width and record.
 - With rolls of product, measure the length of the roll at three points along the width of each roll and measure the width at a minimum of 10 points along the length of each roll.
 - For folded products, such as drop cloths or tarpaulins, make three length measurements along the width of the sample and three width measurements along the length of the sample.
- 5. Determine and record the average tare weight according to Chapter 2, Section 2.3 Tare Procedures.

Evaluation of Results – Length, Width, and Net Weight

Follow the procedures in "Evaluating Results" in Chapter 2, Section 2.3 to determine the lot conformance requirements for length, width, and weight.

- If the sample fails to meet the package requirements for any of these declarations, no further measurements are necessary. The lot fails to conform.
- If the sample meets the package requirements for the declarations of length, width, and weight, go to step 6 to verify the thickness declaration.
- 6. Measure the thickness of the plastic sheet with a micrometer using the following guide. Place the micrometer on a solid level surface. If the dial does not read zero with nothing between the anvil and the spindle head, set it at zero. Raise and lower the spindle head or probe several times; it should indicate zero each time. If it does not, find and correct the cause before proceeding.
 - Take measurements at five uniformly distributed locations across the width at each end and five locations along each side of each roll in the sample. If this isn't possible, take measurements at five uniformly distributed locations across the width at one end and along the length on one side of the product for each package in the sample.

When measuring the thickness, place the sample between the micrometer surfaces and lower the spindle head or probe near, but outside, the area where the measurement will be made. Raise the spindle head or probe a distance of 0.008 mm to 0.01 mm (0.0003 in to 0.0004 in) and move the sheet to the measurement position. Drop the spindle head onto the test area of the sheet.

Read the dial thickness two seconds or more after the drop, or when the dial hand or digital readout becomes stationary. This procedure minimizes small errors that may occur when the spindle head or probe is lowered slowly onto the test area.

For succeeding measurements, raise the spindle head 0.008 mm to 0.01 mm (0.0003 in to 0.0004 in) above the rest position on the test surface, move to the next measurement location, and drop the spindle head onto the test area. Do not raise the spindle head more than 0.01 mm (0.0004 in) above its rest position on the test area. Take measurements at least 6 mm (1/4 in) or more from the edge of the sheet.

Repeat Step 6 above on the remaining packages in the sample and record all thickness measurements. Compute and record the average thickness for the individual package and apply the following MAV requirements.

Evaluation of Results – Individual Thickness

- No measured thickness of polyethylene labeled 25 μm (1 mil) or greater should be less than 80 percent of the labeled thickness.
- No measured thickness of polyethylene labeled less than 25 μm (1 mil) should be less than 65 percent
 of the labeled thickness.

Count the number of values that are smaller than specified MAVs [0.8 x labeled thickness if 25 μ m (1 mil) or greater or 0.65 x labeled thickness, if less than 25 μ m (1 mil)]. If the number of values that fail to meet the thickness requirement exceeds the number of MAVs permitted for the sample size, the lot fails to conform to requirements. No further testing of the lot is necessary. If the number of MAVs for thickness measurements is less than or equal to the number permitted for the sample size, go on to Evaluation of Results - Average Thickness.

Evaluation of Results - Average Thickness

The average thickness for any single package should be at least 96 percent of the labeled thickness. This is an MAV of 4 percent. Circle and count the number of package average thickness values that are smaller than 0.96 x labeled thickness. If the number of package average thicknesses circled exceeds the number of MAVs permitted for the sample size, the lot fails to conform to requirements. No further testing of the lot is necessary. If the number of MAVs for package average thickness is less than or equal to the number of MAVs permitted for the sample size, proceed to "Evaluating Results" in Section 2.3 of Chapter 2 to determine if the lot meets the package requirements for average thickness.

4.8 Packages Labeled by Linear or Square (Area) Measure

Equipment

• Use a scale that meets the requirements in Chapter 2, Section 2.2 Measurement Standards and Test Equipment. Calculate the length or area of packaged product corresponding to MAV/6. If there is no suitable weighing device, all of the packages in the sample must be opened and measured.

Steel tapes and rules as specified in 4.5

• T-square

Test Procedure

- 1. Follow the Basic Test Procedure in Section 2.3. Define the inspection lot. Use a Category A sampling plan in the inspection; select a random sample; then use the following test procedure to determine lot compliance.
- 2. Select an initial tare sample according to Chapter 2, Section 2.3.
- 3. Gross weigh the first package in the tare sample and record this weight.

- 4. Determine and record the measurements (to the nearest division of the appropriate tape or rule) of the packaged goods (length, width, area--depending upon which dimensions are declared on the label) and weigh the goods from the first package opened for tare determination.
 - Calculate and record the weight of the labeled measurements using the following formula:
 - Weight of the labeled measurement = (labeled measurement) x (contents weight) \div (contents measurement)
 - Look up and record the MAV in units of length or area measure (given in Table 2-8)

Note: See Table 2.10 Exceptions to the MAVs for textiles, and polyethylene sheeting and film.

- 5. Determine and record the tare weight of the first package opened.
- 6. Determine and record the measurements (length, width, area—depending upon which dimensions are declared on the label) of the product in the second package chosen for tare determination (to the nearest division of the appropriate tape or rule). Determine and record the tare weight of this package.
- 7. Calculate and record the weight of the labeled measurement for the second package using the following formula:

Weight of the labeled measurement = (labeled measurement) x (contents weight \div contents measurement)

The weights of the labeled measurement for two packages must not differ by more than one division on the scale. If they do, open all packages in the sample, measure individually, and compare them against the labeled measure to determine the package errors. If the criterion is met, go to step 8.

- 8. Calculate the average weight of the labeled measurement and record.
- 9. Determine and record the average tare weight according to Chapter 2, Section 2.3 Tare Procedures.
- 10. Compute and record the nominal gross weight by adding the average weight of the labeled measurements to the average tare weight.
- 11. Compute package errors according to the following formula:

Package error (weight) = (actual package gross weight) - (nominal gross weight)

12. Convert the MAV to units of weight using the following formula:

MAV (weight) = (avg. wt. of label measurements x MAV (length)) \div (labeled measurements)

Convert the MAV to dimensionless units by dividing the MAV (weight) by the unit of measure and record.

Evaluation of Results

Follow the procedure in "Evaluating Results" in Chapter 2, Section 2.3 to determine lot conformance.

Convert back to dimensions when completing the report form using following the formula:

Avg. Pkg. Error (dimension) = (Avg. Pkg. Error (dimensionless units)) x (Unit of Measure) x (Labeled unit of measure) ÷ (Avg. Weight of Labeled dimension.)

4.9 Baler Twine - Test Procedure for Length

Equipment

- A scale that meets the requirements in Chapter 2, Section 2.2 Measurement Standards and Test Equipment, except a scale with 0.1 g (0.0002 lb) increments must be used for weighing twine samples. The recommended minimum load for weighing samples is 20 divisions.
- Steel tapes and rules specified in Section 4.5
- A hand-held straight-face spring scale of at least 5 kg (10 lb) capacity or a cordage testing device that applies the specified tension to the twine being measured. When measuring twine samples or total roll length, apply 5 kg (10 lb) of tension to the twine.

Test Procedure

Follow the Basic Test Procedure in Section 2.3. Define the inspection lot. Use a Category A sampling plan in the inspection; select a random sample; then use the following test procedure to determine lot compliance.

- 1. Select packages for tare samples. Determine gross weights of the initial tare sample and record. Open the tare samples. Use the procedures for tare determination in Tare Procedures of Chapter 2, Section 2.3 to compute the average tare weight and record this value.
- 2. Procedure for obtaining twine samples: randomly select four balls of twine from the packages that were opened for tare.

From each of the four balls of twine:

- Measure and discard the first 10 m (33 ft) of twine from each roll. Accurate measurement requires applying tension to the ends of the twine before measuring in order to straighten the product.
- Take two 30 m (100 ft) lengths of twine from inside each roll.
- Weigh and record the weight of each piece separately and record the values. Compare the weight values to determine the variability of the samples. If the individual weights of the eight twine samples vary by more than one division on the scale, use one of the following steps: If the lot is short, determine the actual length of the lightest-weight roll found in the lightest-weight package of the lot to confirm that the weight shortages reflect the shortages in the length of the rolls; or, determine the average weight-per-unit of measure by taking ten 30 m (100 ft) lengths from inside the lightest weight package. Use this value to recalculate its length and determine lot compliance.
- 3. Weigh all of the sample lengths together and record the total value. Determine the total length of the samples (240 m or 800 ft, unless more than eight sample-lengths were taken) and record the value. Compute the average weight-per-unit-of-length by dividing the total weight by the total length of the pieces.
- 4. Determine the MAV for a package of twine (refer to Table 2-8. Maximum Allowable Variations for Packages Labeled by Length, Width, or Area).
 - Record the total declared package length.

- Multiply the MAV from Table 2-8 times the total package length to obtain the MAV for length and record this value.
- Multiply the weight per unit of length (from step 3) times the MAV for the total declared package length to obtain the MAV by weight and record this value.
- Convert the MAV to dimensionless units and record.
- 5. Calculate the nominal gross weight and record. Follow the Basic Test procedure in Section 2.3 to determine individual package errors. Determine errors using the following formula:
 - Package error (weight) = (package gross weight) (nominal gross weight).
 - To convert the Package error in weight back to length, divide the weight by the average weightper-unit-of-length.

Evaluation of Results

Follow the procedures in "Evaluating Results" in Chapter 2, Section 2.3 to determine lot compliance.

4.10 Procedure for Checking the Area Measurement of Chamois

Chamois is natural leather made from skins of sheep and lambs that has been oil-tanned. Chamois are irregularly shaped, which makes area measurement difficult. Because of these characteristics, an accurate area determination can only be made using an internationally recognized method of conditioning (rehydrating) and measurement. Chamois is produced in a wet manufacturing process, so it has high moisture content at time of measurement. Chamois is hydroscopic; therefore, its dimensions and total area change as it loses or absorbs moisture. It is also subject to wrinkling. Because of the variation of the thickness and density, and therefore the weight per unit area of chamois, an estimated gross weight procedure cannot be used to verify the labeled area declaration.

Standard Test Conditions: As with all hydroscopic products, reasonable variations in measure must be allowed if caused by ordinary and customary exposure to atmospheric conditions that normally occur in good distribution practice. Both Federal and international standards specify procedures to restore the moisture content of chamois so that tests to verify dimensions and area can be conducted.

Federal Test Method Standard 311 "Leather, Methods of Sampling and Testing," (January 15, 1969) defines the standard atmospheric condition for chamois as 50 ± 4 percent relative humidity and (23 ± 2) °C (73.4 ± 3.6) °F). The chamois is considered to be at equilibrium moisture when the difference in two successive weighings, made at 1 hour intervals, is no greater than 0.25 percent (e.g., the maximum change in weight on a 100-g sample in two successive weighings is less than 0.25 g (250 mg).

Test Procedures

The area of chamois is verified using a two-stage test procedure. The first stage is a field audit using the template test procedure. This test is used for field audits because it is simpler to perform and does not require the chamois to be conditioned. The field audit is used to identify chamois that are potentially under measure. It is not as accurate as the gravimetric procedure because some error results from reading the area from the template. The gravimetric procedure should be used for compliance testing because it includes conditioning (rehydrating) the chamois.

Template Test Method (for field audits)

Select a random sample of chamois and use the Template Procedure (below) to determine the area of each sample. Chamois is labeled in uniform sizes in terms of square decimeters and square feet, and are sized in

increments of 1/4 square feet (e.g., 1 sq ft, 1-1/4 sq ft, and 1-1/2 sq ft). Separate the chamois into different sizes and define the inspection lot by specific sizes.

Equipment

Use a transparent, flexible template that is graduated in square centimeters or square inches and that has been verified for accuracy. The template must be large enough to completely cover the chamois under test.

Template Procedures

1. Template Procedure

Place the template over the chamois specimen on a smooth surface. Determine the area by counting the number of squares that cover the surface of the chamois. Estimate parts of the template that do not completely cover the chamois by adding the number of partially covered blocks (See Figure 1). Compute the total area and go to Evaluation to determine if further action is necessary.

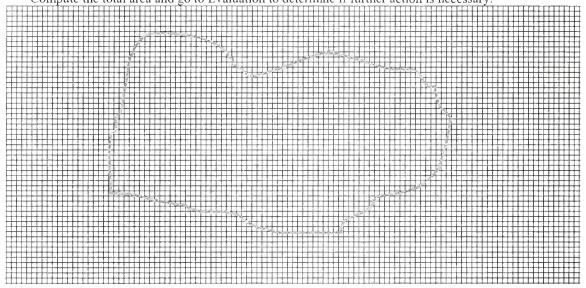


Figure 1.

First Stage - Decision Criteria

If the average minus error exceeds 3 percent of the labeled area, the chamois may not be labeled accurately. To confirm the finding, the sample must be taken to a laboratory for conditioning and testing using the gravimetric test procedure.

2. Gravimetric Procedure for Area Measurement

This test cannot be performed in the field because the samples must be conditioned with water prior to testing. This method is intended for use in checking full or cut skins, or pattern shapes. Open and condition all of the packages in the sample prior to determining their area on the recommended paper. Conditioning and verifying chamois can be accomplished without destroying the product. When successful tests are completed, the chamois may be repackaged for sale, so do not destroy the packaging material.

Equipment

Scale with a capacity of 1 kg that is accurate to at least ± 0.01 g and a load receiving element of
adequate size to properly hold the chamois

- Atomizer or trigger type sprayer and sealable, airtight polyethylene bags
- Medium weight drawing paper (e.g., Drawing Paper, Medium Weight (100 lb), regular surface or comparable)
- Household iron with low temperature settings 30 °C to 40 °C (86 °F to 104 °F)
- Rule or tape that is graduated in centimeters or inches
- Instrument for cutting paper (razor blade, scissors, or cutting board)

Sample Conditioning

- 1. Remove each sample from its packages weigh and record each weight. Using an atomizer-type sprayer, spray water in the amount of 25 percent of the weight of each skin uniformly over its area. Place wetted chamois in an airtight polyethylene bag; seal the bag, and leave it in this condition at room temperature for 24 hours.
- 2. Open the bag; remove the chamois; reweigh the chamois to confirm that it retained maximum moisture. This is done by confirming that the difference in the two consecutive weighings conducted an hour apart does not exceed 0.25 percent).
- 3. Place the chamois flat on a continuous piece of drawing paper. To remove wrinkles and make the chamois lie flat, use a normal domestic iron that is heated to a maximum of 30 °C to 40 °C (86 °F to 104 °F). Place the iron on the bottom of the skin, and iron the skin up the center to the top. Then, iron the skin from the center out to each side. Iron until the skin is fully extended and perfectly flat.

Measurement

- 1. Immediately after ironing, carefully draw around the outline of the skin on the paper. Remove the skin; carefully cut along the outline of the skin; weigh the cutout pattern, and record to the nearest 0.1 g as Sample Weight 1 (W1).
- 2. Lay out the pattern and cut an accurately measured rectangle of a size not less than one-half the area of the pattern. Weigh the cut-out rectangle and record the weight to the nearest 0.1 g as Sample Weight 2 (W2). Calculate the area of the rectangle cut from the patterns by multiplying length by width and record as Area (A) in centimeters or square inches.
 - For metric units calculate the area of the original skin being checked as follows:

 $W1/W2 \times A = Skin Area in cm^2/100 = Area in square decimeters$

For inch-pound units - calculate the area of the original skin being checked as follows:

 $W1/W2 \times A = Skin Area in square inches /144 = Area in Square Feet$

Evaluation of Results

Compute the average error for the sample and follow the procedures in "Evaluating Results" Chapter 2, in Section 2.3 to determine lot conformance.

The MAV for area declarations on chamois is three (3) percent of the labeled area as specified in Table 2-8.

NIST Handbook 133 Fouth Edition Index

Aerosol Containers, 14 Assistance in Testing Operations, 6 Average Requirement, 3 Baler Twine, 64 Basic Inspection Procedure and Record Keeping, Basic Test Procedure, 7 Borax, 19 Items, 54 Boxed Firewood, 50 Bundles and Bags of Firewood, 51 Calculations, 18 Caulking Compounds, 37 Chamois, 65 Peat Moss, 39 coffee, 14 Point of Pack.2 Count, 53 Crosshatched Firewood, 51 Decreasing-Load Test, 9 Stemware, 31 Defoaming agent, 25 reasonable variation, 4 Determining the Net Contents of Compressed Gas in Cylinders, 47 Drained Weight, 22 Drained Weight for Glazed or Frozen Foods, 22 Retail, 2 Evaluating Results, 16 Return to Zero, 10 flour, 4 Sampling Plans, 4 Fresh Oysters, 45 Scope, 2 Frozen Foods, 22 Shift Test, 9 Good Measurement Practices, 6 Goods Labeled by Capacity, 30 Gravimetric Test Procedure for Checking the Net Tare Procedures, 13 Contents of Packaged Goods, 7 Gravimetric Test Procedure for Liquids, 25 Volume, 49 Health and Safety, 6 Ice Cream Novelties, 42 Weight, 48 Increasing-Load Test, 9 Individual Package Requirement, 4 Compounds, 37 initial tare sample, 14 Inspection Lot, 3 Unused Dry Tare, 13 Used Dry Tare, 13 Linear Measure, Area, Thickness. and Combinations of Quantities, 53 vacuum-packed, 14 Maximum Allowable Variation, 4 Mayonnaise and Salad Dressing, 29 Measurement Standards and Test Equipment, 6

milk, 24

Moisture Allowances, 17

Moisture Loss or Gain, 4

Mulch and Soils Labeled by Volume, 40 Nominal Gross Weight, 15 Other Volumetric Test Procedures, 28 package errors for the tare sample packages, 16 Package Requirements, 3 Packages Labeled by Count, 53 Packages Labeled by Count of More than 50 Packages Labeled by Volume, 24 Packages Labeled with 50 Items or Less, 54 Paper Plates and Sanitary Paper Products, 57 Polyethylene Sheeting, 59 Pressed and Blown Glass Tumblers and reference temperature, 24 Regulatory Agencies Responsible for Package Regulations and Applicable Requirements, 5 Special Test Requirements for Packages Labeled by Linear or Square Measure (Area), 58 Test Procedure for Cylinders Labeled by Test Procedure For Cylinders Labeled By Testing Viscous Materials - Such As Caulking The Determination of Drained Weight, 21 Volumetric Headspace Test Procedure, 29 Volumetric Test Procedure for Liquids, 28 Volumetric Test Procedure for Paint, Varnish, and Lacquers - Non-aerosol, 32 Wet Tare, 13

Wholesale, 2

Appendix A – Tables

	encies Responsible for Packag	NIST Handbook 133	Table of Maximum
Commodity	Responsible Agency	Sampling Plans	Allowable Variations
Meat and Poultry	U.S. Department of Agriculture/ Food Safety and Inspection Service and State and local weights and measures.	1. Use Table 2-1. Sampling Plans for Category A to test packages at other than point of pack. 2. Use Table 2-2. Sampling Plans for Category B to test packages in Federally inspected meat and poultry plants.	Table 2-9. U.S. Department of Agriculture, Meat and Poultry, Groups and Lower Limits for Individual Packages.
Foods, drugs, and cosmetics subject to the Food, Drug, and Cosmetic Act including those packaged at the retail store level that have been in interstate commerce (e.g., seafood) or those made with ingredients that have been in interstate commerce. Food products not subject to the Federal Food, Drug, and Cosmetic Act, including meat and poultry products packaged at the retail store level. Non-food Consumer Products Non-food Consumer Products Alcohol and Tobacco Products Pesticides	U.S. Food and Drug Administration and State and local weights and measures. http://www.fda.gov State and local weights and measures. http://www.mst.gov/owm Federal Trade Commission http://www.ftc.gov State and local weights and measures. U.S. Bureau of Alcohol, Tobacco, and Firearms and State and local weights and measures. http://www.atf.treas.gov U.S. Environmental Protection Agency and State and local weights and measures.	Use Table 2-1. Sampling Plans for Category A to test packages at all locations	Table 2-5. MAVs for Packages Labeled by Weight Table 2-6. MAVs for Packages Labeled by Liquid or Dry Volume. Table 2-7. MAVs for Packages Labeled by Count Table 2-8. MAVs for Packages Labeled by Length (Width) or Area. Table 2-10. Exceptions to the MAVs for Textiles, Polyethylene Sheeting and Film, Mulch and Soil Labeled by Volume, Packaged Firewood, and Packages Labeled by Count with Less than 50 Items.

		Table 2-1. Sampling	Plans for Category A		
1	2	3	4	5	6
Incorporation I of	Samula	Sample Connection	Number of Minus	Initial Tare Sar	nple Size**
Inspection Lot Size	Sample Size	Sample Correction Factor	_	Glass and Aerosol Packages	All Other Packages
1	1	Apply MAV			
2	2	8.984			
3	3	2.484			
4	4	1.591	0*		
5	5	1.241			
6	6	1.050			
7	7	0.925		2	
8	8	0.836	0*	2	2
9	9	0.769			
10	10	0.715			
11	11	0.672			
12 to 250	12	0.635			
251 to 3,200	24	0.422		3	
More than 3,200	48	0.291	1*	3	

^{*}For mulch and soils packaged by volume, see Table 2-10. Exceptions to the Maximum Allowable Variations – 1 package may exceed the MAV for every 12 packages in the sample.

^{**}If sample size is 11 or less, the initial tare sample size and the total tare sample size is 2 samples. (Amended 2001)

For I		pling Plans for Category B	ants Only
1	2	3	4
Inspection Lot Size	Sample Size	Initial Tare Sample Size	Number of Packages Allowed to Exceed the MAVs in Table 2-9
250 or Less	10	2	0
251 or More	30	5	0

Table 2-3. Category A – Total Number of Packages to be Opened for Tare Determination Numbers Include those Packages Opened for Initial Tare Sample

Ratio of Rc/Rt		Total Numb	er of Packages in	n Tare Sample	
Sample Size	12	2	24	48	
Initial Tare Sample Size	2	2	3	2	3
If range of tare equals "zero," use Initial Tare Sample Size. If the ratio is "zero" based on a "zero" range of net weight open all of the packages in the sample.	2	2	3	2	3
If the ratio is greater than 0 but less than or equal to 0.2	12	24	24	48	48
0.21 to 0.60	12	24	24	48	48
0.61 to 0.70	12	24	24	47	47
0.71 to 0.80	12	23	23	47	47
0.81 to 1.00	12	23	23	46	46
1.01 to 1.10	11	23	23	46	46
1.11 to 1.20	11	23	23	45	45
1.21 to 1.30	11	22	22	45	45
1.31 to 1.50	11	22	22	44	44
1.51 to 1.60	11	22	22	43	43
1.61 to 1.70	11	21	21	42	42
1.71 to 1.80	10	21	21	42	42
1.81 to 1.90	10	21	21	41	41
1.91 to 2.00	10	20	20	41	41
2.01 to 2.10	10	20	20	40	40
2.11 to 2.20	10	20	20	39	39
2.21 to 2.30	10	19	19	39	39
2.21 to 2.30 2.31 to 2.40	9	19	19	38	38
2.41 to 2.50	9	19	19	37	37
2.51 to 2.60	9	18	18	37	37
2.61 to 2.70	9	18	18	36	36
2.71 to 2.80	9	18	18	35	35
2.81 to 2.90	9	17	17	34	34
2.91 to 3.00	8	17	17	34	34
3.01 to 3.10	8	17	17	33	33
3.11 to 3.30	8	16	16	32	32
3.31 to 3.40	8	16	16	31	31
3.41 to 3.50	8	15	15	30	30
3.51 to 3.60	7	15	15	30	30
3.61 to 3.70	7	15	15	29	29
3.71 to 3.90	7	14	14	28	28
3.91 to 4.00	7	14	14	27	27
4.01 to 4.10	7	13	13	27	27
4.11 to 4.20	7	13	13	26	26
4.21 to 4.30	6	13	13	25	25
4.31 to 4.40	6	12	12	25	25
4.41 to 4.60	6	12	12	24	24
4.61 to 4.70	6	12	12	23	23
4.71 to 4.80	6	11	11	23	23
4.81 to 4.90	6	11	11	22	22
4.91 to 5.00	5	11	11	22	22

to Next Page for Additional Values.

Table 2-3. (Continued)

Category A – Total Number of Packages to be Opened for Tare Determination

Numbers Include those Packages Opened for Initial Tare Sample

Ratio of Rc/Rt	Total Number of Packages in Tare Sample				
Sample Size	12	2	24	48	
Initial Tare Sample Size	2	2	3	2	3
5.01 to 5.10	5	11	11	21	21
5.11 to 5.20	5	10	10	21	21
5.21 to 5.40	5	10	10	20	20
5.41 to 5.60	5	10	10	19	19
5.61 to 5.70	5	9	9	19	19
5.71 to 5.80	5	9	9	18	18
5.81 to 5.90	4	9	9	18	18
5.91 to 6.10	4	9	9	17	17
6.11 to 6.20	4	8	8	17	17
6.21 to 6.50	4	8	8	16	16
6.51 to 6.70	4	8	8	15	15
6.71 to 6.80	4	7	7	15	15
6.81 to 7.00	4	7	7	14	14
7.01 to 7.20	3	7	7	14	14
7.21 to 7.40	3	7	7	13	13
7.41 to 7.60	3	6	6	13	13
7.61 to 8.00	3	6	6	12	12
8.01 to 8.20	3	6	6	11	11
8.21 to 8.50	3	5	5	11	11
8.51 to 8.80	3	5	5	10	10
8.81 to 9.00	2	5	5	10	10
9.01 to 8.30	2	5	5	9	9
9.31 to 8.70	2	4	4	9	9
9.71 to 10.40	2	4	4	8	8
10.41 to 10.90	2	4	4	7	7
10.91 to 11.30	2	3	3	7	7
11.31 to 12.50	2	3	3	6	6
12.51 to 13.20	2	3	3	5	5
13.21 to 13.90	2	2	3	5	5
13.91 to 16.00	2	2	3	4	4
16.01 to 19.10	2	2	3	3	3
19.11 to 19.20	2	2	3	2	3
Initial Tare Sample Size	2	2	3	2	3

Table 2-4. Category B – Total Number of Packages to be Opened for Tare Determination Numbers Include those Packages Opened for Initial Tare Sample

Ratio of Rc/Rt	Total Number of Pa	ckages in Tare Sample
Sample Size	10	30
Initial Tare Sample Size	2	5
If the ratio is zero, based on a "zero" range of tare, use Initial Tare Sample Size. If the ratio is "zero" based on a "zero" range of net weight, open all the packages in the sample.	2	5
If the ratio is greater than 0 but less than or equal to 0.2	10	30
0.21 to 0.40	10	29
0.41 to 0.60	10	28
0.61 to 0.80	9	26
0.81 to 1.00	8	24
1.01 to 1.20	8	23
1.21 to 1.40	7	21
1.41 to 1.60	7	19
1.61 to 1.80	6	17
1.81 to 2.00	5	15
2.01 to 2.20	5	14
2.21 to 2.40	5	13
2.41 to 2.60	4	12
2.61 to 2.80	4	11
2.81 to 3.00	4	10
3.01 to 3.20	3	9
3.21 to 3.60	3	8
3.61 to 3.80	3	7
3.81 to 4.40	2	6
If the ratio is greater than 4.40, use the Initial Tare Sample Size	2	5

Table 2-5. Maximum Allowable Variations (MAVs) for Packages Labeled by Weight
Do Not Use This Table for Meat and Poultry Products subject to USDA Regulations – Use Table 2.9

For Polyethylene Sheeting and Film, see Table 2-10. Exceptions to the MAVs
--

rot rotyethylene Sheeting and rith, see	Table 2-10. Exceptions to the WAYS
Labeled Quantity	Maximum Allowable Variations
Less than 36 g, 0.08 lb, or 1.28 oz	10 percent of labeled quantity
36 g or more to 54 g	4 g
0.08 lb or more to 0.12 lb	0.008 lb
1.28 oz or more to 1.92 oz	1/8 oz
More than 54 g to 82 g	5 g
More than 0.12 lb to 0.18 lb	0.012 lb
More than 1.92 oz to 2.88 oz	3/16 oz
More than 82 g to 118 g	7 g
More than 0.18 lb to 0.26 lb	0.016 lb
More than 2.88 oz to 4.16 oz	1/4 oz
More than 118 g to 154 g	9 g
More than 0.26 lb to 0.34 lb	0.020 lb
More than 4.16 oz to 5.44 oz	5/16 oz
More than 154 g to 209 g	11 g
More than 0.34 lb to 0.46 lb	0.024 lb
More than 5.44 oz to 7.36 oz	3/8 oz
More than 209 g to 263 g	13 g
More than 0.46 lb to 0.58 lb	0.028 lb
More than 7.36 oz to 9.28 oz	7/16 oz
More than 263 g to 318 g	15 g
More than 0.58 lb to 0.70 lb	0.032 lb
More than 9.28 oz to 11.20 oz	½ oz
More than 318 g to 381 g	16 g
More than 0.70 lb to 0.84 lb	0.036 lb
More than 11.20 oz to 13.44 oz	9/16 oz
More than 381 g to 426 g	18 g
More than 0.84 lb to 0.94 lb	0.04 lb
More than 13.44 oz to 15.04 oz	5/8 oz
More than 426 g to 490 g	20 g
More than 0.94 lb to 1.08 lb	0.044 lb
More than 15.04 oz to 17.28 oz	11/16 oz
More than 490 g to 572 g	22 g
More than 1.08 lb to 1.26 lb	0.048 lb
More than 572 g to 635 g	24 g
More than 1.26 lb to 1.40 lb	0.052 lb
More than 635 g to 698 g	25 g
More than 1.40 lb to 1.54 lb	0.056 lb
More than 698 g to 771 g	27 g
More than 1.54 lbto 1.7 lb	0.060 lb
More than 771 g to 852 g	29 g
More than 1.7 lb to 1.88 lb	0.064 lb
More than 852 g to 971 g	32 g
More than 1.88 lb to 2.14 lb	0.070 lb
More than 971 g to 1.125 kg	35 g
More than 2.14 lb to 2.48 lb	0.078 lb
More than 1.125 kg to 1.350 kg	40 g
More than 2.48 lb to 2.76 lb	0.086 lb
More than 1.350 kg to 1.60 kg	45 g
More than 2.76 lb to 3.20 lb	0.094 lb

Continued - Table 2-5. Maximum Allowable Variations (MAVs) for Packages Labeled by Weight
Do Not Use This Table for Meat and Poultry Products Subject to USDA-Regulations. Use Table 2.9 for USDA
Regulated Products

Labeled Quantity	Maximum Allowable Variations (MAVs)
More than 1.60 kg to 1.80 kg	50 g
More than 3.20 lb to 3.90 lb	0.11 lb
More than 1.80 kg to 2.10 kg	55 g
More than 3.90 lb to 4.70 lb	0.12 lb
More than 2.10 kg to 2.64 kg	65 g
More than 4.70 lb to 5.80 lb	0.14 lb
More than 2.64 kg to 3.08 kg	70 g
More than 5.80 lb to 6.80 lb	0.15 lb
More than 3.08 kg to 3.80 kg	80 g
More than 6.80 lb to 7.90 lb	0.17 lb
More than 3.80 kg to 4.40 kg	85 g
More than 7.90 lb to 9.40 lb	0.19 lb
More than 4.40 kg to 5.20 kg	100 g
More than 9.40 lb to 11.70 lb	0.22 lb
More than 5.20 kg to 6.80 kg	115 g
More than 11.70 lb to 14.30 lb	0.25 lb
More than 6.80 kg to 8.20 kg	130 g
More than 14.30 lb to 17.70 lb	0.28 lb
More than 8.20 kg to 10.60 kg	145 g
More than 17.70 lb to 23.20 lb	0.31 lb
More than 10.60 kg to 14.30 kg	170 g
More than 23.20 lb to 31.60 lb	0.37 lb
More than 14.30 kg to 19.25 kg	200 g
More than 31.60 lb to 42.40 lb	0.44 lb
More than 19.25 kg to 24.70 kg	230 g
More than 42.40 lb to 54.40 lb	0.50 lb
More than 24.70 kg	2
More than 54.40 lb	2 percent of labeled quantity

Table 2-6. Maximum Allowable Variations for Packages Labeled by Liquid and Dry Volume

Do Not Use This Table for Meat and Poultry Products Subject to USDA Regulations For Mulch, see Table 2-10. Exceptions to the Maximum Allowable Variations

Use Table 2-9 for USDA- Regulated Products

Labeled Quantity	Maximum Allowable Variations (MAVs)
3 mL or less	0.5 mL
0.5 fl oz or less	0.5 mL
0.18 cu in or less	0.03 cu in
More than 3 mL to 8 mL	1 mL
More than 0.18 cu in to 0.49 cu in	0.06 cu in
More than 8 mL to 15 mL	1.5 mL
More than 0.49 cu in to 0.92 cu in	0.09 cu in
More than 15 mL to 22 mL	2 mL
More than 0.5 fl oz to 0.75 fl oz	0.06 fl oz
More than 0.92 cu in to 1.35 cu in	0.11 cu in
More than 22 mL to 67 mL	3.5 mL
More than 0.75 fl oz to 2.25 fl oz	0.13 fl oz
More than 1.35 cu in to 4.06 cu in	0.13 H 02 0.23 cu in
More than 67 mL to 126 mL	5.5 mL
More than 2.25 fl oz to 4.25 fl oz	0.19 fl oz
More than 4.06 cu in to 7.67 cu in	0.34 cu in
More than 126 mL to 170 mL	7.5 mL
More than 4.25 fl oz to 5.75 fl oz	0.25 fl oz
More than 7.67 cu in to 10.38 cu in	0.45 cu in
More than 170 mL to 222 mL	9 mL
More than 5.75 fl oz to 7.50 fl oz	0.31 fl oz
More than 10.38 cu in to 13.54 cu in	0.56 cu in
More than 222 mL to 347 mL	11 mL
More than 7.50 fl oz to 11.75 fl oz	0.38 fl oz
More than 13.54 cu in to 21.21 cu in	0.68 cu in
More than 347 mL to 503 mL	15 mL
More than 11.75 fl oz to 17 fl oz	0.5 fl oz
More than 21.21 cu in to 30.68 cu in	0.9 cu in
More than 503 mL to 621 mL	18 mL
More than 17 fl oz to 21 fl oz	0.63 fl oz
More than 30.68 cu in to 37.90 cu in	1.13 cu in
More than 621 mL to 798 mL	22 mL
More than 21 fl oz to 27 fl oz	0.75 fl oz
More than 37.90 cu in to 48.73 cu in	1.35 cu in
More than 77.90 cu in to 48.73 cu in More than 798 mL to 917 mL	26 mL
More than 27 fl oz to 31 fl oz	0.88 fl oz
More than 48.73 cu in to 55.95 cu in	1.58 cu in
More than 917 mL to 1.153 L	30 mL
More than 31 fl oz to 39 fl oz	1 fl oz
More than 55.95 cu in to 70.38 cu in	1.8 cu in
More than 1.153 L to 1.627 L	37 mL
More than 39 fl oz to 55 fl oz	1.25 fl. Oz.
70.38 cu in or more to 99.26 cu in	2.26 cubic inch
More than 1.627 L to 2.041 L	44 mL
More than 55 fl oz to 69 fl oz	1.5 fl oz
More than 99.26 cu in to 124.5 cu in	2.71 cu in

Table 2-6. Continued – Maximum Allowable Variations (MAVs) for Packages Labeled by Volume
Do Not Use This Table for Meat and Poultry Products Subject to USDA Regulations – Use Table 2-9
For Mulch, see Table 2-10. Exceptions to the Maximum Allowable Variations

Labeled Quantity	Maximum Allowable Variations (MAVs)
More than 2.041 L to 2.514 L	52 mL
More than 69 fl oz to 85 fl oz	1.75 fl oz
More than 124.5 cu in to 153.4 cu in	3.2 cu in
More than 2.514 L to 3.046 L	59 mL
More than 85 fl oz to 103 fl oz	2 fl oz
More than 153.4 cu in to 185.9 cu in.	3.6 cu in
More than 3.046 L to 4.732 L	74 mL
More than 103 fl oz to 160 fl oz	2.5 fl oz
More than 185.9 cu in to 288.8 cu in	4.5 cu in
More than 4.732 L to 5.489 L	89 mL
More than 160 fl oz to 185.6 fl oz	3 fl oz
More than 288.8 cu in to 335 cu in.	5.4 cu in
More than 5.489 L to 7.098 L	104 mL
More than 185.6 fl oz to 240 fl oz	3.5 fl oz
More than 335 cu in to 443.1 cu in	6.3 cu in
More than 7.098 L to 8.044 L	118 mL
More than 240 fl oz to 272 fl oz	4 fl oz
More than 443.1 cu in to 490.9 cu in.	7.2 cu in
More than 8.044 L to 10.173 L	133 mL
More than 272 fl oz to 344 fl oz	4.5 fl oz
More than 490.9 cu in to 620.8 cu in	8.1 cu in
More than 10.173 L to 11.593 L	148 mL
More than 344 fl oz to 392 fl oz	5 fl oz
More than 620.8 cu in to 707.4 cu in	9 cu in
More than 11.593 L to 16.561 L	177 mL
More than 392 fl oz to 560 fl oz	6 fl oz
More than 707.4 cu in to 1011 cu in	10.8 cu in
More than 16.561 L to 18.927 L	207 mL
More than 560 fl oz to 640 fl oz (5 gal)	7 fl oz
More than 1011 to 1155 cu. in.	12.6 cu in
More than 18.927 L to 23.659 L	237 mL
More than 640 fl oz to 800 fl oz	8 fl oz
More than 1155 cu in to 1444 cu in	14.4 cu in
More than 23.659 L to 26.734 L	266 mL
More than 800 fl oz to 904 fl oz	9 fl oz
More than 1444 cu in to 1631 cu in	16.2 cu in
More than 26.734 L	
More than 904 fl oz	1 percent of labeled quantity
More than 1631cu in	

Labeled Quantity	Maximum Allowable Variations (MAVs)
17 or less	0
18 to 50	1
51 to 83	2
84 to 116	3
117 to 150	4
151 to 200	5
201 to 240	6
241 to 290	7
291 to 345	8
346 to 400	9
401 to 465	10
466 to 540	11
541 to 625	12
626 to 725	13
726 to 815	14
816 to 900	15
901 to 990	16
991 to 1075	17
1076 to 1165	18
1166 to 1250	19
1251 to1333	20
1334 or more	1.5 % of labeled count rounded off to the near whole number

Labeled Quantity	Maximum Allowable Variations (MAVs
1m or less 1yd or less	3 % of labeled quantity
More than 1 m to 40 m More than 1 yd to 48 yd	1.5 % of labeled quantity
More than 40 m to 85 m More than 48 yd to 96 yd	2 % of labeled quantity
More than 85 m to 140 m More than 96 yd to 154 yd	2.5 % of labeled quantity
More than 140 m to 300 m More than 154 yd to 330 yd	3 % of labeled quantity
More than 300 m to 1000 m More than 330 yd to 1100 yd	4 % of labeled quantity
More than 1000 m or 1100 yd	5 % of labeled quantity
Maximum Allowable Variation	ns for Packages Labeled by Area.
The MAV for packages labeled by	area is 3 percent of labeled quantity

	ble 2-9. U.S. Department of Agricu				
	ower Limits for Individual Package	s (Maximum Allowable Variations)			
Homogenous Fluid when Filled	All Other Products	Lower Limit for Individual Weights (MAVs)			
(e.g., baby food or containers of lard)	All Other Products				
Less th	an 85 g or 3 oz	10 % of labeled quantity			
85 g or more to 453 g 3 oz or more to 16 oz		7.1 g 0.016 lb (0.25 oz)			
More than 453 g More than 16 oz	85 g or more to 198 g 3 oz to 7 oz	14.2 g 0.031 lb (0.5 oz)			
	More than 198 g to 1.36 kg 7 oz to 48 oz	28.3 g 0.062 lb (1 oz)			
	More than 1.36 kg to 4.53 kg More than 48 oz to 160 oz	42.5 g 0.094 lb (1.5 oz)			
	More than 4.53 kg More than 160 oz	1 % of labeled quantity			

Table 2-10. Exceptions to the Maximum Allowable Variations for Textiles, Polyethylene Sheeting and Film, Mulch and Soil Labeled by Volume, Packaged Firewood, and Packages Labeled by Count with Less than 50 Items.

	Maximum Allowable Variations (MAVs)					
	Thickness When the labeled thickness is 25 µm (1 mil or 0.001 in) or less, any individual thickness measurement of polyethylene film may be up to 35 percent below the labeled thickness.					
Polyethylene Sheeting and Film	When the labeled thickness is greater than 25 μm (1 mil or 0.001 in), individual thickness measurements of polyethylene sheeting may be up to 20 percent less than the labeled thickness.					
	The average thickness of a single package of polyethylene sheeting may be up to four percent less than the labeled thickness.					
	Weight					
	The MAV for individual packages of polyethylene sheeting and film shall be 4 percent of the labeled quantity.					
	The MAVs are:					
	For packages labeled with dimensions of 60 cm (24 in) or more:					
Textiles	Three percent of the labeled quantity for negative errors and 6 percent of the labeled quantity for plus errors.					
	For packages labeled with dimensions less than 60 cm (24 in):					
	Six percent of the labeled quantity for negative errors and 12 percent for plus errors.					
	The MAVs are:					
Mulch and Soil Labeled	For individual packages: 5 percent of the labeled volume.					
by Volume	For samples: one package may exceed the MAV for every 12 packages in the sample (e.g., when the sample size is 12 or less, 1 package may exceed the MAV and when the sample size is 48 packages, 4 packages may exceed the MAV).					
Packaged Firewood and Packages Labeled By Count with Less Than 50 Items	MAVs are not applied to these packages.					

Table 2-	Table 2-11. Accuracy Requirements for Packages Labeled by Low Count (50 or Less) and Packages Given Tolerances (Glass and Stemware)								
1	2	3							
	For Packages Labeled by Low Count (50 or Less)	For Packages Given Tolerances (Glasses and Stemware)							
Sample Size	Number of Packages Allowed to Contain Less than the Labeled Count	Number of Package Errors that May Exceed the Allowable Difference							
1-11	1	0							
12	1	0							
24	2	1							
48	3	2							



Appendix B. Random Number Tables

Reproduced from <u>Million Random Digits</u>, used with permission of the Rand Corporation, Copyright, 1955, The Free Press. The publication is available for free on the Internet at http://www.rand.org/publications/classics/randomdigits

All of the sampling plans presented in this handbook are based on the assumption that the packages constituting the sample are chosen at random from the inspection lot. Randomness in this instance means that every package in the lot has an equal chance of being selected as part of the sample. It does not matter what other packages have already been chosen, what the package net contents are, or where the package is located in the lot.

To obtain a random sample, two steps are necessary. First, it is necessary to identify each package in the lot of packages with a specific number whether on the shelf, in the warehouse or coming off the packaging line. Then, obtain random numbers, for example. These random numbers indicate exactly which packages in the lot shall be taken for the sample.

The Random Number Table

The random number tables in Appendix B are composed of the digits from 0 through 9, with approximately equal frequency of occurrence. This appendix consists of 8 pages. On each page digits are printed in blocks of five columns and blocks of five rows. The printing of the table in blocks is intended only to make it easier to locate specific columns and rows.

Random Starting Place

Starting Page. The Random Digit pages numbered B-2 through B-8. You can use the day of the week to determine the starting page or use the first page for the first lot you test in a location, the second page for the second lot and so on moving to the following page for each new lot.

Starting Column and Row. You may choose a starting page in the random number table and with eyes closed, drop a pencil anywhere on the page to indicate a starting place in the table.

For example, assume that testing takes place on the 3rd day of the week. Start with Table 3 of Appendix B. Assume you dropped your pencil on the page and it has indicated a starting place at column 22, row 45. That number is 1.

If 1-digit random numbers are needed, record them, going down the column to the bottom of the page and then to the top of the next column, and so on. Ignore duplicates and record zero (0) as ten (10). Following on from the last example, these numbers are 3, 2, 9, 8, etc. If two-digit random numbers are needed, rule off the pages, and further pages if necessary, in columns of two digits each. If there is a single column left on the page, ignore this column, and rule the next page in columns of two. Again, ignore duplicate numbers and record 00 as 100. For example, using the same starting place as in the last example (Table 3, column 22, row 45), the recorded two-digit recorded numbers would be 11, 34, 26, 95, etc. When three-digit numbers are needed, rule the page in columns of three. Record 000 as 1000. Starting on Table 3, column 22, row 45, the recorded numbers would be 119, 346, 269, 959, etc.

TABLE 1 - RANDOM DIGITS

11164	36318	75061	37674	26320	75100	10431	20418	19228	91792
21215	91791	76831	58678	87054	31687	93205	43685	19732	08468
10438	44482	66558	37649	08882	90870	12462	41810	01806	02977
36792	26236	33266	66583	60881	97395	20461	36742	02852	50564
73944	04773	12032	51414	82384	38370	00249	80709	72605	67497
49563	12872	14063	93104	78483	72717	68714	18048	25005	04151
64208	48237	41701	73117	33242	42314	83049	21933	92813	04763
51486	72875	38605	29341	80749	80151	33835	52602	79147	08868
99756	26360	64516	17971	48478	09610	04638	17141	09227	10606
71325	55217	13015	72907	00431	45117	33827	92873	02953	85474
65285	97198	12138	53010	94601	15838	16805	61004	43516	17020
17264	57327	38224	29301	31381	38109	34976	65692	98566	29550
95639	99754	31199	92558	68368	04985	51092	37780	40261	14479
61555	76404	86210	11808	12841	45147	97438	60022	12645	62000
78137	98768	04689	87130	79225	08153	84967	64539	79493	74917
62490	99215	84987	28759	19177	14733	24550	28067	68894	38490
24216	63444	21283	07044	92729	37284	13211	37485	10415	36457
16975	95428	33226	55903	31605	43817	22250	03918	46999	98501
59138	39542	71168	57609	91510	77904	74244	50940	31553	62562
29478	59652	50414	31966	87912	87154	12944	49862	96566	48825
96155	95009	27429	72918	08457	78134	48407	26061	58754	05326
29621	66583	62966	12468	20245	14015	04014	35713	03980	03024
12639	75291	71020	17265	41598	64074	64629	63293	53307	48766
14544	37134	54714	02401	63228	26831	19386	15457	17999	18306
83403	88827	09834	11333	68431	31706	26652	04711	34593	22561
67642	05204	30697	44806	96989	68403	85621	45556	35434	09532
64041	99011	14610	40273	09482	62864	01573	82274	81446	32477
17048	94523	97444	59904	16936	39384	97551	09620	63932	03091
93039	89416	52795	10631	09728	68202	20963	02477	55494	39563
82244	34392	96607	17220	51984	10753	76272	50985	97593	34320
96990	55244	70693	25255	40029	23289	48819	07159	60172	81697
09119	74803	97303	88701	51380	73143	98251	78635	27556	20712
57666	41204	47589	78364	38266	94393	70713	53388	79865	92069
46492	61594	26729	58272	81754	14648	77210	12923	53712	87771
08433	19172	08320	20839	13715	10597	17234	39355	74816	03363
10011	75004	86054	41190	10061	19660	03500	68412	57812	57929
92420	65431	16530	05547	10683	88102	30176	84750	10115	69220
35542	55865	07304	47010	43233	57022	52161	82976	47981	46588
86595	26247	18552	29491	33712	32285	64844	69395	41387	87195
72115	34985	58036	99137	47482	06204	24138	24272	16196	04393
07428	58863	96023	88936	51343	70958	96768	74317	27176	29600
35379	27922	28906	55013	26937	48174	04197	36074	65315	12537
10982	22807	10920	26299	23593	64629	57801	10437	43965	15344
90127	33341	77806	12446	15444	49244	47277	11346	15884	28131
63002	12990	23510	68774	48983	20481	59815	67248	17076	78910
40779	86382	48454	65269	91239	45989	45389	54847	77919	41105
43216	12608	18167	84631	94058	82458	15139	76856	86019	47928
96167	64375	74108	93643	09204	98855	59051	56492	11933	64958
70975	62693	35684	72607	23026	37004	32989	24843	01128	74658
85812	61875	23570	75754	29090	40264	80399	47254	40135	69911

TABLE 2 – RANDOM DIGITS

40603	16153	02225	27261	00703	24020	20702	00054	7/0/5	22712
	16152	83235	37361	98783	24838	39793	80954	76865	32713
40941	53585	69958	60916	71018	90561	84505	53980	64735	85140
73505	83472	55953	17957	11446	22618	34771	25777	27064	13526
39412	16013	11442	89320	11307	49396	39805	12249	57656	88686
57994	76748	54627	48511	78646	33287	35524	54522	08795	56273
61834	59199	15469	82285	84164	91333	90954	87186	31598	25942
91402	77227	79516	21007	58602	81418	87838	18443	76162	51146
58299	83880	20125	10794	37780	61705	18276	99041	78135	99661
40684	99948	33880	76413	63839	71371	32392	51812	48248	96419
75978	64298	08074	62055	73864	01926	78374	15741	74452	49954
34556	39861	88267	76068	62445	64361	78685	24246	27027	48239
65990	57048	25067	77571	77974	37634	81564	98608	37224	49848
16381	15069	25416	87875	90374	86203	29677	82543	37554	89179
52458	88880	78352	67913	09245	47773	51272	06976	99571	33365
33007	85607	92008	44897	24964	50559	79549	85658	96865	24186
33007	03007	92000	44097	24904	30339	/ 2342	02020	90003	24100
38712	31512	08588	61490	72294	42862	87334	05866	66269	43158
58722	03678	19186	69602	34625	75958	56869	17907	81867	11535
26188	69497	51351	47799	20477	71786	52560	66827	79419	70886
12893	54048	07255	86149	99090	70958	50775	31768	52903	27645
33186	81346	85095	37282	85536	72661	32180	40229	19209	74939
79893	29448	88392	54211	61708	83452	61227	81690	42265	20310
48449	15102	44126	19438	23382	14985	37538	30120	82443	11152
94205	04259	68983	50561	06902	10269	22216	70210	60736	58772
38648	09278	81313	77400	41126	52614	93613	27263	99381	49500
04292	46028	75666	26954	34979	68381	45154	09314	81009	05114
17026	49737	85875	12139	59391	81830	30185	83095	78752	40899
48070	76848	02531	97737	10151	18169	31709	74842	85522	74092
30159	95450	83778	46115	99178	97718	98440	15076	21199	20492
12148	92231	31361	60650	54695	30035	22765	91386	70399	79270
73838	77067	24863	97576	01139	54219	02959	45696	98103	78867
72547	42750	05622	20555	74201	07570	60401	02647	17050	49869
73547	43759	95632	39555	74391	07579	69491	02647	17050	
07277	93217	79421	21769	83572	48019	17327	99638	87035	89300
65128	48334	07493	28098	52087	55519	83718	60904	48721	17522
38716	61380	60212	05099	21210	22052	01780	36813	19528	07727
31921	76458	73720	08657	74922	61335	41690	41967	50691	30508
57238	27464	61487	52329	26150	79991	64398	91273	26824	94827
24219	41090	08531	61578	08236	41140	76335	91189	66312	44000
31309	49387	02330	02476	96074	33256	48554	95401	02642	29119
20750	97024	72619	66628	66509	31206	55293	24249	02266	39010
28537	84395	26654	37851	80590	53446	34385	86893	87713	26842
20331	04373	20054	57051	00370	33440	54505	00075	01113	20012
07020	41220	06431	0.4.40.5	20770	4.4007	30003	56504	(13/3	0.4306
97929	41220	86431	94485	28778	44997	38802	56594	61363	04206
40568	33222	40486	91122	43294	94541	40988	02929	83190	74247
41483	92935	17061	78252	40498	43164	68646	33023	64333	64083
93040									
	66476	24990	41099	65135	37641	97613	87282	63693	55299
76869	39300	84978	07504	36835	72748	47644	48542	25076	68626
02982	57991	50765	91930	21375	35604	29963	13738	03155	59914
94479	76500		06629			49822	44021	44335	26474
		39170		10031	48724				
52291	75822	95966	90947	65031	75913	52654	63377	70664	60082
03684	03600	52831	55381	97013	19993	41295	29118	18710	64851
58939	28366	86765	67465	45421	74228	01095	50987	83833	37276
20237	20300	00/03	07403	43441	14220	01073	20201	05055	31210

TABLE 3 – RANDOM DIGITS

37100	62492	63642	47638	13925	80113	88067	42575	44078	62703
53406	13855	38519	29500	62479	01036	87964	44498	07793	21599
55172	81556	18856	59043	64315	38270	25677	01965	21310	28115
40353	84807	47767	46890	16053	32415	60259	99788	55924	22077
18899	09612	77541	57675	70153	41179	97535	82889	27214	03482
68141	25340	92551	11326	60939	79355	41544	88926	09111	86431
51559	91159	81310	63251	91799	41215	87412	35317	74271	11603
92214	33386	73459	79359	65867	39269	57527	69551	17495	91456
15089	50557	33166	87094	52425	21211	41876	42525	36625	63964
96461	00604	11120	22254	16763	19206	67790	88362	01880	37911
28177	44111	15705	73835	69399	33602	13660	84342	97667	80847
66953	44737	81127	07493	07861	12666	85077	95972	96556	80108
19712	27263	84575	49820	19837	69985	34931	67935	71903	82560
68756	64757	19987	92222	11691	42502	00952	47981	97579	93408
75022	65332	98606	29451	57349	39219	08585	31502	96936	96356
11323	70069	90269	89266	46413	61615	66447	49751	15836	97343
55208	63470	18158	25283	19335	53893	87746	72531	16826	52605
11474	08786	05594	67045	13231	51186	71500	50498	59487	48677
81422	86842	60997	79669	43804	78690	58358	87639	24427	66799
21771	75963	23151	90274	08275	50677	99384	94022	84888	80139
42278	12160	32576	14278	34231	20724	27908	02657	19023	07190
17697	60114	63247	32096	32503	04923	17570	73243	76181	99343
05686	30243	34124	02936	71749	03031	72259	26351	77511	00850
52992	46650	89910	57395	39502	49738	87854	71066	84596	33115
94518	93984	81478	67750	89354	01080	25988	84359	31088	13655
00184	72186	78906	75480	71140	15199	69002	08374	22126	23555
87462	63165	79816	61630	50140	95319	79205	79202	67414	60805
88692	58716	12273	48176	86038	78474	76730	82931	51595	20747
20094	42962	41382	16768	13261	13510	04822	96354	72001	68642
60935	81504	50520	82153	27892	18029	79663	44146	72876	67843
51392	85936	43898	50596	81121	98122	69196	54271	12059	62539
54239	41918	79526	46274	24853	67165	12011	04923	20273	89405
57892	73394	07160	90262	48731	46648	70977	58262	78359	50436
02330	74736	53274	44468	53616	35794	54838	39114	68302	26855
76115	29247	55342	51299	79908	36613	68361	18864	13419	34950
63312	81886	29085	20101	38037	34742	78364	39356	40006	49800
27632	21570	34274	56426	00330	07117	86673	46455	66866	76374
06335	62111	44014	52567	79480	45886	92585	87828	17376	35254
64142	87676	21358	88773	10604	62834	63971	03989	21421	76086
28436	25468	75235	75370	63543	76266	27745	31714	04219	00699
09522	83855	85973	15888	29554	17995	37443	11461	42909	32634
93714	15414	93712	02742	34395	21929	38928	31205	01838	60000
15681	53599	58185	73840	88758	10618	98725	23146	13521	47905
77712	23914	08907	43768	10304	61405	53986	61116	76164	54958
78453	54844	61509	01245	91199	07482	02534	08189	62978	55516
24860	68284	19367	29073	93464	06714	45268	60678	58506	23700
37284	06844	78887	57276	42695	03682	83240	09744	63025	60997
35488	52473	37634	32569	39590	27379	23520	29714	03743	08444
51595	59909	35223	44991	29830	56614	59661	83397	38421	17503
90660	35171	30021	91120	78793	16827	89320	08260	09181	53622

TABLE 4 – RANDOM DIGITS

5 4 7 2 2									
	56527	52076	20225	42700	22716	26400	40030	70106	02005
54723	56527	53076	38235	42780	22716	36400	48028	78196	92985
84828	81248	25548	34075	43459	44628	21866	90350	82264	20478
65799	01914	81363	05173	23674	41774	25154	73003	87031	94368
87917	38549	48213	71708	92035	92527	55484	32274	87918	22455
26907									
20907	88173	71189	28377	13785	87469	35647	19695	33401	51998
68052	65422	88460	06352	42379	55499	60469	76931	83430	24560
42587	68149	88147	99700	56124	53239	38726	63652	36644	50876
97176	55416	67642	05051	89931	19482	80720	48977	70004	03664
53295	87133	38264	94708	00703	35991	76404	82249	22942	49659
23011	94108	29196	65187	69974	01970	31667	54307	40032	30031
75768	49549	24543	63285	32803	18301	80851	89301	02398	99891
86668	70341	66460	75648	78678	27770	30245	44775	56120	44235
56727	72036	50347	33521	05068	47248	67832	30960	95465	32217
27936	78010	09617	04408	18954	61862	64547	52453	83213	47833
31994	69072	37354	93025	38934	90219	91148	62757	51703	84040
02985	95303	15182	50166	11755	56256	89546	31170	87221	63267
89965	10206	95830	95406	33845	87588	70237	84360	19629	72568
45587	29611	98579	42481	05359	36578	56047	68114	58583	16313
01071	08530	74305	77509	16270		99753			18291
					20889		88035	55643	
90209	68521	14293	39194	68803	32052	39413	26883	83119	69623
04982	68470	27875	15480	13206	44784	83601	03172	07817	01520
19740	24637	97377	32112	74283	69384	49768	64141	02024	85380
50197	79869	86497	68709	42073	28498	82750	43571	77075	07123
46954	67536	28968	81936	95999	04319	09932	66223	45491	69503
82549	62676	31123	49899	70512	95288	15517	85352	21987	08669
61798	81600	80018	84742	06103	60786	01408	75967	29948	21454
57666	29055	46518	01487	30136	14349	56159	47408	78311	25896
29805	64994	66872	62230	41385	58066	96600	99301	85976	84194
06711	34939	19599	76247	87879	97114	74314	39599	43544	36255
		1/3//	/027/	0/0//			90757	10831	01580
	16005	50215	00266	06120					U 1 20U
13934	46885	58315	88366	06138	37923	11192	70131	10051	0.000
28549	98327	99943	25377	17628	65468	07875	16728	22602	33892
28549 40871	98327 61803	99943	25377	17628 90997	65468 86941	07875 64027	16728 01020	22602 39518	33892 34693
28549 40871 47704	98327 61803 38355	99943 25767 71708	25377 55484 80117	17628 90997 11361	65468 86941 88875	07875 64027 22315	16728 01020 38048	22602 39518 42891	33892 34693 87885
28549 40871 47704 62611	98327 61803 38355 19698	99943 25767 71708 09304	25377 55484 80117 29265	17628 90997 11361 07636	65468 86941 88875 08508	07875 64027 22315 23773	16728 01020 38048 56545	22602 39518 42891 08015	33892 34693 87885 28891
28549 40871 47704	98327 61803 38355	99943 25767 71708	25377 55484 80117	17628 90997 11361	65468 86941 88875	07875 64027 22315	16728 01020 38048	22602 39518 42891	33892 34693 87885
28549 40871 47704 62611 03047	98327 61803 38355 19698 83981	99943 25767 71708 09304 11916	25377 55484 80117 29265 09267	17628 90997 11361 07636 67316	65468 86941 88875 08508 87952	07875 64027 22315 23773 27045	16728 01020 38048 56545 62536	22602 39518 42891 08015 32180	33892 34693 87885 28891 60936
28549 40871 47704 62611	98327 61803 38355 19698 83981 50501	99943 25767 71708 09304	25377 55484 80117 29265 09267	17628 90997 11361 07636 67316	65468 86941 88875 08508 87952	07875 64027 22315 23773	16728 01020 38048 56545 62536	22602 39518 42891 08015 32180 58258	33892 34693 87885 28891 60936
28549 40871 47704 62611 03047	98327 61803 38355 19698 83981	99943 25767 71708 09304 11916	25377 55484 80117 29265 09267	17628 90997 11361 07636 67316	65468 86941 88875 08508 87952	07875 64027 22315 23773 27045	16728 01020 38048 56545 62536	22602 39518 42891 08015 32180	33892 34693 87885 28891 60936
28549 40871 47704 62611 03047 26460 01764	98327 61803 38355 19698 83981 50501 25959	99943 25767 71708 09304 11916 31731 69293	25377 55484 80117 29265 09267 18938 89875	17628 90997 11361 07636 67316 11025 72710	65468 86941 88875 08508 87952 18515 49659	07875 64027 22315 23773 27045 31747 66632	16728 01020 38048 56545 62536 96828 25314	22602 39518 42891 08015 32180 58258 95260	33892 34693 87885 28891 60936 97107 22146
28549 40871 47704 62611 03047 26460 01764 11762	98327 61803 38355 19698 83981 50501 25959 54806	99943 25767 71708 09304 11916 31731 69293 02651	25377 55484 80117 29265 09267 18938 89875 52912	17628 90997 11361 07636 67316 11025 72710 32770	65468 86941 88875 08508 87952 18515 49659 64507	07875 64027 22315 23773 27045 31747 66632 59090	16728 01020 38048 56545 62536 96828 25314 01275	22602 39518 42891 08015 32180 58258 95260 47624	33 892 34693 87885 28891 60936 97107 22146 16124
28549 40871 47704 62611 03047 26460 01764 11762 31736	98327 61803 38355 19698 83981 50501 25959 54806 31695	99943 25767 71708 09304 11916 31731 69293 02651 11523	25377 55484 80117 29265 09267 18938 89875 52912 64213	17628 90997 11361 07636 67316 11025 72710 32770 91190	65468 86941 88875 08508 87952 18515 49659 64507 10145	07875 64027 22315 23773 27045 31747 66632 59090 34231	16728 01020 38048 56545 62536 96828 25314 01275 36405	22602 39518 42891 08015 32180 58258 95260 47624 65860	33892 34693 87885 28891 60936 97107 22146 16124 48771
28549 40871 47704 62611 03047 26460 01764 11762	98327 61803 38355 19698 83981 50501 25959 54806	99943 25767 71708 09304 11916 31731 69293 02651	25377 55484 80117 29265 09267 18938 89875 52912	17628 90997 11361 07636 67316 11025 72710 32770	65468 86941 88875 08508 87952 18515 49659 64507	07875 64027 22315 23773 27045 31747 66632 59090	16728 01020 38048 56545 62536 96828 25314 01275	22602 39518 42891 08015 32180 58258 95260 47624	33 892 34693 87885 28891 60936 97107 22146 16124
28549 40871 47704 62611 03047 26460 01764 11762 31736 97155	98327 61803 38355 19698 83981 50501 25959 54806 31695 48706	99943 25767 71708 09304 11916 31731 69293 02651 11523 52239	25377 55484 80117 29265 09267 18938 89875 52912 64213 21831	17628 90997 11361 07636 67316 11025 72710 32770 91190 49043	65468 86941 88875 08508 87952 18515 49659 64507 10145 18650	07875 64027 22315 23773 27045 31747 66632 59090 34231 72246	16728 01020 38048 56545 62536 96828 25314 01275 36405 43729	22602 39518 42891 08015 32180 58258 95260 47624 65860 63368	33892 34693 87885 28891 60936 97107 22146 16124 48771 53822
28549 40871 47704 62611 03047 26460 01764 11762 31736 97155 31181	98327 61803 38355 19698 83981 50501 25959 54806 31695 48706	99943 25767 71708 09304 11916 31731 69293 02651 11523 52239	25377 55484 80117 29265 09267 18938 89875 52912 64213 21831	17628 90997 11361 07636 67316 11025 72710 32770 91190 49043	65468 86941 88875 08508 87952 18515 49659 64507 10145 18650	07875 64027 22315 23773 27045 31747 66632 59090 34231 72246 01566	16728 01020 38048 56545 62536 96828 25314 01275 36405 43729	22602 39518 42891 08015 32180 58258 95260 47624 65860 63368	33892 34693 87885 28891 60936 97107 22146 16124 48771 53822 36106
28549 40871 47704 62611 03047 26460 01764 11762 31736 97155 31181 32115	98327 61803 38355 19698 83981 50501 25959 54806 31695 48706 49672 82683	99943 25767 71708 09304 11916 31731 69293 02651 11523 52239 17237 67182	25377 55484 80117 29265 09267 18938 89875 52912 64213 21831 04024 89030	17628 90997 11361 07636 67316 11025 72710 32770 91190 49043 65324 41370	65468 86941 88875 08508 87952 18515 49659 64507 10145 18650 32460 50266	07875 64027 22315 23773 27045 31747 66632 59090 34231 72246 01566 19505	16728 01020 38048 56545 62536 96828 25314 01275 36405 43729 67342 57724	22602 39518 42891 08015 32180 58258 95260 47624 65860 63368 94986 93358	33892 34693 87885 28891 60936 97107 22146 16124 48771 53822 36106 49445
28549 40871 47704 62611 03047 26460 01764 11762 31736 97155 31181	98327 61803 38355 19698 83981 50501 25959 54806 31695 48706	99943 25767 71708 09304 11916 31731 69293 02651 11523 52239	25377 55484 80117 29265 09267 18938 89875 52912 64213 21831	17628 90997 11361 07636 67316 11025 72710 32770 91190 49043	65468 86941 88875 08508 87952 18515 49659 64507 10145 18650	07875 64027 22315 23773 27045 31747 66632 59090 34231 72246 01566	16728 01020 38048 56545 62536 96828 25314 01275 36405 43729	22602 39518 42891 08015 32180 58258 95260 47624 65860 63368	33892 34693 87885 28891 60936 97107 22146 16124 48771 53822 36106
28549 40871 47704 62611 03047 26460 01764 11762 31736 97155 31181 32115 07068	98327 61803 38355 19698 83981 50501 25959 54806 31695 48706 49672 82683 75947	99943 25767 71708 09304 11916 31731 69293 02651 11523 52239 17237 67182 71743	25377 55484 80117 29265 09267 18938 89875 52912 64213 21831 04024 89030 69285	17628 90997 11361 07636 67316 11025 72710 32770 91190 49043 65324 41370 30395	65468 86941 88875 08508 87952 18515 49659 64507 10145 18650 32460 50266 81818	07875 64027 22315 23773 27045 31747 66632 59090 34231 72246 01566 19505 36125	16728 01020 38048 56545 62536 96828 25314 01275 36405 43729 67342 57724 52055	22602 39518 42891 08015 32180 58258 95260 47624 65860 63368 94986 93358 20289	33892 34693 87885 28891 60936 97107 22146 16124 48771 53822 36106 49445 16911
28549 40871 47704 62611 03047 26460 01764 11762 31736 97155 31181 32115 07068 26622	98327 61803 38355 19698 83981 50501 25959 54806 31695 48706 49672 82683 75947 74184	99943 25767 71708 09304 11916 31731 69293 02651 11523 52239 17237 67182 71743 75166	25377 55484 80117 29265 09267 18938 89875 52912 64213 21831 04024 89030 69285 96748	17628 90997 11361 07636 67316 11025 72710 32770 91190 49043 65324 41370 30395 34729	65468 86941 88875 08508 87952 18515 49659 64507 10145 18650 32460 50266 81818 61289	07875 64027 22315 23773 27045 31747 66632 59090 34231 72246 01566 19505 36125 36908	16728 01020 38048 56545 62536 96828 25314 01275 36405 43729 67342 57724 52055 73686	22602 39518 42891 08015 32180 58258 95260 47624 65860 63368 94986 93358 20289 84641	33892 34693 87885 28891 60936 97107 22146 16124 48771 53822 36106 49445 16911 45130
28549 40871 47704 62611 03047 26460 01764 11762 31736 97155 31181 32115 07068	98327 61803 38355 19698 83981 50501 25959 54806 31695 48706 49672 82683 75947	99943 25767 71708 09304 11916 31731 69293 02651 11523 52239 17237 67182 71743	25377 55484 80117 29265 09267 18938 89875 52912 64213 21831 04024 89030 69285	17628 90997 11361 07636 67316 11025 72710 32770 91190 49043 65324 41370 30395	65468 86941 88875 08508 87952 18515 49659 64507 10145 18650 32460 50266 81818	07875 64027 22315 23773 27045 31747 66632 59090 34231 72246 01566 19505 36125	16728 01020 38048 56545 62536 96828 25314 01275 36405 43729 67342 57724 52055	22602 39518 42891 08015 32180 58258 95260 47624 65860 63368 94986 93358 20289	33892 34693 87885 28891 60936 97107 22146 16124 48771 53822 36106 49445 16911
28549 40871 47704 62611 03047 26460 01764 11762 31736 97155 31181 32115 07068 26622 02805	98327 61803 38355 19698 83981 50501 25959 54806 31695 48706 49672 82683 75947 74184 52676	99943 25767 71708 09304 11916 31731 69293 02651 11523 52239 17237 67182 71743 75166 22519	25377 55484 80117 29265 09267 18938 89875 52912 64213 21831 04024 89030 69285 96748 47848	17628 90997 11361 07636 67316 11025 72710 32770 91190 49043 65324 41370 30395 34729 68210	65468 86941 88875 08508 87952 18515 49659 64507 10145 18650 32460 50266 81818 61289 23954	07875 64027 22315 23773 27045 31747 66632 59090 34231 72246 01566 19505 36125 36908 63085	16728 01020 38048 56545 62536 96828 25314 01275 36405 43729 67342 57724 52055 73686 87729	22602 39518 42891 08015 32180 58258 95260 47624 65860 63368 94986 93358 20289 84641 14176	33892 34693 87885 28891 60936 97107 22146 16124 48771 53822 36106 49445 16911 45130 45410
28549 40871 47704 62611 03047 26460 01764 11762 31736 97155 31181 32115 07068 26622 02805 32301	98327 61803 38355 19698 83981 50501 25959 54806 31695 48706 49672 82683 75947 74184 52676 58701	99943 25767 71708 09304 11916 31731 69293 02651 11523 52239 17237 67182 71743 75166 22519 04193	25377 55484 80117 29265 09267 18938 89875 52912 64213 21831 04024 89030 69285 96748 47848	17628 90997 11361 07636 67316 11025 72710 32770 91190 49043 65324 41370 30395 34729 68210	65468 86941 88875 08508 87952 18515 49659 64507 10145 18650 32460 50266 81818 61289 23954 21697	07875 64027 22315 23773 27045 31747 66632 59090 34231 72246 01566 19505 36125 36908 63085 05059	16728 01020 38048 56545 62536 96828 25314 01275 36405 43729 67342 57724 52055 73686 87729	22602 39518 42891 08015 32180 58258 95260 47624 65860 63368 94986 93358 20289 84641 14176	33892 34693 87885 28891 60936 97107 22146 16124 48771 53822 36106 49445 16911 45130 45410
28549 40871 47704 62611 03047 26460 01764 11762 31736 97155 31181 32115 07068 26622 02805 32301 26339	98327 61803 38355 19698 83981 50501 25959 54806 31695 48706 49672 82683 75947 74184 52676 58701 56909	99943 25767 71708 09304 11916 31731 69293 02651 11523 52239 17237 67182 71743 75166 22519 04193 39331	25377 55484 80117 29265 09267 18938 89875 52912 64213 21831 04024 89030 69285 96748 47848	17628 90997 11361 07636 67316 11025 72710 32770 91190 49043 65324 41370 30395 34729 68210	65468 86941 88875 08508 87952 18515 49659 64507 10145 18650 32460 50266 81818 61289 23954 21697 01947	07875 64027 22315 23773 27045 31747 66632 59090 34231 72246 01566 19505 36125 36908 63085 05059 02257	16728 01020 38048 56545 62536 96828 25314 01275 36405 43729 67342 57724 52055 73686 87729 26684 47236	22602 39518 42891 08015 32180 58258 95260 47624 65860 63368 94986 93358 20289 84641 14176	33892 34693 87885 28891 60936 97107 22146 16124 48771 53822 36106 49445 16911 45130 45410 75925 90371
28549 40871 47704 62611 03047 26460 01764 11762 31736 97155 31181 32115 07068 26622 02805 32301	98327 61803 38355 19698 83981 50501 25959 54806 31695 48706 49672 82683 75947 74184 52676 58701	99943 25767 71708 09304 11916 31731 69293 02651 11523 52239 17237 67182 71743 75166 22519 04193	25377 55484 80117 29265 09267 18938 89875 52912 64213 21831 04024 89030 69285 96748 47848	17628 90997 11361 07636 67316 11025 72710 32770 91190 49043 65324 41370 30395 34729 68210	65468 86941 88875 08508 87952 18515 49659 64507 10145 18650 32460 50266 81818 61289 23954 21697	07875 64027 22315 23773 27045 31747 66632 59090 34231 72246 01566 19505 36125 36908 63085 05059	16728 01020 38048 56545 62536 96828 25314 01275 36405 43729 67342 57724 52055 73686 87729	22602 39518 42891 08015 32180 58258 95260 47624 65860 63368 94986 93358 20289 84641 14176	33892 34693 87885 28891 60936 97107 22146 16124 48771 53822 36106 49445 16911 45130 45410
28549 40871 47704 62611 03047 26460 01764 11762 31736 97155 31181 32115 07068 26622 02805 32301 26339 95274	98327 61803 38355 19698 83981 50501 25959 54806 31695 48706 49672 82683 75947 74184 52676 58701 56909	99943 25767 71708 09304 11916 31731 69293 02651 11523 52239 17237 67182 71743 75166 22519 04193 39331	25377 55484 80117 29265 09267 18938 89875 52912 64213 21831 04024 89030 69285 96748 47848 30142 42101 42413	17628 90997 11361 07636 67316 11025 72710 32770 91190 49043 65324 41370 30395 34729 68210	65468 86941 88875 08508 87952 18515 49659 64507 10145 18650 32460 50266 81818 61289 23954 21697 01947	07875 64027 22315 23773 27045 31747 66632 59090 34231 72246 01566 19505 36125 36908 63085 05059 02257	16728 01020 38048 56545 62536 96828 25314 01275 36405 43729 67342 57724 52055 73686 87729 26684 47236	22602 39518 42891 08015 32180 58258 95260 47624 65860 63368 94986 93358 20289 84641 14176 63516 19913 36878	33892 34693 87885 28891 60936 97107 22146 16124 48771 53822 36106 49445 16911 45130 45410 75925 90371
28549 40871 47704 62611 03047 26460 01764 11762 31736 97155 31181 32115 07068 26622 02805 32301 26339	98327 61803 38355 19698 83981 50501 25959 54806 31695 48706 49672 82683 75947 74184 52676 58701 56909 09508	99943 25767 71708 09304 11916 31731 69293 02651 11523 52239 17237 67182 71743 75166 22519 04193 39331 81012	25377 55484 80117 29265 09267 18938 89875 52912 64213 21831 04024 89030 69285 96748 47848	17628 90997 11361 07636 67316 11025 72710 32770 91190 49043 65324 41370 30395 34729 68210 99779 01031 11278	65468 86941 88875 08508 87952 18515 49659 64507 10145 18650 32460 50266 81818 61289 23954 21697 01947 19354	07875 64027 22315 23773 27045 31747 66632 59090 34231 72246 01566 19505 36125 36908 63085 05059 02257 68661	16728 01020 38048 56545 62536 96828 25314 01275 36405 43729 67342 57724 52055 73686 87729 26684 47236 04192	22602 39518 42891 08015 32180 58258 95260 47624 65860 63368 94986 93358 20289 84641 14176	33892 34693 87885 28891 60936 97107 22146 16124 48771 53822 36106 49445 16911 45130 45410 75925 90371 84366

TABLE 5 – RANDOM DIGITS

47505	02008	20300	87188	42505	40294	04404	59286	95914	07191
13350	08414	64049	94377	91059	74531	56228	12307	87871	97064
33006	92690	69248	97443	38841	05051	33756	24736	43508	53566
55216	63886	06804	11861	30968	74515	40112	40432	18682	02845
21991	26228	14801	19192	45110	39937	81966	23258	99348	61219
71025	28212	10474	27522	16356	78456	46814	28975	01014	91458
65522	15242	84554	74560	26206	49520	65702	54193	25583	54745
27975	54923	90650	06170	99006	75651	77622	20491	53329	12452
07300	09704	36099	61577	34632	55176	87366	19968	33986	46445
54357	13689	19569	03814	47873	34086	28474	05131	46619	41499
00977	04481	42044	08649	83107	02423	46919	59586	58337	32280
13920	78761	12311	92808	71581	85251	11417	85252	61312	10266
08395	37043	37880	34172	80411	05181	58091	41269	22626	64799
46166	67206	01619	43769	91727	06149	17924	42628	57647	76936
87767	77607	03742	01613	83528	66251	75822	83058	97584	45401
29880	95288	21644	46587	11576	30568	56687	83239	76388	17857
36248	36666	14894	59273	04518	11307	67655	08566	51759	41795
12386	29656	30474	25964	10006	86382	46680	93060	52337	56034
52068	73801	52188	19491	76221	45685	95189	78577	36250	36082
41727	52171	56719	06054	34898	93990	89263	79180	39917	16122
49319	74580	57470	14600	22224	49028	93024	21414	90150	15686
88786	76963	12127	25014	91593	98208	27991	12539	14357	69512
84866	95202	43983	72655	89684	79005	85932	41627	87381	38832
11849	26482	20461	99450	21636	13337	55407	01897	75422	05205
54966	17594	57393	73267	87106	26849	68667	45791	87226	74412
10959	33349	80719	96751	25752	17133	32786	34368	77600	41809
22784	07783	35903	00091	73954	48706	83423	96286	90373	23372
86037	61791	33815	63968	70437	33124	50025	44367	98637	40870
80037	65089	85919	74391	36170	82988	52311	59180	37846	98028
72751	84359	15769	13615	70866	37007	74565	92781	37770	76451
18532	03874	66220	79050	66814	76341	42452	65365	07167	90134
22936	22058	49171	11027	07066	14606	11759	19942	21909	15031
66397	76510	81150	00704	94990	68204	07242	82922	65745	51503
89730	23272	65420	35091	16227	87024	56662	59110	11158	67508
81821	75323	96068	91724	94679	88062	13729	94152	59343	07352
94377	82554	53586	11432	08788	74053	98312	61732	91248	23673
68485	49991	53165	19865	30288	00467	98105	91483	89389	61991
07330	07184	86788	64577	47692	45031	36325	47029	27914	24905
10993	14930	35072	36429	26176	66205	07758	07982	33721	81319
20801	15178	64453	83357	21589	23153	60375	63305	37995	66275
79241	35347	66851	79247	57462	23893	16542	55775	06813	63512
43593	39555	97345	58494	52892	55080	19056	96192	61508	23165
29522	62713	33701	17186	15721	95018	76571	58615	35836	66260
88836	47290	67274	78362	84457	39181	17295	39626	82373	10883
65905	66253	91482	30689	81313	01343	37188	37756	04182	19376
44798	69371	07865	91756	42318	63601	53872	93610	44142	89830
35510	99139	32031	27925	03560	33806	85092	70436	94777	57963
50125	93223	64209	49714	73379	89975	38567	44316	60262	10777
25173	90038	63871	40418	23818	63250	05118	52700	92327	55449
68459	90094	44995	93718	83654	79311	18107	12557	09179	28408

TABLE 6 – RANDOM DIGITS

96195	07059	13266	31389	87612	88004	31843	83469	22793	14312
22408	94958	19095	58035	43831	32354	83946	57964	70404	32017
53896	23508	16227	56929	74329	12264	26047	66844	47383	42202
22565	02475	00258	79018	70090	37914	27755	00872	71553	56684
49438	20772	60846	69732	07612	70474	46483	21053	95475	53448
65620	34684	00210	04863	01373	19978	61682	69315	46766	83768
20246	26941	41298	04763	19769	25865	95937	03545	93561	73871
09433	09167	35166	32731	73299	41137	37328	28301	61629	05040
95552	73456	16578	88140	80059	50296	07656	01396	83099	09718
76053	05150	69125	69442	16509	03495	26427	58780	27576	31342
34822	35843	78468	82380	52313	71070	71273	10768	86101	51474
07753	04073	58520	80022	28185	16432	86909	82347	10548	83929
04204	94434	62798	81902	29977	57258	87826	35003	46449	76636
96770	19440	29700	42093	64369	69176	29732	37389	34054	28680
65989	62843	10917	34458	81936	84775	39415	10622	36102	16753
06644	94784	66995	61812	54215	01336	75887	57685	66114	76984
88950	46077	34651	12038	87914	20785	39705	73898	12318	78334
21482	95422	02002	33671	46764	50527	46276	77570	68457	62199
55137	61039	02006	69913	11291	87215	89991	26003	55271	08153
98441	81529	59607	65225	49051	28328	85535	37003	87211	10204
57168	30458	23892	07825	53447	53511	09315	42552	43135	57892
71886	65334	38013	09379	83976	42441	14086	33197	82671	05037
40418	59504	52383	07232	14179	59693	37668	26689	93865	78925
28833	76661	47277	92935	63193	94862	60560	72484	29755	40894
37883	62124	62199	49542	55083	20575	44636	92282	52105	77664
44882	33592	66234	13821	86342	00135	87938	57995	34157	99858
19082	13873	07184	21566	95320	28968	31911	06288	77271	76171
45316	29283	89318	55806	89338	79231	91545	55477	19552	03471
22788	55433	31188	74882	44858	69655	08096	70982	61300	23792
08293	86193	05026	21255	63082	92946	28748	25423	45282	57821
29223	70541	67115	84584	10100	33854	26466	77796	70698	99393
22681	80110	31595	09246	39147	11158	43298	36220	88841	11271
74580	90354	43744	22178	38084	60027	24201	71686	59767	33274
69093	71364	08107	96952	50005	30297	97417	89575	04676	35616
40456	91234	58090	65342	95002	28447	21'700	43137	13746	85959
72927	67349	83962	58912	59734	76323	02913	46306	53956	38936
61869	33093	81129	06481	89281	83629	81960	63704	56329	10357
40048	16520	07638	10797	22270	57350	72214	36410	95526	87614
68773	97669	28656	89938	12917	25630	08068	19445	76250	24727
09774	30751	49740	11385	91468	28900	76804	52460	52320	70493
46139	36689	82587	13586	35061	76128	38568	62300	43439	53434
26566	95323	32993	89988	12152	01862	93113	33875	31730	62941
06765	57141	48617	18282	13086	76064	83334	70192	15972	80429
35384	90380	12317	89702	33091	68835	62960	38010	52710	87604
49333	78482	36199	11355	86044	88760	03724	22927	91716	92332
45595	14044	56806	99126	85584	87750	78149	22723	48245	78126
79819	15054	76174	12206	06886	06814	43285	20008	75345	19779
11971	62234	74857	46401	20817	57591	41189	49604	29604	30660
11452	89318	53084	21993	62471	74101	61217	76536	58393	63718
38746	81271	96260	98137	60275	22647	33103	50090	29395	10002

TABLE 7 - RANDOM DIGITS

93369	13044	69686	78162	29132	51544	17925	56738	32683	83153
19360	55049	94951	76341	38159	31008	41476	05278	03909	02299
47798	89890	06893	65483	97658	74884	38611	27264	26956	83504
69223	32007	03513	61149	66270	73087	16795	76845	44645	44552
34511	50721	84850	34159	38985	75384	22965	55366	81632	78872
54031	59329	58963	52220	76806	98715	67452	78741	58128	00077
66722	85515	04723	92411	03834	12109	85185	37350	93614	15351
71059	07496	38404	18126	37894	44991	45777	02070	38159	23930
45478	86066	31135	33243	01190	47277	55146	56130	70117	83203
97246	91121	89437	20393	76598	99458	76665	83793	37448	32664
22982	25936	96417	34845	28942	65569	38253	77182	12996	19505
48243	62993	47132	85248	79160	90981	71696	79609	33809	60839
93514	14915	67960	82203	22598	94802	75332	95585	69542	79924
69707	98303	93069	16216	01542	51771	16833	20922	94415	27617
87467	91794	70814	12743	17543	04057	71231	11309	32780	83270
81006	81498	59375	30502	44868	81279	23585	49678	70014	10523
15458	83481	50187	43375	56644	72076	59403	65469	74760	69509
33469	12510	23095	48016	22064	39774	07373	10555	33345	21787
67198	07176	65996	18317	83083	11921	06254	68437	59481	54778
58037	92261	85504	55690	63488	26451	43223	38009	50567	09191
84983	68312	25519	56158	22390	12823	92390	28947	36708	25393
35554	02935	72889	68772	79774	14336	50716	63003	86391	94074
04368	17632	50962	71908	13105	76285	31819	16884	11665	16594
81311	60479	69985	30952	93067	70056	55229	83226	22555	66447
03823	89887	55828	74452	21692	55847	15960	47521	27784	25728
80422	65437	38797	56261	88300	35980	56656	45662	29219	49257
61307	49468	43344	43700	14074	19739	03275	99444	62545	23720
83873	82557	10002	80093	74645	33109	15281	38759	09342	69408
38110	16855	28922	93758	22885	36706	92542	60270	99599	17983
43892	91189	87226	56935	99836	85489	89693	49475	31941	78065
93683	09664	53927	49885	94979	88848	42642	93218	80305	49428
32748	02121	11972	96914	83264	89016	45140	20362	63242	86255
49211	92963	38625	65312	52156	36400	67050	64058	45489	24165
63365	64224	69475	57512	85097	05054	88673	96593	00902	53320
63576	26373	44610	43748	90399	06770	71609	90916	69002	57180
41078	47036	65524	68466	77613	20076	71969	47706	22506	81053
70846	89558	64173	15381	67322	70097	82363	90767	17879	32697
68800	64492	20162	32707	69510	82465	26821	79917	34615	35820
44977	89525	51269	63747	30997	97213	53016	65909	05723	50168
79354	63847	24395	53679	07667	67993	24634	78867	78516	00448
14954	22299	40156	52685	19093	06090	23800	06739	76836	19050
01711	98439	09446	33937	98956	85676	89493	05132	45886	49379
62328	55328	45738	93940	15772	81975	91017	21387	57949	13992
73004	62109	81907	71077	50322	66093	79921	61412	18347	21115
34218	89445	03609	52336	19005	15179	94958	99448	11612	76981
99159	01968	45886	86875	05196	64297	59339	39878	61548	56442
92858	29949	15817	93372	34732	61584	72007	58597	43802	51066
27396	97477	65554	71601	01540	26509	19487	39684	18676	41219
37103	45309	30129	43380	66638	10841	77292	40288	25826	61431
57347	97012	48428	20606	54138	75716	23741	50462	13221	47254

Appendix C. Glossary

Δ

allowable difference. The amount by which the actual quantity in the package may differ from the declared quantity. Pressed and blown tumblers and stemware labeled by count and capacity are assigned an allowable difference in capacity. This is also called a tolerance.

audit testing. Preliminary tests designed to quickly identify potential noncompliance units.

average. The sum of a number of individual measurement values divided by the number of values. For example, the sum of the individual weights of 12 packages divided by 12 would be the average weight of those packages.

average error. The sum of the individual "package errors" (defined) (considering their arithmetic sign) divided by the number of packages comprising the sample.

average requirement. A requirement that the average net quantity of contents of packages in a "lot" equals the net quantity of contents printed on the label.

average tare. The sum of the weights of individual package containers (or wrappers, etc.) divided by the number of containers or wrappers weighed.

B

berry baskets and boxes. Disposable containers in capacities of 1 dry quart or less for berries and small fruits. See Section 4.46. in NIST Handbook 44.

 \mathbf{C}

Category A (Category B). A set of sampling plans provided in this handbook to use in checking packages that must (except when exempted) meet the "average requirement" (defined).

Chamois. A natural leather made from skins of sheep and lambs that has been oil-tanned.

combination quantity declarations. A package label that contains the count of items in the package as well as one or more of the following: weight, measure, or size.

compliance testing. Determining package conformance using specified legal requirements.

D

decision criteria. The rules for deciding whether or not a lot conforms to package requirements based on the results of checking the packages in the sample.

delivery. A quantity of identically labeled product received at one time by a buyer.

dimensionless units. The integers in terms of which the official records package errors. The dimensionless units must be multiplied by the "unit of measure" to obtain package errors in terms of weight, length, etc.

division, value of (d). The value of the scale division, expressed in units of mass, is the smallest subdivision of the scale for analog indication or the difference between two consecutively indicated or printed values for digital indication or printing. See NIST Handbook 44.

drained weight. The weight of solid or semisolid product representing the contents of a package obtained after a prescribed method for removal of the liquid has been employed.

dry measure. Rigid containers designed for general and repeated use in the volume measurement of particulate solids. See Section 4.45. Dry Measures in NIST Handbook 44.

dry pet food: All extruded dog and cat foods and baked treat packaged in kraft paper bags and cardboard boxes that has a moisture content of 13 percent or less at the time of packaging.

dry tare. (See unused dry tare).

E

error. See PACKAGE ERROR.

G

gravimetric test procedure. An analytical procedure that involves measurement by mass or weight.

gross weight. The weight of the package including contents, packing material, labels.

Η

headspace. The container volume not occupied by product.

1

inch-pound units. Units based upon the yard, gallon, and the pound commonly used in the United States of America. Some of these units have the same name as similar units in the United Kingdom (British, English, or UK units), but they are not necessarily equal to them.

initial tare sample. The first packages (either two or five) selected from the sample to be opened for tare determination in the tare procedure. Depending upon the variability of these individual tare weights as compared with the variability of the net contents, this initial tare sample may be sufficient or more packages may be needed to determine the tare.

inspection lot. The collection of identically labeled (random packages, in some cases, are exempt from identity and labeled quantity when determining the inspection lot) packages available for inspection at one time. This collection will pass or fail as a whole based on the results of tests on a sample drawn from this collection.

L

label. "Any written, printed, or graphic matter affixed to, applied to, attached to, blown into, formed, molded into, embossed on, or appearing upon or adjacent to a consumer commodity or a package containing any consumer commodity, for purposes of branding, identifying, or giving any information with respect to the commodity or to the contents of the package, except that an inspector's tag or other non-promotional matter affixed to or appearing upon a consumer commodity..(is)..not...a label." See Section 2.5 in the Uniform Packaging and Labeling Regulation in NIST Handbook 130.

linear measures. Rulers and tape measures.

location of test. The place where the package will be examined. This is broadly defined as one of three general locations: (1) where the commodity was packaged, (2) a warehouse or storage location, or (3) a retail outlet.

lot. See INSPECTION LOT.

lot code. A series of identifying numbers and/or letters on the outside of a package designed to provide information such as the date and location of packaging or the expiration date.

lot size. The number of packages in the "inspection lot".

M

MAV (maximum allowable variation). A deficiency in the weight, measure, or count of an individual package beyond which the deficiency is considered to be an "unreasonable error". The number of packages with deficiencies that are greater than the MAV is controlled by the sampling procedure.

measure containers. Containers whose capacities are used to determine quantity. They are of two basic types: (a) retail and (b) prepackaged. Retail containers are packaged at the time of retail sale, and prepackaged containers are packaged in advance of sale. An example of a prepackaged measure container is an ice cream package.

metric or SI units. Units of the International System of Units as established in 1960 by the General Conference on Weights and Measures and interpreted or modified for the United States by the Secretary of Commerce. [See Metric Conversion Act of 1975 (Public Law 94-168, § 3(1) and § 4(4), and NIST Special Publication 814 - Metric System of Measurement; Interpretation of the International System of Units for the United States or Federal Register of December 20, 1990 (FR 90-21913)].

minus or plus errors. Negative or positive deviations from the labeled quantity of the actual package quantities as measured. [See PACKAGE ERRORS.]

mulch. Any product or material other than peat or peat moss for sale, or sold for primary use as a horticultural, above-ground dressing for decoration, moisture control, weed control, erosion control, temperature control, or other similar purposes.

moisture allowance. That variation in weight of a packaged product permitted in order to account for loss of weight due to loss of moisture during good package distribution practices. For packaged goods subject to moisture loss, when the average net weight of a sample is found between the labeled weight and the boundary of the moisture allowance, the lot is said to be in a no-decision area. Further information is required to determine lot compliance or noncompliance.

N

net quantity or net contents. That quantity of packaged product remaining after all necessary deductions for tare (defined) have been made.

nominal. A designated or theoretical size that may vary from the actual.

nominal gross weight. The sum of the nominal tare weight (defined) plus the declared or labeled weight (or other labeled quantity converted to a weight basis).

P

packaged goods. Product or commodity put up in any manner in advance of sale suitable for either wholesale or retail sale.

package error. The difference between the actual net contents of an individual pack-age as measured and the declared net contents on the package label; (-) minus for less than the label and (+) plus for more than the label.

petroleum products. Gasoline, diesel fuel, kerosene, or any product (whether or not such a product is actually derived from naturally occurring hydro-carbon mixtures known as "petroleum") commonly used in powering, lubricating, or idling engines or other devices, or labeled as fuel to power camping stoves or lights. Sewing machine lubricant, camping fuels, and synthetic motor oil are "petroleum products" for the purposes of this regulation. The following products are not "petroleum products," brake fluid, copier machine dispersant, antifreeze, cleaning solvents, and alcohol.

plus errors. (See Minus or Plus Errors)

principal display panel or panels. Part (s) of a label that are designed to be displayed, presented, shown, or examined under normal and customary conditions of display and purchase. Wherever a principal display panel appears more than once on a package, all requirements pertaining to the "principal display panel" shall pertain to all such "principal display panels." See Section 2.7 in the Uniform Packaging and Labeling Regulation in NIST Handbook 130.

production lot. The total collection of packages defined by the packager, usually consisting of those packages produced within a given unit of time and coded identically.

pycnometer. A container of known volume used to contain material for weighing so that the weight of a known volume may be determined for the material. If it is constructed, it is called a density cup.

random pack. "The term 'random package' shall be construed to mean a package that is one of a lot, shipment, or delivery of packages of the same consumer commodity with varying weights which means, packages of the same consumer commodity with no fixed pattern of weight."

random sampling. The process of selecting sample packages such that all packages under consideration have the same probability of being selected. An acceptable method of random selection is to use a table of random numbers.

range. The difference between the largest and the smallest of a set of measured values.

reasonable variation. An amount by which individual package net contents are allowed to vary from the labeled net contents. This term is found in most Federal and State laws and regulations governing packaged goods. Reasonable variations from the labeled declaration are recognized for (1) unavoidable deviations in good manufacturing practice, and (2) loss or gain of moisture in good distribution practice.

rounding. The process of omitting some of the end digits of a numerical value and adjusting the last retained digit so that the resulting number is as near as possible to the original number.

S

sample. A group of packages taken from a larger collection of packages and providing information that can be used to make a decision concerning the larger collection of packages or of the package production process. A sample provides a valid basis for decision only when it is a random sample (defined).

sample correction factor. Students' "t" value for a one sided test at the 3 percent confidence level and n is the sample size.

sample error limit (SEL). Means a statistical value computed by multiplying the sample standard deviation times the sample correction factor from Column 3 of Table 2-1. Category A - Sampling Plans for the appropriate sample size. The SEL value allows for the uncertainty between the average error of the sample and the average error of the inspection lot with an approximately 97 percent level of confidence.

sample size (n). The number of packages in a sample.

sampling plan. A specific plan that states the number of packages to be checked and the associated decision criteria.

scale tolerance. The official value fixing the limit of allowable error for weighing equipment as defined in NIST Handbook 44.

seat (as in "seat diameter" or "seated capacity"). The projection or shoulder near the upper rim of a cup or container that is designed to serve as the support for a lid or cover.

seated capacity. The capacity of a cup, container, or bottle, as defined by the volume contained by them when the lid or a flat disc is inserted into the lid groove that is located inside and near the upper rim of the cup, container, or bottle.

SEL. See sample error limit.

shipment. A quantity of identically labeled product (except for lot code) sent at one time to a single location.

slicker plate. A flat plate, usually of glass or clear plastic composition, used to determine the "level full" condition of a capacity (volumetric) measure.

standard deviation. A measure to describe the scatter of the individual package contents around the mean contents.

standard pack. That type of package in which a commodity is put up with identical labels and only in certain specific quantity sizes. Examples of goods so packed are canned, boxed, bottled and bagged foods, and over-the-counter drugs.

supplementary quantity declarations. The required quantity declaration may be supplemented by one or more declarations of weight, measure, or count, such declaration appearing other than on a principal display panel. Such supplemental statement of quantity of contents shall not include any terms qualifying a unit of weight, measure, or count that tends to exaggerate the amount of commodity contained in the package (e.g., "giant" quart, "full" gallon, "when packed," "minimum", or words of similar import)." See Section 6.12 in the Uniform Packaging and Labeling Regulation in NIST Handbook 130.

Т

tare weight. The weight of a container, wrapper, or other material that is deducted from the gross weight to obtain the net weight.

tare sample. The packages or packaging material used to determine the average tare weight.

tare sample size. The number of packages or packaging material units used to deter-mine the average tare weight.

tolerance. A value fixing the limit of allowed departure from the labeled contents; usually presented as a (+) and a (-) value.

U

unit of measure. An increment of weight, length, or volume so that an inspector may record package errors in terms of small integers. [The package errors are actually the integers multiplied by the unit of measure.]

unreasonable errors. Minus package errors that exceed the MAV (defined). The number of unreasonable errors permitted in a sample is specified by the sampling plan.

unused dry tare. All unused packaging materials (including glue, labels, ties, etc.) that contain or enclose a product. It includes prizes, gifts, coupons, or decorations that are not part of the product.

used dry tare. Used tare material that has been air dried, or dried in some manner to simulate the unused tare weight. It includes all packaging materials that can be separated from the packaged product, either readily (e.g., by shaking) or by washing, scraping, ambient air drying, or other techniques involving more than "normal" household recovery procedures, but not including laboratory procedures like oven drying. Labels, wire closures, staples, prizes, decorations, and such are considered tare. It is not the same as "wet tare. See also "wet tare."

V

volumetric measures. Standard measuring flasks, graduates, cylinders, for use in the measuring volumes of liquids.

W

wet tare. Used packaging materials when no effort is made to reconstruct unused tare weight by drying out the absorbent portion (if any) of the tare. Free-flowing liquid is part of the wet tare for meat or poultry products from Federally-inspected meat and poultry plants.

Appendix D. Acknowledgments and References

I would like to thank the State and local weights and measures officials who evaluated the test procedures and commented on the drafts of this edition. I also thank the many packagers, industries, and trade associations for their comments and suggestions. I also received support and encouragement from the U.S. Department of Agriculture, Food Safety and Inspection Service; the Office of Food Labeling at Food and Drug Administration; and from the Federal Trade Commission. This project could not have been accomplished without the support and encouragement we received from other members of the NIST Office of Weights and Measures especially Tina G. Butcher, Terry Grimes, Georgia Harris, Joan Koenig, Michele Krebs, Janet Land, Joan Mindte (retired), and Richard Suiter. I could not have completed this handbook without the technical support, guidance, and encouragement provided by this team of dedicated professionals and friends.

I want to also honor the dedication and hard work of NIST staff who where the creators and editors of the previous editions of this handbook, especially that of Dr. Carroll Brickenkamp, Steve Hasko, and the late Mary Natrella. I learned a great deal from their work, and I share their knowledge with others everyday.

REFERENCES

- (1) R. S. Elder, "Determining Tare in Net Weight Acceptance Sampling," <u>Journal of Quality Technology</u>, 4, p. 131-133, 1972.
- (2) <u>Standard Specification for Laboratory Glass Graduated Burets</u>, American Society for Testing and Materials (ASTM), E 287-94,1998. URL: http://www.astm.org.
- (3) Standard Specification for Glass Volumetric (Transfer) Pipets, ASTM E 969-99,1999.
- (4) Patricia Cunniff, ed., Official Methods of Analysis of the Association of Official Analytical Chemists, Sixteenth Edition, Association of Official Analytical Chemists, Gaithersburg, Maryland. 1996. URL: http://www.aoac.org
- (5) M. W. Jensen and R. W. Smith, <u>The Examination of Weighing Equipment</u>, National Institute of Standards and Technology Handbook 94, U.S. Government Printing Office, Washington, D.C., 1965.
- (6) G. L. Harris, Specifications and Tolerances for Reference Standards and Field Standard Weights and Measures; 2. Specifications and Tolerances for Field Standard Measuring Flasks, National Institute of Standards and Technology Handbook 105-2, U.S. Government Printing Office, Washington, D.C., 1996.
- (7) Rand Corporation. A Million Random Digits with 100,000 Normal Deviates, Glencoe, IL: The Free Press, 1955. The Rand Corporation, 1700 Main Street, P.O. Box 2138, Santa Monica, California 90407-2138. URL: http://www.rand.org
- (8) <u>Specification for Polyethylene Sheeting for Construction, Industrial, and Agricultural Applications, ASTM D 4397-96, 1996.</u>
- (9) T. Butcher, J. Williams and T. Grimes, <u>Specifications, Tolerances, and Other Technical Requirements or Weighing and Measuring Devices</u>, National Institute of Standards and Technology Handbook 44, 2000.
- (10) G. L. Harris, Specifications and Tolerances for Reference Standards and Field Standard Weights and Measures, 1. Specifications and Tolerances for Field Standard Weights (National Institute of Standards and Technology Class F), National Institute of Standards and Technology Handbook 105-1, 1990.

- (11) G. L. Harris, Specifications and Tolerances for Reference Standards and Field Standard Weights nd Measures, 5. Specifications and Tolerances for Field Standard Stopwatches, National Institute of Standards and Technology Handbook 105-5, 1997.
- (12) G. L. Harris, Specifications and Tolerances for Reference Standards and Field Standard Weights and Measures, 6. Specifications and Tolerances for Thermometers, National Institute of Standards and Technology Handbook 105-6, 1997.
- (13) Standard Method of Test for Volume of Peat Materials, ASTM D 2978-71, 1998.
- (14) Standard Method of Test for Yarn Number by the Skein Method, ASTM D 1907-97, 1997.
- (15) Standard Specification for Polyethylene Film and Sheeting, ASTM D 2103-97, 1997.
- (16) Standard Test Methods for Thickness of Solid Electrical Insulation, ASTM D 374-99, 1999.
- (17) T.Coleman and T. Grimes, <u>NIST Handbook 130 Uniform Laws and Regulations in the Areas of Legal Metrology and Fuel Quality</u>, National Institute of Standards and Technology, 2000.
- (18) U.S. Department of Defense Military Standard, <u>Sampling Procedures and Tables for Inspection by</u> Attributes (MIL-STD-105 D), U.S. Government Printing Office, Washington, D.C., 1963.
- (19) Examination Procedure Outlines for Commercial Weighing and Measuring Devices, National Institute of Standards and Technology Handbook 112, 2XXX.
- (20) C. Brickenkamp, S. Hasko, and M.G. Natrella, <u>NIST Handbook 133 Third Edition Checking the Net Contents of Packaged Goods</u>, 1988.
- (21) K. Butcher and T. Coleman, 4th Supplement to the Third Edition of NIST Handbook 133 Checking the Net Contents of Packaged Goods, 1994.
- (22) Compressed Gas Association. <u>Third Edition Handbook of Compressed Gases, 1990.</u> Compressed Gas Association, 1725 Jefferson Davis Highway, Suite 1004, Arlington, Virginia 22202-4100. URL: http://www.cganet.com
- (23) B. Younglove and Neil Olien. NBS Technical Note 1079 Tables of Industrial Gas Container Contents and Density for Oxygen, Argon, Nitrogen, Helium, and Hydrogen, 1985.
- (24) Standard Practice for Calibration of Laboratory Volumetric Apparatus, ASTM E 542-94, 1999
- (25) ASTM Standard D1505-98, "Standard Method of Test for Density of Plastics by the Density Gradient Technique."
- (26) <u>Federal Test Method Standard 311 "Leather, Methods of Sampling and Testing."</u> (January 15, 1969). U.S. General Services Administration.

Appendix E. Model Inspection Report Forms

Report Form	<u>Page</u>
Random Inspection Report	E-2
Random Package Inspection Report - Example	E-3
Standard Package Inspection Report	E-4
Standard Inspection Report - Example	E-5

Date	Random I	Package Re			Sampling Plan: A □ B □					Report Number:		
Location (name, address)	L	Product		Manufacturer:					er De	scription:		
		Lot Cod	les									
			T							 		
Labeled Quantity- enter weight for each	2. Unit of Me	easure		look up the Ma			a	5. Inspe	ction Lot Size	6. Sam	ple Si	ze (n)
package in column 1				nis value in Col		unns						
below.												
7. Initial Tare Sample	8. No. of MA	AVs Allowed	9. Range o		10. Range o	f Tare Wts.	(Rt)	11. Rc/l	$Rt(9 \div 10 =)$		12. Total No. of Tare	
Size			Errors (Rc)	'						Sample	S:	
13. Avg. Tare Wt : ☐ Use	d Dry Tare □	Wet Tare □	Unused Dry	Гаге	13a. □ Tare	Correction	-			14. Nor	ninal (Gross Wt.
	Pkg 1	Pkg 2	Pkg 3	Pkg 4	☐ Moisture Pkg 5	Allowance Pkg 6	PL	g 7	Pkg 8	Pkg 9		Pkg 10
a. Gross Wt.	I Ng I	I Ng 2	INGS	ING 4	rkg 5	I Kg U	11	<u>g</u> /	I Kg o	I Kg 9		rkg IU
b. Tare Wt.										†		
c. Net Wt.												
d. Package Error												
				Money Erro	rs				Package Erro	rs		
Product Description, Lot C	ode, Unit Price			-	+	I. Labe	led Net V	Veight		+	4.	MAV
1.			~									
2.	***************************************											
3.												·
4.												
5.						<u> </u>						
6. 7.			·								-	
8.												
9.												
10.												
11.												
12.												
13.												
14												
15. 16.						11			-			
17.			-									
18.												
19.												
20.												
21.						ļ						
22.				ļ								
23. 24.						-					 	
24.							Tot	als				
15. Total Error	16. No. of ur	reasonable mir	nus errors	17. Is 16 gre	ater than 8?				dimensionless	19. Av	g. em	or in
		h package erro	r with the				units. (1	5 ÷ 6 =)			dunits	s (18 x 2
20. Is 18 Zero or Plus?	MAV in Col	4): 21. Compute	Sample		ails □ No, go e Correction I		23 Com	mute Sam	ple Error Limit	(21 x 22 =)·	
Yes, lot passes, go to 25		Standard Dev		22. Sampi	e correction i	actor.	0. حاد	pare Jaili	pic chor chill	(21 7 22 -	,,	
□ No, go to 21					1.22							
24. Disregarding the signs, ☐ Yes, Lot Fails, go to 25		n 23: ot Passes, go to	. 25		25. Dispo	osition of In	spection Rejecte					
Li Tes, Lot Falls, go to 25	□ NO, L	or rasses, go to	143		Official's		Rejecte	u				
Comments:												
					Acknowledgement of Report							

Date September 16, 1999	Random	Package Re	port - Ex	ample Forn	n	Sampling Plan: A ■ B □				Report Number:		
Location (name, address)	L		Manufac		,	Container Description						
L&O Market	tity:	Meat De	partment -	- L&O Mar	·ket	'						
MacCorkle Ave			Ground (лиск					plastic wr	rith soaker and ap		
Charleston, WV 25177		Lot Co	des			1						
			1, 19,			1		,				
Labeled Quantity- enter weight for each	2. Unit of Mo	еаѕиге			AAV for each policy of dimensionless		h a	5. Inspec	tion Lot	6. Sampl	le Size (n)	
package in the column 1	.001 lb)			olumn 4 below			1	23		12	
below. 7. Initial Tare Sample	9 NI- of M	AVs Allowed	0 D	- 6 D 1	10 D	- C T W	-h+-(D+)	11 D-/D	t (9÷10 =)	12 Total	No. of Tare	
Size	8. NO. 01 WI	A v s Allowed	Errors (Re	of Package	10. Range of	or rare wer	gnts(Rt)	II. KC/K	t (9÷10 =)	Samples:	No. of Tare	
2	0			10		1			10		2	
13. Avg. Tare Wt: ■ Use	d Dry Tare □	Wet Tare □	Unused Dry	Тате	13a. □ Ta	re Correctio	on .	I		14. Nomir	nal Gross Wt	
13.11.8.12.12.13.1			onasca ory	74.0			N/A			1	+ .020 lb	
	0.0205 Pkg I	lb Pkg 2	Pkg 3	Pkg 4	Pkg 5	Pkg 6		kg 7	Pkg 8	Pkg 9	Pkg 10	
a. Gross Wt.	1.852 lb	1.223 lb	rkg5	FRE 4	r Kg J	I Kg U		'g /	I Ng o	rkg 5	I Kg 10	
b. Tare Wt.	.020 lb	.021 lb										
c. Net Wt.	1.832 lb	1.202 lb										
d. Package Error	-18	-8										
(a - 14 =)								-		1		
				Money Erro	ors				Package Err	TOTS	4. MAV	
Product Description, Lot C	ode, Unit Price			-	+	l. Lab	eled Net V	Veight	-	+	4. MAY	
1. Ground Chuck - 1, 19,	99 - \$1.79 pe	er lb			1	1.85	lb		18			
2.	··					1.21	1.21 lb 7					
3.							1.56 lb 8					
4.					201		1.98 lb 14					
5.					\$.04	1.07 lb 23 1.55 lb 16			23	-	44	
6. 7.		-	-	1.02 lb 2								
8.					\$.04	1.44 lb 25					56	
9.						1.33 lb 16						
10.						2.03 lb 20					70	
11.									14			
12.					-	1.16	lb		11			
13. 14.					-	-						
15.		· · · · · · · · · · · · · · · · · · ·										
16.					+				 	 		
17.												
18.												
19.						ļ						
20.					_	ļ			-			
21. 22.				 		<u> </u>						
23.					 	 						
24.												
					···			tals	174			
15. Total Error		unreasonable r		17. Is 16 gr	eater than 8?				imensionless		g. error in	
- 174	(com with	pare each pack	age error		E II = N	- 1- 10	units. (1	$ 5 \div 6 = $			units (18 x 2	
	With	0		☐ Yes, Lot	Fails No, g	o to 18		- 14.5		=)	.014 lb	
20. Is 18 = Zero or Plus?		21. Compu	te Sample	22. Sam	ple Correction	Factor:	23. Con		le Error Limit			
☐ Yes, lot passes, go to 25		Standard D		4								
■ No, go to 21		Standard L	C riumon.	0.57	774				3.880			
		6.721										
24. Disregarding the signs,	is 18 larger tha	n 23:			25. Disp	osition of I	nspection	Lot:				
Yes, Lot Fails, go to 25 No, Lot Passes, go to 25						oved		Reject	ed			
Comments: Product found				s		s Signature		-				
					O I I C I WI							
					Acknowl	Acknowledgement of Report						
						_						

Date		Standard	Package Re	port			Sampling Plan: A □ B □					Report Number		
Location (name, ad	ocation (name, address) Product/Brand Identity								Manufacturer					
,					•								•	
			Lot Cod	es		-								
1. Labeled Quantity	У	2. Unit of M	easure	3. MAV	4. MAV	dimensionless	units) (3 ÷ 1	2 =)	5. Inspe	ection Lot	6. Samp	le Size	(n)	
						•	, ,		Size		,		` ,	
7 Instial Tone Com	10	Q No of M	AVs Allowed	9. Range of	f Not Wto	10. Range o	f Tono Wto	(D4)	11 Da/	$Rt(9 \div 10 =)$	12. Tota	1 NI	CT	
7. Initial Tare Sam Size	ipre	8. NO. 01 W	A v s Allowed	(Rc)	of Net Wis.	To. Range o	of fare wis.	(Rt)	II. RC/	Kt (9+10 -)	Samples:		таге	
				` '										
13. Avg. Tare Wt:	□ Use	d Dry Tare D	□ Wet Tare □	Unused Dr	y Tare	13a. Tare C	orrection				14. Nom			
						☐ Moisture	Allowance	пι	/acuum Pac	k	(1 + 13 -	· 13 a =)	
						- Moistare	7 tho wante							
		Pkg 1	Pkg 2	Pkg 3	Pkg 4	Pkg 5	Pkg 6		Pkg 7	Pkg 8	Pkg 9		Pkg	
a. Gross Wt.			 		-	+	-	-			-		10	
b. Tare Wt.			+			+	 	-		 				
c. Net Wt.					-	<u> </u>	1				-			
_	+		-	+		-		+		-		+		
1.			13.			25.				37.				
2.			14.			26.	38.							
3.			15.			27.	- ·			39.				
4.			16.			28.		40.						
5.			17.			29.								
6.			18.			30.		42.						
7.			19.			31.				43.				
8.			20.			32.				44.				
9.			21.			33. 34.				45. 46.		-		
10.			23.			35.				47.		-		
			24.				36. 48.							
12.						<u> </u>								
Total	Total		Total	To		Total		Total		Total	19. Avg. e	Total		
15. Total Error		package erro	nreasonable mir	ius errors (co	mpare each								labeled	
		package circ	A WILLI 4).			☐ Yes, lot	fails		(15 ÷ 6 =)		units (18 x 2 =)			
						□ No, go to 18								
20. ls 18 = Zero or	Plus?		21. Compute Standard Dev		22. Sam	ple Correction Factor: 23. Compute Sample Error Limit (21 x 22 s						x 22 =):	
☐ Yes, lot passes,	go to 2:	5	Standard Dev	iation.										
☐ No, go to 21														
24. Disregarding th	e signs,	is 18 larger th	an 23:			25. Dispo	osition of Ir	spection	on Lot:					
☐ Yes, lot fails, go	to 25	□ No. lot =	basses, go to 25			□ Appro	oved		☐ Reje	cted				
1 cs, lot rails, go	10 43	ب ۱۹۵, ۱۵۱ <u>۱</u>	,433c3, g0 t0 43			L Apple	J. CG		_ Reje	*****				
Comments:						Official's	Signature							
						Acknowle	edgement o	f Repo	rt	<u> </u>				

Date January 20, 1999 Standard Package Report - Sample Form Sampl								Samp	Sampling Plan: A ■ B □ Report Number								
Location (name, add	iress)	Product/Br	and Iden	ity:				Manu	fanufacturer: Container Des						escription		
Volunteer Market 18765 Alcoa Highw Knoxville, Tennesse 37920						ABC Cookies Inc 1069 Capitol Avenue Nashville, Tennessee 37204					Cardboard Box / Plastic Liner						
			April I	April 1998 A&B													
1. Labeled Quantity 453g (11b)	3. MAV .044 lb				1AV (dime	nsionless units) (3 ÷ 2 =)				spection it Size	6. Sample Size (n)						
7. Initial Tare Sample Size	8. No	o. of MAVs wed	9.	Range	of Net	Wts. (Rc)		Range o		11	Rc/Rt -10 =)	12. Total No. of Tare Samples:			amples:	
2		0							2			12					
13. Avg. Tare Wt: ■ Used Dry Tare □ Wet Tare □ Unused Dry Tare .014 Lb							Tare		13a. Tare Correction N/A Moisture Allowance Vacuum Pack				14. Nominal Gross Wt. (1 + 13 - 13 a =) 1.014 lb				
/		Pkg l	Pkg 2		Pkg 3		Pkg 4	Pkg		Pkg 6	Pk	g 7	Pkg 8	Pk	g 9	Pkg 10	
a. Gross Wt.		1.052 lb	1.0261														
b. Tare Wt.		.015 lb	.013 lb		-									-		ļ	
c. Net Wt.		1.037 lb	1.013 1.	b				-			,						
15	+		-			+	+		-		+		-			+	
1.		38	13.					25.					37.				
2.		12	14.					26.	26.				38.				
3.		8	15.					27.	27.				39.				
4.		4	16.					28.	28.				40.				
5. 3			17.					29.				41.					
6. 2			18.					30.					42.				
7.		12	19.					31.					43.				
8. 3			20.					32.					44.				
9.		4	21.					33.					45.				
10. 1	_		22.					34.					46.				
11. 0			23.					35.					47.				
12.		6	24.			<i>m</i>		36.			- T		48.				
Total 9	Total	84	Total			Tota		Tota			Total	I 10. 4	Total			Total	
15. Total Error + 75		16. No. of ur package error	with 4):	ie mii 0	nus erroi	rs (con	npare each	☐ Yes, lot fails dimensi				dimensio	g. error in ionless units. 19. Avg. error in labeled units (18 x 2 =) + .006 lb			3 x 2 =)	
							22. Sar	mple Correction Factor: 23. Compute Sample Error Limit (21 x 22 =):						?1 x 22 =):			
24. Disregarding the signs, is 18 larger than 23:								25. Dis ■ App	position of	Inspect	ion Lot:	iected					
☐ Yes, lot fails, go to 25 ☐ No, lot passes									e	□ Re	ceieu						
Comments: Lot Passes								Official's Signature									
									Acknov	vledgement	of Repo	ort					

^{*}U.S. Government Printing Office: 2001 — 484-914

			(



ISBN 0-16-051006-6



NIST Technical Publications

Periodical

Journal of Research of the National Institute of Standards and Technology—Reports NIST research and development in metrology and related fields of physical science, engineering, applied mathematics, statistics, biotechnology, and information technology. Papers cover a broad range of subjects, with major emphasis on measurement methodology and the basic technology underlying standardization. Also included from time to time are survey articles on topics closely related to the Institute's technical and scientific programs. Issued six times a year.

Nonperiodicals

Monographs—Major contributions to the technical literature on various subjects related to the Institute's scientific and technical activities.

Handbooks—Recommended codes of engineering and industrial practice (including safety codes) developed in cooperation with interested industries, professional organizations, and regulatory bodies.

Special Publications—Include proceedings of conferences sponsored by NIST, NIST annual reports, and other special publications appropriate to this grouping such as wall charts, pocket cards, and bibliographies.

National Standard Reference Data Series—Provides quantitative data on the physical and chemical properties of materials, compiled from the world's literature and critically evaluated. Developed under a worldwide program coordinated by NIST under the authority of the National Standard Data Act (Public Law 90-396). NOTE: The Journal of Physical and Chemical Reference Data (JPCRD) is published bimonthly for NIST by the American Institute of Physics (AIP). Subscription orders and renewals are available from AIP, P.O. Box 503284, St. Louis, MO 63150-3284.

Building Science Series—Disseminates technical information developed at the Institute on building materials, components, systems, and whole structures. The series presents research results, test methods, and performance criteria related to the structural and environmental functions and the durability and safety characteristics of building elements and systems.

Technical Notes—Studies or reports which are complete in themselves but restrictive in their treatment of a subject. Analogous to monographs but not so comprehensive in scope or definitive in treatment of the subject area. Often serve as a vehicle for final reports of work performed at NIST under the sponsorship of other government agencies.

Voluntary Product Standards—Developed under procedures published by the Department of Commerce in Part 10, Title 15, of the Code of Federal Regulations. The standards establish nationally recognized requirements for products, and provide all concerned interests with a basis for common understanding of the characteristics of the products. NIST administers this program in support of the efforts of private-sector standardizing organizations.

Order the following NIST publications—FIPS and NISTIRs—from the National Technical Information Service, Springfield, VA 22161.

Federal Information Processing Standards Publications (FIPS PUB)—Publications in this series collectively constitute the Federal Information Processing Standards Register. The Register serves as the official source of information in the Federal Government regarding standards issued by NIST pursuant to the Federal Property and Administrative Services Act of 1949 as amended, Public Law 89-306 (79 Stat. 1127), and as implemented by Executive Order 11717 (38 FR 12315, dated May 11, 1973) and Part 6 of Title 15 CFR (Code of Federal Regulations).

NIST Interagency or Internal Reports (NISTIR)—The series includes interim or final reports on work performed by NIST for outside sponsors (both government and nongovernment). In general, initial distribution is handled by the sponsor; public distribution is handled by sales through the National Technical Information Service, Springfield, VA 22161, in hard copy, electronic media, or microfiche form. NISTIR's may also report results of NIST projects of transitory or limited interest, including those that will be published subsequently in more comprehensive form.

U.S. Department of Commerce National Institute of Standards and Technology Gaithersburg, MD 20899 Stop 2600

Official Business Penalty for Private Use \$300 "ADDRESS SERVICE REQUESTED"

PRSRT STD POSTAGE AND FEES PAID NIST Permit No. G195