NIST PUBLICATIONS

REFERENCE



Handbook 133 Checking the Net Contents of Packaged Goods

0.10

VIJIOP 190530

QC 1 .U51 no.133 2003 Fourth Edition

NIS

as adopted by the 87th National Conference on Weights & Measures 2002

ANTING MIX

All An mals & Perennials

NIST Handbook 133 January 2003 he National Institute of Standards and Technology was established in 1988 by Congress to "assist industry in the development of technology ... needed to improve product quality, to modernize manufacturing processes, to ensure product reliability ... and to facilitate rapid commercialization ... of products based on new scientific discoveries."

NIST, originally founded as the National Bureau of Standards in 1901, works to strengthen U.S. industry's competitiveness; advance science and engineering; and improve public health, safety, and the environment. One of the agency's basic functions is to develop, maintain, and retain custody of the national standards of measurement, and provide the means and methods for comparing standards used in science, engineering, manufacturing, commerce, industry, and education with the standards adopted or recognized by the Federal Government.

As an agency of the U.S. Commerce Department's Technology Administration, NIST conducts basic and applied research in the physical sciences and engineering, and develops measurement techniques, test methods, standards, and related services. The Institute does generic and precompetitive work on new and advanced technologies. NIST's research facilities are located at Gaithersburg, MD 20899, and at Boulder, CO 80303. Major technical operating units and their principal activities are listed below. For more information visit the NIST Web site at <u>http://www.nist.gov</u>, or contact the Publications and Program Inquiries Desk, 301-975-3058.

Office of the Director

- National Quality Program
- International and Academic Affairs

Technology Services

- Standards Services
- Technology Partnerships
- Measurement Service
- Information Services
- Weights and Measures

Advanced Technology Program

- Economic Assessment
- Information Technology and Applications
- Chemistry and Life Sciences
- Electronics and Photonics Technology

Manufacturing Extension Partnership Program

- Regional Programs
- National Programs
- Program Development

Electronics and Electrical Engineering Laboratory

- Microelectronics
- Law Enforcement Standards
- Electricity
- Semiconductor Electronics
- Radio-Frequency Technology
- Electromagnetic Technology
- Optoelectronics¹
- Magnetic Technology¹

Manufacturing Engineering Laboratory

- Precision Engineering
- Manufacturing Metrology
- Intelligent Systems
- Fabrication Technology
- Manufacturing Systems Integration

Chemical Science and Technology Laboratory

- Biotechnology
- Process Measurements
- Surface and Microanalysis Science
- Physical and Chemical Properties²
- Analytical Chemistry

Physics Laboratory

- Electron and Optical Physics
- Atomic Physics
- Optical Technology
- Ionizing Radiation
- Time and Frequency
- Quantum Physics¹

Materials Science and Engineering Laboratory

- Intelligent Processing of Materials
- Ceramics
- Materials Reliability¹
- Polymers
- Metallurgy
- NIST Center for Neutron Research

Building and Fire Research Laboratory

- Applied Economics
- Materials and Construction Research
- Building Environment
- Fire Research

Information Technology Laboratory

- Mathematical and Computational Sciences²
- Advanced Network Technologies
- Computer Security
- Information Access
- Convergent Information Systems
- Information Services and Computing
- Software Diagnostics and Conformance Testing
- Statistical Engineering

¹At Boulder, CO 80303. ²Some elements at Boulder, CO.



NIST Handbook 133 Checking the Net Contents of Packaged Goods

as adopted by the 87th National Conference on Weights and Measures 2002

Editors:


Tom Coleman Terry L. Grimes

Henry V. Oppermann, Chief NIST Weights and Measures Division Gaithersburg, MD 20899-2600

> U.S. Department of Commerce Donald L. Evans, Secretary

> > **Technology Administration** Phillip J. Bond, Under Secretary of Commerce for Technology

National Institute of Standards and Technology Arden L. Bement, Jr., Director



Fourth Edition 2003 (Issued November 2002)

(Supersedes NIST Handbook 133, Third Edition, 1998; Supplement 1, 1990; Supplement 2, 1991; Supplement 3, 1992; Supplement 4, 1994, and the Fourth Edition January 2002)

December 2002

Certain commercial entities, equipment, or materials may be identified in this document in order to describe an experimental procedure or concept adequately. Such identification is not intended to imply recommendation or endorsement by the National Institute of Standards and Technology, nor is it intended to imply that the entities, materials, or equipment are necessarily the best available for the purpose.

National Institute of Standards and Technology Handbook 133, 2003 Edition Natl. Inst. Stand. Technol. Handb. 133, 2003 Ed., 110 pages (Dec. 2002) CODEN: NIHAE2

U.S. GOVERNMENT PRINTING OFFICE WASHINGTON: 2002

For sale by the Superintendent of Documents, U.S. Government Printing Office Internet: bookstore.gpo.gov Phone: toll free (866) 512-1800; DC area (202) 512-1800 Fax: (202) 512-2250 Mail: Stop SSOP, Washington, DC 20402-0001

ISBN 0-16-051249-2

Foreword

This handbook has been prepared as a procedural guide for compliance testing of net content statements on packaged goods. Compliance testing of packaged goods is the determination of the conformance of the results of the packaging, distribution, and retailing process (the packages) with specific legal requirements for net content declarations. This handbook has been primarily developed for use by government officials, it also should be useful to commercial and industrial establishments in the areas of packaging, distribution, and sale of commodities.

In conducting compliance testing, the conversion of the values of quantities should be handled with careful regard to the implied correspondence between the accuracy of the data and the given number of digits. In all conversions, the number of significant digits retained should be such that accuracy is neither sacrificed nor exaggerated. For this 4th edition of Handbook 133 all dimensions for test procedures, devices, or environments have been rounded to two significant digits (e.g., 2.5 cm to 1.0 in) or to a precision level applicable to test equipment (e.g., 200 kPa for 25 psi and 35 MPa for 5 000 psi).

Table of Contents for the 4th Edition of Handbook 133 (2003)

Forewordiii 2002 Amendments Table			
1.1 1.2 1.3 1.4 1.5 1.6 1.7 Ch:	Scope Package Requirements Sampling Plans Other Regulatory Agencies Responsible for Package Regulations and Applicable Requirements Assistance in Testing Operations Health and Safety Good Measurement Practices	2 	
Cin			
 2.1 2.2 2.3 2.4 2.5 2.6 	Gravimetric Test Procedure for Checking the Net Contents of Packaged Goods. Measurement Standards and Test Equipment Basic Test Procedure Borax The Determination of Drained Weight Drained Weight for Glazed or Frozen Foods	7 	
Ch	apter 3 – Test Procedures – For Packages Labeled by Volume	25	
3.1	Scope		
3.2	Gravimetric Test Procedure for Liquids		
3.3	Volumetric Test Procedures for Liquids		
3.4	Other Volumetric Test Procedures		
3.5	Mayonnaise and Salad Dressing		
3.6	Goods Labeled by Capacity – Volumetric Test Procedure		
3.7	Pressed and Blown Glass Tumblers and Stemware		
3.8	Volumetric Test Procedures for Paint, Varnish, and Lacquers – Non Aerosol		
3.9	Testing Viscous Materials – Such as Caulking Compounds and Pastes		
	 Peat Moss Mulch and Soils Labeled by Volume 		
	2 Ice Cream Novelties		
	3 Fresh Oysters Labeled by Volume		
	Determining the Net Contents of Compressed Gas in Cylinders		
	5 Volumetric Test Procedures for Packaged Firewood with a		
	Labeled Volume of 113 L (4 ft ³) or Less		
	5 Boxed Firewood		
	7 Crosshatched Firewood		
3.18	Bundles and Bags of Firewood	53	

Cha	apter 4 – Test Procedures - Packages Labeled by Count, L	inear
	Measure, Area, Thickness, and Combinations of Quantiti	es 55
4.1	Scope	
4.2	Packages Labeled by Count	
4.3	Packages Labeled with 50 Items or Less	
4.4	Packages Labeled by Count of More than 50 Items	
4.5	Paper Plates and Sanitary Paper Products	
4.6	Special Test Requirements for Packages Labeled by Linear or Square Measure (Area)	60
4.7	Polyethylene Sheeting	
4.8	Packages Labeled by Linear or Square (Area) Measure	
4.9 Bailer Twine – Test Procedure for Length		
	Procedure for Checking the Area Measurement of Chamois	
Inde	х	71
Арр	oendix A Tables	A-1
Арр	oendix B Random Number Tables	B-1
Арр	oendix C Glossary	C-1
Арр	pendix D Acknowledgments and References	D-1
Арр	oendix E Model Inspection Report Forms	E-1

Handbook 133, Fourth Edition (2003) 2002 Amendments

The following table lists the laws and regulations amended by the 87th NCWM. As appropriate, the text on the cited pages indicates the changes to the section or paragraph as "Added 2002" or "Amended 2002." Unless otherwise noted, the effective date of the information "Added" or "Amended" in 2002 is January 1, 2003.

L&R Committee Item No.	Chapter, Section, And Title	Action	Page
250-1	Chapter 1. "Retail"	Amended	1
250-2	Chapter 2. Section 2.3.: "How are the tare sample and the tare weight of the packaging material determined?"	Amended the title question and the text in Step 2	14-15
250-3	Chapter 2. Section 2.3.: "When and where is unused dry tare used, and how is it used to determine an average tare weight?"	Amended	15
250-4	Chapter 1. Section 1.2.: "Why do we allow for moisture loss or gain?"	Amended the title question and added new paragraph	3
250-5	Chapter 2. Section 2.3.: "How is the average error for moisture allowance corrected?"	Amended to add new paragraphs	19-20

Handbook 133, Fourth Edition (2003) 2002 Editorial Corrections

Chapter, Section, And Title	Action	Page
Chapter 2. Section 2.6.: "How is the net weight of glazed raw seafood and fish determined?"	Generalized Step 3 to seafood	24
Appendix A, Table 2-3.	Corrected typographical error in column headed "Ratio of Rc/Rt"	A-3
Appendix E, Random Package Report – Example Form	Corrected Blocks 22 and 23	E-3

Chapter 1. General Information

1.1 Scope

Routine verification of the net contents of packages is an important part of any weights and measures program to facilitate value comparison and fair competition. Consumers have the right to expect packages to bear accurate net content information. Those manufacturers whose products are sold in such packages have the right to expect that their competitors will be required to adhere to the same standards.

The procedures in this handbook are recommended for use to verify the net quantity of contents of packages kept, offered, or exposed for sale, or sold by weight, measure (including volume, and dimensions) or count at any location (e.g., at the point-of-pack, in storage warehouses, retail stores, and wholesale outlets).

When and where to use these procedures?

An effective program will typically include testing at each of the following levels.

Point-of-pack

Testing packages at the "point-of-pack" has an immediate impact on the packaging process. Usually, a large number of packages of a single product are available for testing at one place. This allows the inspector to verify that the packer is following current good packaging practices. Inspection at the point-of-pack also provides the opportunity to educate the packer about the legal requirements that products must meet and may permit resolution of any net content issues or other problems that arise during the testing. Point-of-pack testing is not always possible because packing locations can be in other States or countries. Work with other State, county, and city jurisdictions to encourage point-of-pack inspection on products manufactured in their geographic jurisdictions. Point-of-pack inspections cannot entirely replace testing at wholesale or retail outlets, because this type of inspection does not include imported products or the possible effects of product distribution and moisture loss at retail. At the point-of-pack, only examine the manufacturing process. Therefore, an effective testing program will also test at wholesale and retail outlets.

Wholesale

Testing packages at a distribution warehouse is an alternative to testing at the production point with respect to being able to test large quantities and a variety of products. Wholesale testing is a very good way to monitor products imported from other countries and to follow up on products suspected of being underfilled based on consumer complaints or findings made during other inspections, including those done at retail outlets.

Retail

Testing packages at retail outlets evaluates the soundness of the manufacturing, distributing, and retailing processes of the widest variety of goods at a single location. It is an easily accessible, practical means for State, county and city jurisdictions to monitor packaging procedures and to detect present or potential problems. Generally, retail package testing is not conducive to checking large quantities of individual products of any single production lot. Therefore, follow-up inspections of a particular brand or lot code number at a number of retail and wholesale outlets, and ultimately at the point-of-pack are extremely important aspects in any package-checking scheme. After the evaluation of an inspection lot is reached, the jurisdiction should consider what, if any, further investigation or follow-up is warranted. At the point-of-sale, a large number of processes impinge on the quality or quantity of the product. Therefore, there may be many reasons for any inspection lot being out of compliance. A shortage in weight or measure may

result from mishandling the product in the store or the retailer's failure to rotate stock. Shortages may also be caused through mishandling by a distributor or failure of some part of the packaging process. Shortages may also be caused by moisture loss (desiccation) if the product is packaged in permeable media. Therefore, being able to determine the cause of an error in order to correct defects is more difficult when retail testing is used.

(Amended 2002)

What products can be tested?

Any commodity sold by weight, measure, or count may be tested. The product to be tested may be chosen in several ways. The decision may be based on different factors, such as (1) marketplace surveys (e.g., jurisdiction-wide surveys of all soft drinks or breads), (2) surveys based on sales volume, or (3) audit testing (see Section 1.3) to cover as large a product variety as possible at food, farm, drug, hardware stores, or specialty outlets, discount and department stores. Follow-up of possible problems detected in audit testing or in review of past performance tends to concentrate inspection resources on particular commodity types, brand names, retail or wholesale locations, or even particular neighborhoods. The expected benefits for the public must be balanced against the cost of testing. Expensive products should be tested because of their cost per unit. However, inexpensive items should also be tested because the overall cost to individual purchasers may be considerable over an extended period. Store packaged items, which are usually perishable and not subject to other official monitoring, should be routinely tested because they are offered for sale where they are packed. Products on sale and special products produced for local consumption should not be overlooked because these items sell quickly in large amounts.

Regardless of where the test occurs, remember that it is the inspector's presence in the marketplace through routine unannounced testing that ensures equity and fair competition in the manufacturing and distribution process. Finally, always follow up on testing to ensure that the problems are corrected; otherwise, the initial testing may be ineffective.

1.2 Package Requirements

The net quantity of content statement must be "accurate," but reasonable variations are permitted. Variations in package contents may be a result of deviations in filling. The limits for acceptable variation are based on current good manufacturing practices in the weighing, measuring, and packaging process. The first requirement is that accuracy is applied to the average net contents of the packages in the lot. The second requirement is applied to negative errors in individual packages. These requirements apply simultaneously to the inspection of all lots of packages except as specified in "Exceptions to the Average and Individual Package Requirements" in this section.

Inspection Lot

An "inspection lot" (called a "lot" in this handbook) is defined as a collection of identically labeled (except for quantity or identity in the case of random packages) packages available for inspection at one time. The collection of packages will pass or fail as a whole based on the results of tests on a sample drawn from this collection. This handbook describes procedures to determine if the packages in an "inspection lot" contain the declared net quantity of contents and if the individual packages variations are within acceptable limits.

Average Requirement

In general, the average net quantity of contents of packages in a lot must at least equal the net quantity of contents declared on the label. Plus or minus variations from the declared net weight, measure, or count are permitted when they are caused by unavoidable variations in weighing, measuring, or counting the contents of individual packages that occur in current good manufacturing practice. Such variations must not be permitted to the extent that the average of the quantities in the packages of a particular commodity or a lot of the commodity that is kept, offered, exposed for sale, or sold, is below the stated quantity. (See Section 3.7, "Pressed and Blown Glass Tumblers and Stemware" and Section 4.3, "Packages Labeled by Count of 50 Items or Less for exceptions to this requirement".)

Individual Package Requirement

The variation of individual package contents from the labeled quantity must not be "unreasonably large." In this handbook, packages that are under filled by more than the Maximum Allowable Variation specified for the package are considered unreasonable errors. Unreasonable shortages are not generally permitted, even though overages in other packages in the same lot, shipment or delivery compensate for such shortage. This handbook does not specify limits of overfilling, which is usually controlled by the packer.

Maximum Allowable Variation

The limit of "reasonable variation" for an individual package is called a "Maximum Allowable Variation" (MAV). An MAV is a deviation from the labeled weight, measure, or count of an individual package beyond which the deficiency is considered unreasonable. Each sampling plan limits the number of negative package errors permitted to be greater than the MAV.

Deviations Caused by Moisture Loss or Gain

Deviations from the net quantity of contents caused by the loss or gain of moisture from the package are permitted when they are caused by ordinary and customary exposure to conditions that normally occur in good distribution practice and that unavoidably result in change of weight or measure. According to regulations adopted by the U.S. Environmental Protection Agency, no moisture loss is recognized on pesticides. (See Code of Federal Regulations 40 CFR 156.10.)

Why do we allow for moisture loss or gain?

Some packaged products may lose or gain moisture and, therefore, lose or gain weight or volume after packaging. The amount of lost moisture depends upon the nature of the product, the packaging material, the length of time it is in distribution, environmental conditions, and other factors. Moisture loss may occur even when manufacturers follow good distribution practices. Loss of weight "due to exposure" may include solvent evaporation, not just loss of water. For loss or gain of moisture, apply the moisture allowances to the maximum allowable variations permitted for individual packages and to the average net quantity of contents before determining the conformance of a lot.

This handbook provides "moisture allowances" for some meat and poultry products, flour, and dry pet food. (See "Moisture Allowances" in Chapter 2.) These allowances are based on the premise that when the average net weight of a sample is found to be less than the labeled weight, but not by an amount that exceeds the allowable limit, either the lot is declared to be within the moisture allowance, or more information must be collected before deciding lot compliance or noncompliance.

Test procedures for flour, some meat, and poultry are based on the concept of a "moisture allowance" also known as a "gray area" or "no decision" area. (See Section 2.3, Basic Test Procedure, Calculations, "How is the Maximum Allowable Variation corrected for the Moisture Allowance/How is the Average Error for Moisture Allowance corrected?") When the average net weight of a sample is found to be less than the labeled weight, but not more than the boundary of the "gray area," the lot is said to be in the "gray" or "no decision area." The gray area is not a tolerance. More information must be collected before lot compliance or noncompliance can be decided. Appropriate enforcement should be taken on packages found short weight and outside of the "moisture allowance" or "gray area." (Amended 2002)

Exceptions to the Average and Individual Package Requirements

There is an exemption from the average requirement for packages labeled by count of 50 or fewer items. The reason for this exemption is that the package count does not follow a "normal" distribution even if the package is designed to hold the maximum count indicated by the label declaration (e.g., egg cartons and

packages of chewing gum). Another exception permits an "allowable difference" in the capacity of glass tumblers and stemware because mold capacity doesn't follow a normal distribution.

1.3 Sampling Plans

This handbook contains two sampling plans to use to inspect packages: **Category A** and **Category B**. Use the **Category B** Sampling Plans to test meat and poultry products at point-of-pack locations that are subject to U. S. Department of Agriculture Food Safety and Inspection Service (FSIS) requirements. When testing all other packages, use the **Category A** Sampling Plan.

Why is sampling used to test packages?

Inspections by weights and measures officials must provide the public with the greatest benefit at the lowest possible cost. Sampling reduces the time to inspect a lot of packages, so a greater number of items can be inspected. Net content inspection, using sampling plans for marketplace surveillance, protects consumers who cannot verify the net quantity of contents. This ensures fair trade practices and maintains a competitive marketplace. It also encourages manufacturers, distributors, and retailers to follow good manufacturing and distribution practices.

Why is the test acceptance criteria statistically corrected, and what are the confidence levels of the sampling plans?

Testing a "sample" of packages from a lot instead of every package is efficient, but the test results have a "sampling variability" that must be corrected before determining if the lot passes or fails. The Category A sampling plans give acceptable lots a 97 percent or better probability of passing. Where an "acceptable" lot is defined as one, in which the "average" net quantity of contents of the packages equals or exceeds the labeled quantity. The Category B sampling plans give acceptable lots at least a 50 percent probability of passing. The sampling plans used in this handbook are statistically valid. That means the test acceptance criteria are statistically adjusted, so they are both valid and legally defensible. This handbook does not discuss the statistical basis, risk factors, or provide the operating characteristic curves for the sampling plans. For information on these subjects, see explanations on "acceptance sampling" in statistical reference books.

Why random samples?

A randomly selected sample is necessary to ensure statistical validity and reliable data. This is accomplished by using random numbers to determine which packages are chosen for inspection. Improper collection of sample packages can lead to bias and unreliable results.

May audit tests and other shortcuts be used to identify potentially violative lots?

Shortcuts may be used to speed the process of detecting possible net content violations. These audit procedures may include the following: using smaller sample sizes, spot checks using tare lists provided by manufacturers, selecting samples without collecting a random sample. These and other shortcuts allow spot checking of more products than is possible with the more structured techniques, but do not take the place of Category A or B testing.

Can audit tests and other shortcuts be used to take enforcement action?

No. Do not take enforcement action using audit test results.

If after an audit test there is suspicion that a lot of packages are not in compliance, use the appropriate Category A or Category B sampling plan to determine if the lot complies with the package requirements.

1.4 Other Regulatory Agencies Responsible for Package Regulations and Applicable Requirements

In the United States, several Federal agencies issue regulations regarding package labeling and net contents. The U.S. Department of Agriculture regulates meat and poultry. The Food and Drug Administration regulates food, drugs, and cosmetic products, and medical devices under the Food, Drug, and Cosmetic Act and the Fair Packaging and Labeling Act (FPLA). The Federal Trade Commission regulates most non-food consumer packaged products as part of the agency's responsibility under the FPLA. The Environmental Protection Agency regulates pesticides. The Bureau of Alcohol, Tobacco, and Firearms in the U.S. Department of the Treasury promulgates regulations for packaged tobacco and alcoholic beverages as part of its responsibility under the Federal Alcohol Administration Act.

Packaged goods produced for distribution and sale also come under the jurisdiction of State and local weights and measures agencies that adopt their own legal requirements for packaged goods. Federal statutes set requirements that pre-empt State and local regulations that are or may be less stringent or not identical to Federal regulation depending on the Federal law that authorizes the Federal regulation. The application of Handbook 133 procedures occurs in the context of the concurrent jurisdiction among Federal, State, and local authorities. Therefore, all agencies using this handbook should keep abreast of the revisions to Federal agency regulations that may contain sampling or testing information not in the regulations at the time of publication of this handbook. See Table 1-1. in Appendix A for information on the responsible agencies for package regulations and the requirements of this handbook that must be used when testing products concurrently subject to pre-emptive federal regulations.

1.5 Assistance in Testing Operations

If the storage, display, or location of any lot of packages requires special equipment or an abnormal amount of labor for inspection, the owner or the operator of the business must supply the equipment and/or labor as required by the weights and measures official.

1.6 Health and Safety

This handbook cannot address all of the health and safety issues associated with its use. The inspector is responsible for determining the appropriate safety and health practices and procedures before starting an inspection (e.g., contact the establishment's health and safety official). Comply with all handling, health, and safety warnings on package labels and those contained in any associated material safety data sheets. The inspector must also comply with Federal, State, or local health and safety laws or other appropriate requirements in effect at the time and location of the inspection. Contact your supervisor to obtain information regarding your agencies safety and health policies and to obtain appropriate safety equipment.

1.7 Good Measurement Practices

The procedures in this handbook are designed to be technically sound and represent good measurement practices. To assist in documenting tests, we have included "model" inspection report forms designed to record the information.

Traceability Requirements for Measurement Standards and Test Equipment

Each test procedure presented in this handbook includes a list of the equipment needed to perform the inspection. The scales and other measurement standards used (e.g., balances, mass standards, volumetric, and linear measures) to conduct any test must be traceable to the National Institute of Standards and Technology (NIST). Use these standards in the manner in which they were designed and calibrated for use.

Certification Requirements for Standards and Test Equipment

All measurement standards and test equipment identified in this handbook or associated with the test procedures must be calibrated or standardized before initial use. This must be done according to the instructions found in NIST Handbook 145, "Handbook for the Quality Assurance of Metrological

Measurements," or other recognized procedures (e.g., those adopted for use by a State weights and measures laboratory). After initial certification, the standards must be routinely recertified according to your agency's measurement assurance policies.

Chapter 2. Basic Test Procedure – Gravimetric Testing

2.1 Gravimetric Test Procedure for Checking the Net Contents of Packaged Goods

The gravimetric test method uses weight measurement to determine the net quantity of contents of packaged goods. This handbook includes general test methods to determine the net quantity of contents of packages labeled in terms of weight and special test methods for packages labeled in terms of fluid measure or count. Gravimetric testing is the preferred method of testing most products because it reduces destructive testing while maximizing inspection resources.

2.2 Measurement Standards and Test Equipment

What type of scale is required to perform the gravimetric test method?

Use a scale (for this handbook the term scale includes balances) that has at least 100 scale divisions. It must have a load-receiving element of sufficient size and capacity to hold the packages during weighing. It also requires a scale division no larger than 1/6 of the Maximum Allowable Variation (MAV) for the package size being weighed. The MAV/6 requirement is crucial to ensure that the scale has adequate resolution to determine the net contents of the packages. Subsequent references to product test criteria agreeing within one scale division are based on scale divisions that are equal to or only slightly smaller than the MAV/6.

Example: The MAV for packages labeled 113 g (0.25 lb) is 7 g (0.03 lb) (See Table 1-1.) MAV/6 is 1.16 g (0.002 lb). In this example, a 1 g (0.002 lb) scale division would be the largest unit of measure appropriate for weighing these packages.

How often should I verify the accuracy of a scale?

Verify the accuracy of a scale before each initial daily use, each use at a new location, or when there is any indication of abnormal equipment performance (e.g., erratic indications). Recheck the scale accuracy if it is found that the lot does not pass, so there can be confidence that the test equipment is not at fault.

Which accuracy requirements apply?

Scales used to check packages must meet the acceptance tolerances specified for their accuracy class in the current edition of NIST Handbook 44, "Specifications, Tolerances, and Other Technical Requirements for Weighing and Measuring Devices" (NIST HB 44). The tolerances for Class II and Class III digital scales are presented in Section 2.20., Scales, NIST HB 44.

Note: If the package checking scale is not marked with a "class" designation, use Table 1-1., to determine the applicable tolerance.

What considerations affect measurement accuracy?

Always use good weighing and measuring practices. For example, be sure to use weighing and measuring equipment according to the manufacturer's instructions and make sure the environment is suitable. Place scales and other measuring equipment (e.g., flasks and volumetric measures) on a rigid support and maintain them in a level condition if being level is a requirement to ensure accuracy.

In testing, which tolerances apply to the scale?

Do not use a scale if it has an error that exceeds the specified tolerance in any of the performance tests described in the following section.

1. Determine the total number of divisions (i.e., a division is the minimum increment or graduation indicated by the scale) of the scale by dividing the scale's capacity by the minimum division.

Example: A scale with a capacity of 5 000 g and a minimum division of 0.1 g has 50 000 divisions.

2. From Table 1-1., determine the class of the scale using the minimum scale division and the total number of scale divisions.

Example: On a scale with a minimum division of 0.1 g and 50 000 total scale divisions the appropriate class of scale is "II."

Note: If a scale is used where the number of scale divisions is between 5 001 and 10 000 and the division size is 0.1 g or greater and is not marked with an accuracy Class II marking, Class III scale tolerances apply.

Table 1-1. Class of Scale		
Value of Scale Division ¹	Minimum and Total Number of Divisions	Class of Scale
1 mg to 0.05 g	At least 100, but not more than 100 000	II
0.1 g or more	More than 5 000, but not more than 100 000	II
0.1 g to 2 g 0.000 2 lb to 0.005 lb 0.005 oz to 0.125 oz	More than 100, but not more than 10 000	III
5 g or more 0.01 lb or more 0.25 oz or more	More than 500, but not more than 10 000	111
¹ On some scales, manufacturers designated and marked the scale with a verification division (e) for testing purposes ($e = 1$ g and $d = 0.1$ g). For scales marked Class 11, the verification division is larger than the minimum displayed division. The minimum displayed division must be differentiated from the verification scale division by an auxiliary reading means such as a vernier, rider, or at least significant digit that is differentiated by size, shape, or color. Where the verification division is less than or equal to the minimum division, use the verification division instead of the minimum division. Where scales are made for use with mass standards (e.g., an equal arm balance without graduations on the indicator) the smallest mass standard used for the measurement is the minimum division.		

3. Determine the tolerance from Table 1-2. in divisions appropriate for the test load and class of scale.

Example: Determine the number of divisions for any test load by dividing the value of the mass standard being applied by the minimum division indicated by the scale. For example, if the scale has a minimum division of 0.1 g and a 1500 g mass standard is applied, the test load is equal to 15 000 divisions (1 500/0.1). On a Class II scale with a test load between 10 000 and 20 000 divisions, Table 1-2. shows the tolerance is plus or minus one division.

	Table 1-2. Acceptance Tolerances for Class of Scale based on Test L Test Load in Divisions	
Class II Scale	Class III Scale	Tolerance
0 to 5 000	0 to 500	Plus or Minus 0.5 Division
5 001 to 20 000	501 to 2 000	Plus or Minus 1 Division
20 001 or more	2 001 to 4 000	Plus or Minus 1.5 Divisions
Not Applicable	4 001 or more	Plus or Minus 2.5 Divisions

Which performance tests should be conducted to ensure the accuracy of a scale?

Use the following procedures to verify the scale. The following procedures, based on those required in NIST Handbook 44, have been modified to reduce the amount of time required for testing scales in field situations.

Increasing-Load Test

Use certified mass standards to conduct an "increasing-load test" with all test loads centered on the loadreceiving element. Start the test with the device on zero and progress with increasing test loads to a "maximum test load" of at least 10 percent more than the gross weight of the packages to be tested. Use at least three different test loads of approximately equal value to test the device up to the "maximum test load." Verify the accuracy of the device at each test load. Include the package tare weight as one of the test points.

Decreasing-Load Test

For all types of scales, other than one with a beam indicator or equal-arm balance, conduct a "decreasingload test" with all test loads centered on the load-receiving element. Use the same test loads used in the "increasing-load test" of this section, and start at the "maximum test load." Remove the test loads in the reverse order of the increasing-load test until all test loads are removed. Verify the accuracy of the scale at each test load.

Shift Test

Use a test load equal to one-half of the "maximum test load" used for the "increasing-load test." For bench scales (see Diagram 1) place the test load in the center of four separate quadrants, equidistant between the center and edge of the load-receiving element and determine the accuracy in each quadrant for equal-arm balances. For example, where the load-receiving element is a rectangular or circular shape, place the test load in the center of the area represented by the shaded boxes in the following diagrams.

Diagram 1. Bench Scales


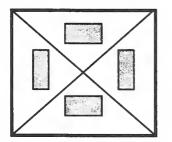


Diagram 2. Equal-Arm Balance

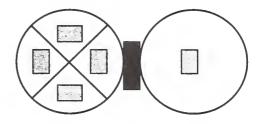

Return to Zero

Conduct the return to zero test whenever all the test weights from the scale are removed, check to ensure that it returns to a zero indication.

Which standards apply to the other test equipment?

Specifications, tolerances, and other technical requirements for the other measurement standards and test equipment cited in this handbook are specified in the following NIST publications. These publications may be obtained from the Office of Weights and Measures or the U.S. Government Printing Office.

- Mass Standards Use NIST Handbook 105-1, "Specifications and Tolerances for Reference Standards and Field Standard Weights and Measures-Field Standard Weights (NIST Class F)" (1990)
- Volumetric Flasks and Cylinders Use NIST Handbook 105-2, "Specifications and Tolerances for Reference Standards and Field Standard Weights and Measures-Field Standard Measuring Flasks" (1996)
- Stopwatches Use NIST Handbook 105-5, "Specifications and Tolerances for Reference Standards and Field Standard Weights and Measures-Field Standard Stopwatches" (1997)
- Thermometers Use NIST Handbook 105-6, "Specifications and Tolerances for Reference Standards and Field Standard Weights and Measures-Specifications and Tolerances for Thermometers" (1997)

2.3 Basic Test Procedure

The following steps apply when gravimetrically testing any type of packaged product except for Borax and glazed or frozen foods. If the tested products contain Borax, refer to Section 2.4, Borax. If glazed or frozen food is tested, refer to Section 2.6, Drained Weight for Glazed or Frozen Foods.

The Basic Test Procedure:

- 1. Identify and define the inspection lot.
- 2. Select the sampling plan.
- 3. Select the random sample.
- 4. Measure the net contents of the packages in the sample.
- 5. Evaluate compliance with the Maximum Allowable Variation (MAV) requirement.
- 6. Evaluate compliance with the average requirement.

Define the Inspection Lot

The official defines which packages are to be tested and the size of the inspection lot. The lot may be smaller or larger than the production lot defined by the packer. Only take action on the packages contained in the lot that has been defined.

Note: Normally, there will never be access to the entire "production lot" from a manufacturer. The "inspection lot" is selected from packages that are available for inspection/test at any location in the product distribution chain.

Example: An inspection lot should consist of all of the cans of a single brand of peach halves, labeled with a net quantity of 453 g (1 lb). When packages are tested in retail stores, it is not necessary to sort by lot code. If lot codes are mixed during retail testing,

be sure to record the lot codes for all of the packages included in the sample so that the inspector and other interested parties can follow up on the information. For special reasons, such as a large number of packages or the prior history of problems with the product or store, the inspector may choose to define a lot as only one type of packaged product (e.g., ground beef). Another reason to narrowly define the lot is if the results of an audit test indicate the possibility of a shortage in one particular lot code within a particular product.

What is the difference between standard and random weight packages?

Standard packages are those with identical net content declarations such as containers of soda in 2 L bottles and 2.27 kg (5 lb) packages of flour. "Random packages" are those with differing or no fixed patterns of weight, such as packages of meat, poultry, fish, or cheese.

Sampling Plans

Where are sampling plans located for Category A inspections?

Use Table 2-1., Sampling Plans for Category A in Appendix A to conduct Category A inspections.

Where are sampling plans located for Category B inspections?

Use Table 2-2., Sampling Plans for Category B in Appendix A to conduct Category B inspections.

Basic Inspection Procedure and Record Keeping

How are the specific steps of the Basic Test Procedure and document the inspection identified?

Use an official inspection report to record the inspection information. Attach additional worksheets, test notes, and other information as needed. This handbook provides random and standard packaged products model inspection report forms in Appendix E. The references to box numbers in these instructions refer to the random and standard package reports in Appendix E. Modify the model reports and the box numbers to meet your agency's needs. Other formats that contain more or less information may be acceptable.

Note: Inspection reports should be legible and complete. Good record keeping practices typically include record retention for a specified period of time (e.g., 1 to 3 years).

- Record the product identity, packaging description, lot code, location of test, and other pertinent data.
- Record the labeled net quantity of contents in box 1. Record both metric and inch-pound declarations if they are provided on the package label.

Example: If the labeled weight is 453 g (1 lb), record this in box 1.

When the declaration of net quantity on the package includes both the International System of Units (SI) (metric) and inch-pound units, the larger of the two declarations must be verified. The rounding rules in the Uniform Packaging and Labeling Regulation in NIST Handbook 130 permit packers to round declarations up or down based on their knowledge of their package filling targets and the accuracy of packaging equipment.

Determine the larger of the values by converting the SI declaration to inch-pound units, or vice versa, using conversion factors that are accurate to at least six places. Compare the values, and use the larger value in computing the nominal gross weight (see later steps). Indicate on the report which of the declarations are being verified when packages labeled with two units of measure are encountered.

Example: If the net weight declared on a package is 1 lb, the metric equivalent (accurate to six significant digits) is 453.592 g. Do not round down or truncate values in the calculations until the nominal gross weight is determined and recorded. If the package is also labeled 454 g, then the metric declaration is larger than the inch-pound declaration and should be used to verify the net contents of the package. The Basic Test Procedure does not prohibit the use of units of weight instead of dimensionless units when recording package errors, nor does it prohibit the use of net content computer programs to determine product compliance. Record the unit of measure in box 2. The unit of measure is the minimum division of the unit of measurement used to conduct the test. If a scale is used that reads to thousandths of a pound, the unit of measure is 0.001 lb even if the scale division is 0.002 lb or 0.005 lb.

Example: If the scale has a scale division of 0.5 g, the unit of measure is 0.1 g. If a weighed package that has an error of "0.5 g," record the error as "-5" using "dimensionless units." If the scale indicates in increments of 0.002 lb, the unit of measure is 0.001 lb. If a weighed package has an error of "0.016," record the error as "16" using "dimensionless units." When using dimensionless units, multiply package errors by the unit of measure to obtain the package error in weight.

Enter the appropriate MAV value in box 3 for the type of package (weight, volume, etc.), the labeled net contents, and the unit of measure.

Where are Maximum Allowable Variations found?

Find the MAV values for packages labeled by weight, volume, count, and measure in the tables listed below in Appendix A.

•	packages labeled by weight	See Table 2-5.
•	packages labeled by volume liquid or dry	See Table 2-6.
•	packages labeled by count	See Table 2-7.
٠	packages labeled by length, (width), or area	See Table 2-8.
•	packages labeled with USDA seal of inspection - Meat and Poultry	See Table 2-9.
٠	textiles, polyethylene sheeting and film, mulch and soil labeled by volume, packaged firewood, and packages labeled by count with less than 50 items	See Table 2-10.

How is the value of an MAV found?

Refer to the appropriate table of MAVs and locate the declared quantity that is on the package label in the column marked "Labeled Quantity." Read across the table to find the value in the column titled "Maximum Allowable Variation." Record this number in box 3. Determine the MAV in dimensionless units and record in box 4 on the Standard Package Report Form (a dimensionless unit is obtained by dividing the MAV recorded in box 3 by the unit of measure recorded in box 2). Refer to Appendix C, "The Glossary," for the definition of dimensionless units.

How is it determined how many MAVs are permitted in a sample?

To find out how many minus package errors are permitted to exceed the MAV, see Column 4 in either Table 2-1. (Category A) or Table 2-2. (Category B). Record this number in box 8.

Random Sample Selection

How are the sample packages selected?

Randomly select a sample from the inspection lot. Random number tables (see Appendix B) or a calculator to generate the numbers may be used to collect the sample. If the packages for the sample are not randomly selected, the test results may not be statistically valid.

Note: If the inspector and the party that is ultimately responsible for the packing and declaration of net weight for the product agree to an alternative method of sample selection, document how the sample packages were selected as part of the inspection record.

How is the size of the "Lot" determined?

Count the number of packages comprising the inspection lot or estimate the size to within 5 percent and record the inspection lot size in box 5.

How is the sample size determined?

Refer to Table 2-1. or Table 2-2. to determine the sample size. In Column 1, find the size of the inspection lot (the number recorded in box 5 of the report form). Read across from Column 1 to find the appropriate sample size in Column 2 and record this number in box 6 of the report form.

Tare Procedures

What types of tare are or may be used to determine the net weight of package goods?

This handbook defines three types of tare for the inspection of packaged goods. The tare weight may vary considerably from package to package as compared with the variability of the package net contents, even for packages in the same production lot. Although this is not common for most packaging, the basic test procedure in this handbook considers the variation for all tare materials.

Used Dry Tare

Used Dry Tare is defined as follows: Used tare material that has been air dried, or dried in some manner to simulate the unused tare weight. It includes all packaging materials that can be separated from the packaged product, either readily (e.g., by shaking) or by washing, scraping, ambient air drying, or other techniques involving more than "normal" household recovery procedures, but not including laboratory procedures like oven drying. Labels, wire closures, staples, prizes, decorations, and such are considered tare. Used Dry Tare is available regardless of where the packages are tested. The net content procedures described in this handbook reference Used Dry Tare.

Unused Dry Tare

If testing packages in retail store locations where they are packaged, and sold in small quantities to the ultimate consumers, the basic test procedure may be modified by using samples of the packaging material available in the store. Unused dry tare is defined as:

All unused packaging materials (including glue, labels, ties, etc.) that contain or enclose a product. It includes prizes, gifts, coupons, or decorations that are not part of the product.

Wet Tare

If the jurisdiction uses wet tare to determine net weight, follow the procedures described below that reference Used Dry Tare, except make no effort to dry the tare material. If Wet Tare is used to verify the

net weight of packages of fresh poultry, hot dogs, and franks that are subject to the USDA regulations, the inspector must allow for moisture loss. Wet Tare is defined as: Used tare material where no effort is made to dry the tare material. Free-flowing liquids are considered part of the tare weight.

How is a tare weight determined?

Except in the instance of applying unused dry tare, select the packages for the initial tare sample from the sample packages. Mark the first two (three or five) packages in the order the random numbers were selected; these packages provide the initial tare sample. Determine the gross weight of each package and record it in block a, "Gross Wt," under the headings "Pkg. 1," "Pkg. 2," "Pkg. 3," etc. on the report form. Except for aerosol or other pressurized packages, open the sample packages, empty, clean, and dry them as appropriate for the packaging material.

Does the inspection of aerosol containers require special procedures?

Yes, aerosol containers are handled differently for two reasons. First, regulations under the Uniform Packaging and Labeling Regulation in NIST HB 130 require that packages designed "to deliver" the product under pressure, "must state the net quantity of the contents that will be expelled when the instructions for use as shown on the container are followed." This means that any product retained in aerosol containers after fill dispersion is included in the tare weight. Second, aerosol containers must not be opened because they are pressurized, hence for safety reasons should not be punctured or opened. When emptying aerosol containers to determine a tare weight, exhaust them in a well-ventilated area (e.g., exhaust hood or outdoors) at least 15 m (50 ft) from any source of open flame or spark.

To ensure that the container properly dispenses the product, read and follow any dispensing instructions on the package. If shaking during use is specified in the instructions, periodically shake (at least two or three times during expulsion of the product). If directions are not given, shake the container five times with a brisk wrist twisting motion. If the container has a ball agitator, continue the shaking procedure for one minute after the ball has shaken loose.

How is the tare of vacuum-packed coffee determined?

The gross weight of a can of vacuum-packed coffee will be more after the seal is broken and air enters the can. In the procedure to determine the tare weight of the packaging material, correct the gross weight determined for unopened cans as follows. Use the initial tare sample packages, weigh, and record the gross weight of the product-filled cans before and after breaking the vacuum seal. Compute the average gross weight difference (open weight minus sealed weight) and record this in box 13a of the report form. The nominal gross weight equals the average tare weight minus the average difference in gross weights plus the labeled weight (box 14): box 13 - box 13a + box 1.

How is it determined how many packages to select for the initial tare sample?

For the initial tare sample size, see Column 5 under initial tare sample size in Table 2-1., or Column 3 under initial tare sample size in Table 2-2. Record the initial tare sample size in box 7 on the report form.

Note: The initial tare sample size is considered the total tare sample size when the sample size is less than 12.

How are the tare sample and tare weight of the packaging material determined?

1. Except for unused dry tare at the point-of-pack, first determine the tare weight for each package in the initial tare sample and record the value in row b, "Tare Wt." under the appropriate package number column.

2. For sample sizes of 12 or more, subtract the individual tare weights from the gross weights (block a, minus block b, on the report form) to obtain the net weight for each package and record these values in block c, "Net Wt," on the report form.

Determine and record the "range of package errors" (called R_c) for the initial tare sample in box 9 on the report form. (The range is the difference between the package errors.) (Amended 2002)

- 3. Determine and record the "range of tare weights" (called R_t) in box 10.
- 4. Compute the ratio R_c/R_t by dividing the value in box 9 by the value in box 10. Record the resulting value in box 11. (R_c and R_t must both be in the same unit of measure or both in dimensionless units.)
- 5. Determine and record in box 12 the total number of packages to be opened for the tare determination from either Table 2-3., for a Category A test or Table 2-4., for a Category B test.
 - > In the first column (titled Ratio of R_c/R_t), locate the range in which the computed R_c/R_t falls. Then, read across to the column headed with the appropriate sample size.
 - > If the total number of packages to open equals the number already opened go to Step 6.
 - If the total number of packages to open is greater than the number of packages already opened, compute the number of additional packages to open for the tare determination and go to Step 6. Enter the total number of tare samples in box 12.
- 6. Determine the average tare weight using the tare weight values for all the packages opened and record the average tare weight in box 13.

When and where is unused dry tare used, and how is it used to determine an average tare weight?

You may determine the average tare weight using samples of unused dry tare when testing meat, poultry, or any other products that are not subject to regulation of the Food and Drug Administration (FDA). You may use unused dry tare samples when conducting inspections at locations where the point-of-pack and sale are identical (e.g., store-packed products in a supermarket meat case). To determine unused dry tare at the point-of-sale, randomly select two (2) samples of unused dry tare, and weigh each separately. If there is no measurable variation in weight between the samples, proceed with the test using the weight of one of the samples. If the weight of the two (2) initial samples vary, randomly select three (3) additional tare samples and determine the average weight of all five (5) samples. Use this value as the average tare weight. (Amended 2002)

Determine Nominal Gross Weight and Package Errors for Tare Sample

What is a nominal gross weight?

A nominal gross weight is used to simplify the calculation of package errors. To compute the nominal gross weight, add the average tare weight (recorded in box 13) to the labeled weight (recorded in box 1). To obtain the package error, subtract a package's gross weight from the nominal gross weight. The nominal gross weight is represented by the formula:

Nominal gross weight = average tare + labeled weight

How are individual package errors determined for the tare sample packages?

Determine the errors of the packages opened for tare by subtracting the nominal gross weight recorded in box 14 from the individual package gross weights recorded for each package ("Pkg 1," "Pkg 2," etc.) in block a, "Gross Wt." The nominal gross weight must be used, rather than the actual net weight, for each package to determine the package error. This ensures that the same average tare weight is used to determine the error for every package in the sample, not just the unopened packages.

- For standard packages, record the package error in the appropriate plus or minus column on the report form for each package opened for tare.
- For random packages, determine the package error for the tare sample using a nominal gross weight for each package so that all of the package errors are determined with the same tare weight value. Record the package error on the Random Package Report Form in the appropriate plus or minus column under Package Errors.

Note: Converting the package error to dimensionless units allows the inspector to record the package errors as whole numbers disregarding decimal points and zeroes in front and unit of measure after the number.

Example: If weighing in 0.001 lb increments, the unit of measure is also 0.001 lb. If the package error for the first package opened for tare is ± 0.008 lb, instead of recording 0.008 lb in the plus column, record the error as "8" in the plus column. If the second package error is ± 0.060 lb, record the package error as "60" in the plus column, and so on. (This section does not prohibit the use of units of weight instead of dimensionless units or computer programs.)

How are individual package errors determined for the other packages in the sample?

Compare the gross weight of each of the unopened sample packages with the nominal gross weight (box 14). Record the package errors in the "Package Errors" section of the report form using either units of weight (lb or g) or dimensionless units.

How is the total package error computed?

Add all the package errors for the packages in the sample. Be sure to subtract the minus package errors from the plus package errors and to record the total net error in box 15.

Evaluating Results

How is it determined if a sample passes or fails?

The following steps lead the inspector through the process to determine if a sample passes or fails. If the product is subject to moisture allowance, follow the procedures under "Moisture Allowances" in this chapter to correct the MAV.

How is it determined if packages exceed the Maximum Allowable Variation?

Compare each minus package error with the MAV recorded in box 3 or box 4 (if using dimensionless units). Circle the package errors that exceed the MAV. These are "unreasonable errors." Record the number of unreasonable minus errors found in the sample in box 16.

How is it determined if the negative package errors in the sample exceed the number of MAVs allowed for the sample?

Compare the number in box 16 with the number of unreasonable errors allowed (recorded in box 8.) If the number found exceeds the allowed number, the lot fails. Record in box 17 whether the number of unreasonable errors found is less or more than allowed.

Note: If the total error recorded in box 15 is a plus value and box 17 is "No", then the number of unreasonable errors is equal to or less than the number allowed (recorded in box 8) and the lot passes.

How is the average error of the sample and if it passes or fails the average requirement determined?

Determine the average error by dividing the total error recorded in box 15 by the sample size recorded in box 6. Record the average error in box 18 if using dimensionless units or in box 19 if using units of weight. Compute the average error in terms of weight (if working in dimensionless units up to this time) by multiplying the average error in dimensionless units by the unit of measure and record the value in box 19.

- 1. If the average error is positive, the inspection lot passes the average requirement.
- 2. If the average error is negative, the inspection lot fails under a Category B test. Record in box 20.
- 3. If the average error is a negative value when testing under the Sampling Plans for Category A, compute the Sample Error Limit (SEL) as follows:
 - Compute the Sample Standard Deviation and record it in box 21.
 - Obtain the Sample Correction Factor from Column 3 of Table 2-1. For Category A test. Record this value in box 22.
 - Compute the Sample Error Limit using the formula:

Sample Error Limit (box 23) = Sample Standard Deviation (box 21) x Sample Correction Factor (box 22)

- 4. Compliance Evaluation of the Average Error:
 - If the value of the Average Error (box 18) is smaller than the SEL (box 23), the inspection lot passes.
 - If the value of the Average Error (disregarding the sign) (box 18) is larger than the SEL (box 23) the inspection lot fails. However, if the product is subject to moisture loss, the lot does not necessarily fail. Follow the procedures under "Moisture Allowances" in this chapter.

Moisture Allowances

How is reasonable moisture loss allowed?

If the product tested is subject to moisture loss, provide for the moisture allowance by following the steps listed below.

Determine the value of the moisture allowance if the product is listed below.

What is the moisture allowance for flour and dry pet food?

The moisture allowance for flour and dry pet food is 3 percent of the labeled net weight.

Note: Dry pet food means all extruded dog and cat foods and baked treat products packaged in kraft paper bags and/or cardboard boxes with a moisture content of 13 percent or less at the time of pack.

What moisture allowance is used with Used Dry Tare when testing packages that bear a USDA Seal of Inspection?

There is no moisture allowance when inspecting meat and poultry from a USDA inspected plant when Used Dry Tare and a Category A sampling plan are used.

What moisture allowance is used with wet tare when testing packages bearing a USDA seal of inspection?

- Use the following guideline when testing meat and poultry from any USDA inspected plant using Wet Tare and a Category A sampling plan.
- For packages of fresh poultry that bear a USDA seal of inspection, the moisture allowance is 3 percent of the labeled net weight. For net weight determinations, only, fresh poultry is defined as poultry above 3 °C (26 °F). This is a product that yields or gives when push with the thumb.
- For packages of franks or hotdogs that bear an USDA seal of inspection, the moisture allowance is 2.5 percent of the labeled net weight.
- For packages of bacon, fresh sausage, and luncheon meats that bear a USDA seal of inspection, there is no moisture allowance if there is no free-flowing liquid or absorbent materials in contact with the product and the package is cleaned of clinging material. Luncheon meats are any cooked sausage product, loaves, jellied products, cured products, and any sliced sandwich style meat. This does not include whole hams, briskets, roasts, turkeys, or chickens requiring further preparation to be made into ready-to-eat sliced product. When there is no free-flowing liquid inside the package and there are no absorbent materials in contact with the product, Wet Tare and Dried Used Tare are equivalent.

When there is free flowing liquid or absorbent packaging materials in contact with the product, all free liquid is part of the wet tare.

Calculations

How is a moisture allowance computed to be applied to the average error?

To compute moisture allowance, multiply the labeled quantity by the decimal percent value of the allowance.

Example: Labeled net quantity of flour is 907 g (2 lb)

Moisture Allowance is 3 percent (0.03)

Moisture Allowance = 907 g (2 lb) x 0.03 = 27 g (0.06 lb) record this value in box 13a.

How is the Maximum Allowable Variation corrected for the moisture allowance?

• Adjust the MAV by adding the moisture allowance to the MAV.

Example: 907 g (2 lb) package of flour: moisture allowance added to the MAV = 32 g (0.07 lb) (MAV for 907 g [2 lb] package) + 27 g (0.06 lb) moisture allowance = a corrected MAV of 59 g (0.13 lb)

• Correct MAV in dimensionless units by converting the moisture allowance to dimensionless units = 0.06 lb ÷ 0.001 lb = 60. Go to box 4 and add the moisture allowance in dimensionless units to the MAV in dimensionless units.

Example: MAV = 70 (MAV for 2 lb/unit of measure = 0.001 lb) + 60 (moisture allowance in dimensionless units) = 130. Minus package errors must exceed the MAV + gray area before they are declared "unreasonable errors."

• If the number of unreasonable errors exceeds the allowed number (recorded in box 8) the inspection lot fails.

How is the average error for the moisture allowance corrected?

If the minus average error (box 18) is larger (disregarding the sign) than the SEL (box 23) and moisture loss applies, compare the difference between box 18 and box 23 with the moisture allowance recorded in box 13a. (Make sure that all the values are in units of weight or in dimensionless units before making this comparison.) If box 13a is larger than the difference between box 18 and 23, then the lot is considered to be in the gray area.

Example: Box 13a for 2 lb flour is 60 (dimensionless units); box 18 is 2 (dimensionless units); box 23 is 0.550 (dimensionless units). The difference between box 18 and box 23 is 1.450 (dimensionless units). Since box 13a is 60 (dimensionless units), 13a is larger than the difference between box 18 and box 23, the lot is considered to be in the gray area and further investigation is necessary before ruling out moisture loss as the reason for shortweight.

When the average error of a lot of fresh poultry, franks, or hot dogs from a USDAinspected plant is minus, but does not exceed the established "moisture allowance" or "gray area," contact the appropriate USDA official and/or plant management personnel to determine what information is available on the lot in question. Questions to the USDA official and/or plant management representative may include:

- (a) Is a quality control program in place?
- (b) What information is available concerning the lot in question?
- (c) If net weight checks were completed, what were the results of those checks?
- (d) What adjustments, if any, were made to the target weight?

Note: If USDA or plant management has data on the lot, such data may help to substantiate that the "lot" met net content requirements at the point of manufacture.

This handbook provides "moisture allowances" for some meat and poultry products, flour, and dry pet food. These allowances are based on the premise that when the average net weight of a sample is found to be less than the labeled weight, but not by an amount, either that exceeds the allowable limit, either the lot is declared to be within the moisture allowance or further investigation can be conducted.

Deviations from net quantity of contents caused by the loss or gain of moisture from the package are permitted when caused by ordinary and customary exposure to conditions that occur under good distribution practices. If evidence is obtained and documented to prove that the lot was shipped from the packaging plant in a shortweght condition or was distributed under inappropriate or damaging distribution practices, appropriate enforcement action should be taken. (Amended 2002)

2.4 Borax

How is it determined if the net weight labeled on packages of borax is accurate?

Use the following procedures to determine if packages of borax are labeled correctly. This procedure applies to packages of powdered or granular products consisting predominantly (more than 50 percent) of borax. Such commodities are labeled by weight, but borax can lose more than 23 percent of its weight due to moisture loss. However, it does not lose volume upon moisture loss, and this property makes possible a method of volume testing based on a density determination in the event that the net weight of the product does not meet the average or individual package requirements. This method may be used for audit testing to identify possible short-filling by weight at point-of-pack. Since the density of these commodities can vary at point-of-pack, further investigation is required to determine whether, such short filling has occurred.

Test Equipment

- Metal density cup with a capacity of 550.6 mL or (1 dry pt).
- Metal density funnel with slide-gate and stand.
- Scale or balance having a scale division not larger than 1 g or (0.002 lb).
- Rigid straightedge or ruler
- Pan suitable for holding overflow of density cup

Test Procedure

Follow Chapter 2, Section 2.3, Basic Test Procedures. Define the inspection lot. Use a Category A sampling plan in the inspection; select a random sample; then use the following test procedure to determine product compliance.

- 1. If the lot does not comply by weight with the sampling plan requirements (either the average or individual package requirements), select the lightest package and record the net weight of this package.
- 2. Determine the weight of the density cup.
- 3. Place the density cup in the pan and put the funnel on top of the density cup. Close the funnel slidegate.
- 4. Pour sufficient commodity into the funnel so that the density cup can be filled to overflowing.
- 5. Quickly remove the slide-gate from the funnel, allowing the commodity to flow into the density cup.
- 6. Carefully, without agitating the density cup, remove the funnel and level off the commodity with the ruler or straight edge. Hold the ruler or straight edge at a right angle to the rim of the cup, and carefully draw it back across the top of the density cup to leave an even surface.

7. Weigh the filled density cup. Subtract the weight of the density cup from the gross weight of the commodity plus the density cup to obtain the net weight of commodity in the cup.

How is the volume determined?

- 1. Multiply the net weight (in pounds) as found for the package under test by 550.6.
- 2. Divide the answer just obtained by the weight of the commodity in the density cup, step (7). The result is the net volume of commodity in the package in milliliters.
- 3. Compare the net volume of the commodity in the package with the volume declared on the package. The volume declaration is not located on the principal display panel. The following example is how the declaration of volume should appear.

Volume 2530 cm³ per NIST Handbook 133

Note. $(1 \text{ mL} = 1 \text{ cm}^3)$

What action can be taken based on the results of the density test?

If the net volume of commodity in the lightest package equals or exceeds the declared volume on the package, treat the lot as being in compliance based on volume and take no further action. If the net volume of borax in the lightest package is less than the declared volume on the package, further compliance testing will be necessary. Take further steps to determine if the lot was in compliance with net weight requirements at point-of-pack or was short-filled by weight. To determine this, perform a laboratory moisture loss analysis to ascertain the weight of the original borax product when it was fully hydrated; obtain additional data at the location of the packager; and/or investigate the problem with the packager of the commodity.

2.5 The Determination of Drained Weight

Since the weight per unit volume of a drained product is of the same order of magnitude as that of the packaging liquid that is drained off, an "average nominal gross weight" cannot be used in checking packages of this type. The entire sample must be opened. The procedure is based upon a test method accepted by the U.S. Food and Drug Administration.

A tare sample is not needed because all the packages in the sample will be opened and measured.

The weight of the container plus drained-away liquid is determined. This weight is then subtracted from the gross weight to determine the package error.

Equipment

- Scales and weights recommended in Section 2.2 are suitable for the determination of drained weight.
- Sieves
 - For drained weight of 1.36 kg or (3 lb) or less, one 20 cm or (8 in) No. 8 mesh U.S. Standard Series Sieve, receiving pan, and cover
 - For drained weight greater than 1.36 kg or (3 lb), one 30 cm or (12 in) sieve, with same specifications as above
- Stopwatch

Test Procedure

Follow the Basic Test Procedure in Section 2.3. Define the inspection lot. Use a Category A or a Category B sampling plan in the inspection (depending on the location of test); select a random sample; then use the following test procedure to determine lot compliance.

- 1. Fill out boxes 1 through 8 on the standard pack report form on page E-4. Select the random sample. Determine and record on a worksheet the weight of the receiving pan.
- 2. Determine and record on a worksheet the gross weight of each individual package comprising the sample.
- 3. Pour the contents of the first package into the dry sieve with the receiving pan beneath it, incline sieve to a 17° to 20° angle to facilitate drainage, and allow the liquid from the product to drain into receiving pan for 2 minutes [Do not shake or shift material on the sieve.] Remove sieve and product.
- 4. Weigh the receiving pan, liquid, wet container, and any other tare material. [Do not include sieve and product.] Record this weight as tare and receiving pan.
- 5. Subtract the weight of the receiving pan, determined in step 1, from the weight obtained in step 4 to obtain the package <u>tare weight</u> (which includes the weight of the liquid).
- 6. Subtract the tare weight, found in step 5, from the corresponding package gross weight determined in step 2 to obtain the drained weight of that package. Determine the package error (drained weight labeled drained weight).
- 7. Repeat steps 3 through 6 for the remaining packages in the sample, cleaning and drying the sieve and receiving pan between measurements of individual packages.
- 8. Transfer the individual package errors to the standard pack report form, page E-4.
- 9. To determine lot conformance, return to Chapter 2, Section 2.3., Evaluating Results".

2.6 Drained Weight for Glazed or Frozen Foods

How is the drained weight of frozen shrimp and crabmeat determined?

When determining the net weight of frozen shrimp and crabmeat, use the test equipment and procedure provided below. Immerse the product directly in water in a mesh basket or open container to thaw (e.g., it is not placed in a plastic bag). Direct immersion does not result in the product absorbing moisture because the freezing process causes the tissue to lose its ability to hold water. Maintain the water temperature between 23 °C to 29 °C (75 °F to 85 °F). This is accomplished by maintaining a constant flow of warm water into the container holding the product (e.g., place a bucket in a sink to catch the overflow, and feed warm water into the bottom of the bucket through a hose). After thawing, drain the product on a sieve for 2 minutes and then weigh it.

Equipment

- Partial immersion thermometer or equivalent with 1 °C (2 °F) graduations and a -35 °C to +50 °C (-30 °F to +120 °F) accurate to ±1 °C (±2 °F)
- Water source and hose with a 4 L to 15 L (1 gal to 4 gal) per minute flow rate
- Sink or other receptacle [i.e., 15 L (4 gal) bucket]

- A wire mesh basket or other container that is large enough to hold the contents of 1 package [e.g., 2.27 kg or (5 lb) box of shrimp] and has openings small enough to retain all pieces of the product (e.g., an expanded metal test tube basket lined with standard 16 mesh screen)
- Number 8 mesh, 20 cm (8 in) or 30 cm (12 in) sieve
- Stopwatch

Test Procedure

Follow the Basic Test Procedure in Section 2.3. Define the inspection lot. Use a Category A or a Category B sampling plan in the inspection (depending on the location of test); select a random sample; then use the following test procedure to determine lot compliance.

- Place the unwrapped frozen shrimp or crabmeat in the wire mesh basket and immerse in a 15 L (4 gal) or larger container of fresh water at a temperature between 23 °C to 29 °C (75 °F to 85 °F). Submerge the basket so that the top of the basket extends above the water level.
- 2. Maintain a continuous flow of water into the bottom of the container to keep the temperature within the specified range.
- 3. As soon as the product thaws, determined by loss of rigidity, transfer all material to a sieve (20 cm [8 in] for packages less than 453 g [1 lb] or 30 cm [12 in] for packages weighing more than 453 g [1 lb]) and distribute it evenly over the sieve.
- 4. Without shifting the product, incline the sieve 30° from the horizontal position to facilitate drainage, and drain for 2 minutes.
- 5. At the end of the drain time, immediately transfer the product to a tared pan for weighing to determine the net weight.

How is the net weight of glazed raw seafood and fish determined?

For glazed raw seafood and fish, determine the net weight after removing the glaze using the following procedure. Use this method for any frozen glazed food product.

Equipment

Use the equipment listed in Section 2.6.

Test Procedures

Follow the Basic Test Procedure in Section 2.3. Define the inspection lot. Use a Category A sampling plan in the inspection; select a random sample; and use the following test procedure to determine lot compliance.

- 1. Fill out a report form and select the random sample. A tare sample is not needed.
- 2. Weigh sieve and receiving pan. Record this weight on a worksheet as "sieve weight."

- 3. Remove each package from low temperature storage; open it immediately and place the contents under a gentle spray of cold water. Carefully agitate the product to avoid breaking the product. Continue the spray until all ice glaze that is seen or felt is removed. In general, the product should remain rigid; however, the ice glaze on certain products, usually smaller sized commodities, sometimes cannot be removed without defrosting the product. Nonetheless, remove the glaze, because it is a substantial part of the package weight. (Amended 2002)
- 4. Transfer the product to the weighed sieve. Without shifting the product, incline the sieve to an angle of 17° to 20° to facilitate drainage and drain (into waste receptacle or sink) for exactly 2 minutes.
- 5. Place the product and sieve on the receiving pan and weigh. Record this weight on a worksheet as the "sieve + product weight."
- 6. The net weight of product is equal to the weight of the pan plus the sieve plus the product (recorded in step 5) minus the "sieve weight" (recorded in step 2). Record the product net weight on the work-sheet. The package error is equal to the net weight of the product as measured minus the labeled weight. Record the package error on the worksheet and transfer it to the report form.
- 7. Repeat steps 3 through 6 for each package in the sample, cleaning and drying the sieve and the receiving pan between package measurements.

Evaluation of Results

Follow the procedures in Chapter 2, Section 2.3., Evaluating Results

Chapter 3. Test Procedures – For Packages Labeled by Volume

3.1 Scope

What types of packaged goods can be tested using these procedures?

Use this procedure to determine the net contents of packaged goods labeled in fluid volume such as milk, water, beer, oil, paint, distilled spirits, soft drinks, juices, liquid cleaning supplies, or liquid chemicals. This chapter also includes procedures for testing the capacities of containers such as paper cups, bowls, glass tumblers, and stemware.

What types of packages are not covered by these procedures?

These procedures do not cover berry baskets and rigid-dry measures that are covered by specific code requirements in NIST Handbook 44.

When can the gravimetric test procedure be used to verify the net quantity of contents of packages labeled by volume?

The gravimetric procedure may be used to verify the net quantity of contents of packages labeled in volume when the density (density means the weight of a specific volume of liquid determined at a reference temperature) of the product being tested does not vary excessively from one package to another.

What procedure is followed if the gravimetric test procedure cannot be used?

Test each package as described in Section 3.3, Volumetric Test Procedure for Liquids.

What considerations besides density affect measurement accuracy?

In addition to possible package-to-package variations in product density, the temperature of the liquid will affect the volume of product. The product will expand or contract based on a rise or fall in product temperature.

Example: The volume of a liquid cleaning product might be 5 L (1.32 gal) at 20 °C (68 °F) and 5.12 L (1.35 gal) at 25 °C (77 °F), which represents a 2.2 percent change in volume.

Note: This extreme example is for illustrative purposes, a 2.2 percent volume change will not occur in normal testing.

What reference temperature should be used to determine the volume of a liquid?

Use the reference temperature specified in Table 3-1., Reference Temperatures for Liquids to determine volume. When checking liquid products labeled by volume using the gravimetric procedure, maintain the packages used to determine product densities at reference temperatures. If testing the packages in a sample volumetrically, each package in the sample must be maintained at or corrected to the reference temperature when its volume is determined.

Note. When checking liquid products using a volumetric or gravimetric procedure, the temperature of the samples must be maintained at the reference temperature $\pm 2 \text{ °C} (\pm 5 \text{ °F})$.

	Table 3-1. Reference Temperatures	s for Liquids
	If the Liquid Commodity is	Then, the reference temperature is
1	Frozen food labeled by volume (e.g., fruit juice)	-18 °C (0 °F)
2	Beer	3.9 °C (39.1 °F)
3	Food that must be kept refrigerated (e.g., milk and other dairy products. Usually labeled "Keep Refrigerated")	4.4 °C (40 °F)
4	Distilled spirits or petroleum	15 °C (60 °F)
5	Unrefrigerated products (e.g., includes liquids sold unchilled, such as soft- drinks and wine)	20 °C (68 °F)

3.2 Gravimetric Test Procedure for Liquids

Equipment

• A scale that meets the requirements in Chapter 2, Section 2.2, Measurement Standards and Test Equipment.

Note: To verify that the scale has adequate resolution for use, it is first necessary to determine the density of the liquid; next verify that the scale division is no larger than MAV/6 for the package size under test. The smallest graduation on the scale must not exceed the weight value for MAV/6.

Example: Assume the inspector is using a scale with 1 g (0.002 lb) increments to test packages labeled 1 L (33.6 fl oz) that have an MAV of 30 mL (1 fl oz). Also, assume the inspector finds that the weight of 1 L of the liquid is 943 g (2.078 lb). This will result in an MAV/6 value in weight of 4.715 g (0.010 lb):

30 mL/6 = 5 mL	(1 fl oz/6 = 0.166 6 fl oz)
943 g/1 000 mL= 0.943 g/mL	(2.07 8 lb/33.6 fl oz = 0.061 8 lb/fl oz)
5 mL x 0.943 g/mL = 4.715 g	(0.166 6 fl oz x 0.061 8 lb/fl oz = 0.010 lb)

In this example, the 1 g (0.002 lb) scale division is smaller than the MAV/6 value of 4.715 g (0.10 lb) so the scale is suitable for making a density determination.

- A partial immersion thermometer (or equivalent) with a range of -35 °C to +50 °C (30 °F to 120 °F), at least 1 °C (1 °F) graduations, and with a tolerance of ±1 °C (±2 °F)
- Volumetric measures

Example: When checking packages labeled in SI units, flask sizes of 100 mL, 200 mL, 500 mL, 1 L, 2 L, 4 L, and 5 L and a 50 mL cylindrical graduate with 1 mL divisions may be used. When checking packages labeled in inch-pound units the use of measuring flasks and graduates with capacities of gill, half-pint, pint, quart, half-gallon, gallon, and a 2 fl oz cylindrical graduate, graduated to ½ fluid dram is recommended.

• Defoaming agents may be necessary for testing liquids such as beer and soft drinks that effervesce or are carbonated. Two such products are Hexanol or Octanol (Capryl Alcohol).

Note: The mention of trade or brand names does not imply that these products are endorsed or recommended by the U.S. Department of Commerce over similar products commercially available from other manufacturers.

- Bubble level at least 15 cm (6 in) in length
- Stopwatch

Test Procedure

- 1. Follow the Basic Test Procedure in Section 2.3. Define the inspection lot. Use a Category A sampling plan in the inspection. Select a random sample; then use the following procedure to determine lot compliance.
- 2. Bring the sample packages and their contents to the reference temperature as specified in Table 3-1., Reference Temperatures for Liquids. To determine if the liquid is at its reference temperature, immerse the thermometer in the liquid before starting the test. Verify the temperature again immediately after the flask and liquid is weighed. If the product requires mixing for uniformity, mix it before opening in accordance with any instructions specified on the package label. Shaking liquids, such as flavored milk, often entraps air that will affect volume measurements, so use caution when testing these products. Often, less air is entrapped if the package is gently rolled to mix the contents.
- 3. For milk, select a volumetric measure equal to the label declaration. For all other products, select a volumetric measure that is one size smaller than the label declaration. For example, if testing a 1 L bottle of juice or a soft drink, select a 500 mL volumetric measure.

Note: When determining the density of milk, if the product from the first container does not fill the volumetric measure to the nominal capacity graduation, product may be added from another container as long as product integrity is maintained (i.e., brand, identity, lot code, and temperature).

- 4. Prepare a clean volumetric measure to use according to the following procedures:
 - Because flasks are ordinarily calibrated on a "to deliver" basis, they must be "wet down" before using. Immediately before use, fill the volumetric flask(s) or graduate with water. The water should be at the reference temperature of the product being tested. Fill the flask(s) with water to a point slightly below the top graduation on the neck. The flask should be emptied in 30 seconds (± 5 seconds). Tilt the flask gradually so the flask walls are splashed as little as possible as is emptied. When the main flow stops, the flask should be nearly inverted. Hold the flask in this position for 10 seconds more and touch off the drop of water that adheres to the tip. If necessary, dry the outside of the flask. The flask or graduate is then ready to fill with liquid from a package. This is called the "wet down" condition.

Note: When using a volumetric measure that is calibrated "to contain," the measure must be dry before each measurement.

- If the liquid effervesces or foams when opened or poured (such as carbonated beverages), add two drops of a defoaming agent to the bottom of the volumetric measure before filling with the liquid. If working with a carbonated beverage, make all density determinations immediately upon placing the product into the standard. This reduces the chance of volume changes occurring from the loss of carbonization.
- Before making additional measurements of a liquid, use water to wash or rinse and prepare the volumetric measure. Between each two measurements of liquid from the sample packages, prepare the volumetric measure as described above, dry the outside of the flask, and drain the volumetric measure as described in earlier paragraphs of this section, as appropriate.

- 5. If the flask capacity is equal to the labeled volume, pour the liquid into the volumetric measure tilting the package to a nearly vertical position. If the flask capacity is smaller than the package's labeled volume, fill the flask to its nominal capacity graduation. If conducting a volumetric test, drain the container into the volumetric measure for 1 minute after the stream of liquid breaks into drops.
- 6. Position the volumetric measure on a level surface at eye level. For clear liquids, place a material of some dark color outside the flask immediately below the level of the meniscus. Read the volume from the lowest point of the meniscus. For opaque liquids, read volume from the center top rim of the liquid surface.
- 7. Use the gravimetric procedure to determine the volume if the limit specified for the difference in density is not exceeded.
 - Select a volumetric measure equal to or one size smaller than the labeled volume (depending on the product) and prepare it as described in paragraph 4 of this section. Then determine and record its empty weight.
 - Determine acceptability of the liquid density variation, using two packages selected for tare according to Chapter 2 as follows:
 - > Determine the gross weight of the first package.
 - Pour the liquid from the first package into a volumetric measure exactly to the nominal capacity marked on the neck of the measure.
 - Weigh the filled volumetric measure and subtract its empty weight to obtain the weight of the liquid. Determine density by dividing the weight of the liquid by the capacity of the volumetric measure.
 - > Determine the weight of the liquid from a second package using the same procedure.
 - If the difference between the densities of the two packages exceeds one division, use the volumetric procedure in Section 3.3., Volumetric Test Procedure for Liquids.

How is "nominal gross weight" determined?

Determine the "nominal gross weight" as follows:

- 1. Determine the Average Used Dry Tare Weight of the sample according to provisions of Section 2.3.
- 2. Calculate the Average Product Density by adding the densities of the liquid from the two packages and dividing the sum by two.
- 3. Calculate the "nominal gross weight" using the following formula if the flask capacity is equal to the labeled volume:

Nominal Gross Weight = (Average Product Density [in weight units]) + (Average Used Dry Tare Weight)

Note: If the flask size is smaller than the labeled volume, the following formula is used:

Nominal Gross Weight = (Average Product Density x [Labeled Volume/ Flask Capacity]) + (Average Used Dry Tare Weight)

How are the errors in the sample determined?

1. Weigh the remaining packages in the sample.

Subtract the nominal gross weight from the gross weight of each package to obtain package errors in terms of weight. All sample packages are compared to the nominal gross weight.

2. To convert the average error or package error from weight to volume, use the following formula:

Package Error in Volume = Package Error in Weight/Average Product Density Per Volume Unit of Measure

Evaluation of Results

Follow the procedures in "Evaluating Results" in Chapter 2, Section 2.3, to determine lot conformance.

3.3 Volumetric Test Procedure for Liquids

How is the volume of liquid contained in a package determined volumetrically?

Follow steps 1 through 6 in Section 3.2., Gravimetric Test Procedure for Liquids for each package in the sample.

How are the errors in the sample determined?

Read the package errors directly from the graduations on the measure. The reference temperature must be maintained within ± 2 °C (± 5 °F) for the entire sample.

Evaluation of Results

Follow the procedures in Chapter 2, Section 2.3, Evaluating Results to determine lot conformance.

3.4 Other Volumetric Test Procedures

What other methods can be used to determine the net contents of packages labeled by volume?

Depending on how level the surface of the commodity is, use one of two headspace test procedures. Use the first headspace test procedure to determine volume where the liquid has a smooth surface (e.g., oils, syrups, and other viscous liquids). Use the second procedure to determine volume where the commodity does not have a smooth surface (e.g., mayonnaise and salad dressing).

Test Procedure

Before conducting any of the following volumetric test procedures, follow Section 2.3, Basic Test Procedure in Chapter 2. Define the inspection lot. Use a Category A sampling plan in the inspection; select a random sample; then use the following procedure to determine lot compliance.

Test Equipment

- Micrometer depth gage (ends of rods fully rounded) 0 mm to 225 mm (0 in to 9 in) or longer
- Level (at least 15 cm (6 in) in length)
- Laboratory pipets and/or buret

- Class A 500 mL buret that conforms to ASTM E 287-94, "Standard Specification for Laboratory Glass Graduated Burets"
- Class A Pipets, calibrated "to deliver" that conform to ASTM E 969-95, "Standard Specification for Glass Volumetric (Transfer) Pipets"
- Volumetric measures
- Water
- Rubber bulb syringe
- Plastic disks that are 3 mm (1/8 in) thick with diameters equal to the seat diameter or larger than the brim diameter of each container tested. The diameter tolerance for the disks is 50 μ m (± 0.05 mm [± 0.002 in]). The outer edge should be smooth and beveled at a 30° angle with the horizontal to 800 μ m (0.8 mm [1/32 in]) thick at the edge. Each disk must have a 20 mm (3/4 in) diameter hole through its center and a series of 1.5 mm (1/16 in) diameter holes 25 mm (1 in) from the outer edge.
- Stopwatch

How is the volume of oils, syrups, and other viscous liquids that have smooth surfaces determined?

- 1. Make all measurements on a level surface
- 2. Bring the temperature of both the liquid and the water to be used to measure the volume of the liquid to the reference temperature specified in Table 3-1., Reference Temperatures for Liquids.
- 3. Measure the headspace of the package at the point of contact with the liquid using a depth gauge with a fully rounded, rather than a pointed, rod end. If necessary, support the package to prevent the bottom of the container from distorting.
- 4. Empty, clean, and dry the package.
- 5. Refill the container with water measured from a volumetric standard to the original liquid headspace level measured in paragraph (3) of this section until the water touches the depth gauge.
- 6. Determine the amount of water used in paragraph (5) of this section to obtain the volume of the liquid and calculate the "package error" based on that volume.

Evaluation of Results

Follow the procedures in "Evaluating Results" in Chapter 2, Section 2.3, to determine lot conformance.

3.5 Mayonnaise and Salad Dressing

Volumetric Headspace Test Procedure

Use the volumetric headspace procedure described in this section to determine volume when the commodity does not have a smooth surface (e.g., mayonnaise, salad dressing, and other water immiscible products without a level liquid surface). The procedure guides the inspector to determine the amount of headspace above the product in the package and the volume of the container. Determine the product volume by subtracting the headspace volume from the container volume. Open every package in the sample.

- 1. Make all measurements on a level surface.
- 2. Bring the temperature of both the commodity and the water used to measure the volume to the appropriate temperature designated in Table 3-1., Reference Temperatures for Liquids.
- 3. Open the first package and place a disk larger than the package container opening over the opening.
- 4. Measurement Procedure
 - Deliver water from a flask (or flasks), graduate, or buret, through the central hole in the disk onto the top of the product until the container is filled. If it appears that the contents of the flask may overfill the container, do not empty the flask. Add water until all of the air in the container has been displaced and the water begins to rise in the center hole of the disk. Stop the filling procedure when the water fills the center disk hole and domes up slightly due to the surface tension. Do not add additional water after the level of the water dome has dropped.
 - If the water dome breaks on the surface of the disk, the container has been overfilled and the test is void; dry the container and start over.
- 5. To obtain the headspace capacity, record the volume of water used to fill the container and subtract 1 mL (0.03 fl oz), which is the amount of water held in the hole in the disk specified.
- 6. Empty, clean, and dry the package container.
- 7. Repeat steps 4 and 5 of this section. Refill the package container with water measured from a volumetric measure to the maximum capacity of the package, subtract 1 mL (0.03 fl oz), and record the amount of water used as the container volume; and
- 8. From the container volume determined in paragraph 7 of this section, subtract the headspace capacity in paragraph (5) of this section to obtain the measured volume of the product and calculate the "package error" for that volume where "package error" equals labeled volume minus the measured volume of the product.

Follow the procedures in Chapter 2, Section 2.3., Evaluating Results to determine lot conformance.

3.6 Goods Labeled by Capacity - Volumetric Test Procedure

What type of measurement equipment is needed to perform the headspace test procedures?

Use the test equipment in Section 3.4. (except for the micrometer depth gage) to perform these test procedures.

How is it determined if goods labeled by capacity meet the average and individual requirements?

Before conducting any of the following volumetric test procedures, refer to Chapter 2, Section 2.3., Basic Test Procedure. Define the inspection lot. Use a Category A sampling plan in the inspection; select a random sample; then use the following test procedure to determine lot compliance.

- 1. Make all measurements on a level surface.
- 2. When testing goods labeled by capacity, use water at a reference temperature of 20 °C \pm 2 °C (68°F \pm 5 °F).

- 3. Select a sample container and place a disk larger than the container opening over the opening.
- 4. Measurement Procedure
 - Add water to the container using flask (or flasks), graduate, or buret corresponding to labeled capacity of the container. If it appears that the contents of the flask may overfill the container, do not empty the flask. Add water until all of the air in the container has been displaced and the water begins to rise in the center hole of the disk. Stop filling the container when the water fills the center disk hole and domes up slightly due to the surface tension.
 - If the water dome breaks on the surface of the disk, the container has been overfilled and the test is void; dry the container and start over.
 - Record the amount of water used to fill the container and subtract 1 mL (0.03 fl oz) (this is the amount of water held in the hole in the disk specified) to obtain the total container volume.
- 5. Test the other containers in the sample according to the procedures in paragraph (4) of this section.
- 6. To determine package errors, subtract the total container volume obtained in paragraphs (4) and (5) from the labeled capacity of the container.

Follow the procedures in Chapter 2, Section 2.3., Evaluating Results to determine lot compliance.

3.7 Pressed and Blown Glass Tumblers and Stemware

What requirements apply to pressed and blown glass tumblers and stemware?

This handbook provides a tolerance to the labeled capacity of glass tumblers and stemware. The average requirement does not apply to the capacity of these products. See Table 3-2., Allowable Differences for Pressed and Blown Glass Tumblers and Stemware.

How is it determined if tumblers and stemware meet the individual package requirement?

Follow the Basic Test Procedure in Section 2.3. Define the inspection lot and determine which sampling plan to use in the inspection, select a random sample, and then use the following volumetric test procedure to determine container capacity and volume errors.

What type of measuring equipment is needed to perform the test procedures?

Use the equipment specified in Section 3.4., (except for the micrometer depth gage) to perform these test procedures.

What are the steps of the test procedure?

Follow steps 1 through 6 in 3.6, Goods Labeled by Capacity - Volumetric Test Procedure.

How is it determined if the samples conform to the allowable difference?

Compare the individual container error with the allowable difference that applies in Table 3-2., Allowable Differences for Pressed and Blown Glass Tumblers and Stemware. If a package contains more than one container, all of the containers in the package must meet the allowable difference requirements in order for the package to pass.

Table 3-2. Allowable Differences for Pressed	and Blown Glass Tumblers and Stemware		
Unit of measure			
If the capacity in metric units is:	Then the allowable difference is:		
200 mL or less	± 10 mL		
More than 200 mL	\pm 5 % of the labeled capacity		
If the capacity in inch-pound units is:	Then the allowable difference is:		
5 fluid ounces or less	$\pm \frac{1}{4}$ fluid ounce		
More than 5 fluid ounces	\pm 5 % of the labeled capacity		

Count the packages in the sample with volume errors greater than the allowable difference and compare the resulting number with the number given in Column 3 of Table 2-11., in Appendix A.

- If the number of containers in the sample with errors exceeding the allowable difference exceeds the number allowed in Column 3, the lot fails.
- If the number of packages with errors exceeding the allowable difference is less than or equal to the number in Column 3, the lot passes.

Note: The average capacity error is not calculated because the lot passes or fails based on the individual volume errors. Act on the individual units containing errors exceeding the allowable difference individually even though the lot passes the requirement.

3.8 Volumetric Test Procedure for Paint, Varnish, and Lacquers – Non-aerosol

How is the volume of paint, varnish, and lacquers contained in a package determined?

Use one of three different test methods depending upon the required degree of accuracy and the location of the inspection. The procedures include both retail and in-plant audits and a "possible violation" method, which is designed, for laboratory or in plant use because of cleanup and product collection requirements. The procedures are suitable to use with products labeled by volume and packaged in cylindrical containers with separate lids that can be resealed.

Equipment

- A scale that meets the requirements in Chapter 2, Section 2.2., Measurement Standards and Test Equipment
- Volumetric measures
- Micrometer depth gage (ends of rods fully rounded), 0 mm to 225 mm (0 in to 9 in)
- Diameter (Pi) tape measure, 5 cm to 30 cm (2 in to 12 in)
- Spanning bar, 2.5 cm by 2.5 cm by 30 cm or (1 in by 1 in by 12 in)
- Rule, 30 cm (12 in)
- Paint solvent or other solvent suitable for the product being tested
- Cloth, 30 cm (12 in) square
- Wood, 5 cm (2 in) thick, by 15 cm (6 in) wide, by 30 cm (12 in) long

- Rubber mallet
- Metal disk, 6.5 mm (1/4 in) thick and slightly smaller than the diameter of package container bottom.
- Rubber spatula
- Level at least 15 cm (6 in) in length
- Micrometer (optional)
- Stopwatch

What test procedure is used to conduct a retail audit test?

Conduct a retail audit using the following test procedure that is suitable for checking cylindrical containers up to 4 L (1 gal) in capacity. Use step 2 in the retail audit test procedure with any size container, but step 3 must be used for containers with capacities of 4 L (1 gal). The method determines the volume of a single can in the sample selected as most likely to contain the smallest volume of product. Do not empty any containers because only their critical dimensions are being measured.

How accurate is the dimensional test procedure?

The configuration of the bottom of the can, paint clinging to the lid, and slight variations in the wall and label thicknesses of the paint container may produce an uncertainty estimated to be at least 0.6 percent in this auditing procedure. Therefore, this method is recommended solely to eliminate from more rigorous testing those packages that appear to be full measure. Use the violation procedures when the volume determined in step 10 is less than the labeled volume or in any case where short measure is suspected.

What worksheets make data recording easier?

Use the following format to develop worksheets to perform audits and determine the volume when checking paint. Follow the procedure and it will indicate the column in which the various measurements made can be recorded.

2. Top 3. Middle 4. Bottom 5. Average	

Note: When the following instructions require recording a measurement, refer to the numbered columns in the "Audit Worksheet for Checking Paint" shown above.

How is a retail audit test performed?

1. Select a random sample. A tare sample is not needed.

- 2. For containers less than 4 L or (1 gal): measure the outside diameter of each container near its middle to the closest 0.02 mm (0.001 in). Use a diameter tape measure to record the measurements in Column 3. Place the containers on a level surface and using the micrometer depth gage, record their heights in Column 1 on the worksheet. If the range of outside diameters exceeds 0.125 mm (0.005 in) or the range in heights exceeds 1.58 mm (0.062 5 in), do not use this procedure. If the ranges are within the specified limits, weigh all cans in the sample, select the container with the lightest gross weight, and remove its lid. Continue with step 4 below.
- 3. For 4 L (1 gal) containers: gross weigh each package in the sample. Select the package with the lightest gross weight and remove its lid.
- 4. Use a direct reading diameter tape measure to measure the outside diameter of the selected container near its top, middle (already measured if step 2 was followed), and bottom to the closest 0.02 mm (0.001 in). Record these measurements in Columns 2, 3, and 4. Add the three diameter values and divide by three to obtain the average diameter and record this value in Column 5.
- 5. If a micrometer is available, measure the wall and the paper label thickness of the container; otherwise, assume the wall and label thicknesses given in Table 3-3. Thickness of Paint Can Walls and Labels below:

Table 3-3. Thickness of Paint Can Walls and Labels				
Can Size	Wall Thickness			
4 L (1 gal)	250 µm (0.25 mm) [0.010 in]			
2 L (1/2 gal)	250 μm (0.25 mm) [0.010 in]			
1 L (1 qt)	230 µm (0.23 mm) [0.009 in]			
500 mL (1 pt)	230 µm (0.23 mm) [0.009 in}			
250 mL	200 µm (0.20 mm) [0.008 in]			
Label Thickness* for all can sizes: 100 µm (0.10 mm) [0.004 in]				
(*Paper only – ignore labels lithographed directly onto the container)				

Subtract twice the thickness of the wall of the can and paper label from the average can diameter (step 4) to obtain the average liquid diameter. Record the liquid diameter in Column 6.

- 6. On a level surface, place the container on the circular metal disk that is slightly smaller in diameter than the lower rim of the can so the bottom of the container nests on the disk to eliminate any "sag" in the bottom of the container.
- 7. Place the spanning bar and depth gage across the top of the paint can and mark the location of the spanning bar on the rim of the paint container. Measure the distance to the liquid level, to the nearest 20 μm (0.02 mm) (0.001 in), at three points in a straight line. Take measurements at points approximately 1 cm (3/8 in) from the inner rim for cans 12.5 cm (5 in) in diameter or less (and at 1.5 cm [1/2 in] from the rim for cans exceeding 12.5 cm [5 in]) in diameter and at the center of the can. Add the three readings and divide by three to obtain the average distance to the liquid level in the container. Record the average distance to the liquid level in Column 7.
- 8. Measure the distance to the bottom of the container at three points in a straight line in the same manner as outlined in step 7. Add the three readings and divide by three to obtain the average height of the container and record it in Column 8.
- 9. Subtract the average distance to the liquid level (Column 7) from the average height of the container (Column 8) to obtain the average height of the liquid column and record it in Column 9.
- 10. Determine the volume of paint in the container by using the following formula:

 $Volume = 0.7854 D^2 H$

Where D = average liquid diameter (Column 6) and H = average liquid height (Column 9)

11. Record this value in Column 10. If the calculated volume is less than labeled volume, go to the Violation Procedure.

How is an in-plant audit conducted?

Use the following procedures to conduct an in-plant audit inspection. This method applies to a container that probably contains the smallest volume of product. Duplicate the level of fill with water in a can of the same dimensions as the one under test. Use this method to check any size of package if the liquid level is within the measuring range of the depth gage. If any paint is clinging to the sidewall or lid, carefully scrape the paint into the container using a rubber spatula.

- 1. Follow steps 1 through 6 of the retail audit test.
- 2. Place the spanning bar and depth gage across the top of the paint can. Measure the liquid level at the center of the surface and record the level in Column 7.
- 3. Select an empty can with the same bottom configuration as the container under test and with a diameter and height equal to that of the container under test within plus or minus the following tolerances:
 - a. For 500 mL or (1 pt) cans within 25 μ m (0.025 mm) (0.001 in)
 - b. For 1 L or (1 qt) cans within 50 µm (0.05 mm) (0.002 in)
 - c. For 2 L or (1/2 gal) cans within 75µm (0.075 mm) (0.003 in)
 - d. For 4 L or (1 gal) cans within 100 μ m (0.1 mm) (0.004 in)

Set the empty can on a level work surface with a circular metal disk that is slightly smaller in diameter than the bottom can rim underneath the can to eliminate sag. Set up the spanning bar and depth gage as in step 2 above. Fill the container with water from a volumetric measure of the same volume as the labeled volume. Measure the distance to the liquid level at the center of the container and record this level in Column 7 below the reading recorded in step 2. If this distance is equal to or greater than the distance determined in step 2, assume that the package is satisfactory. If the distance is less than the distance determined in step 2, the product may be short measure. Use the possible violation procedure given in the next section when the audit test indicates that short measure is possible.

Violation Procedure

How is it determined if the containers meet the package requirements?

Use the following method if the liquid level is within the measuring range of the micrometer. The first step is to follow the Basic Test Procedure in Section 2.3. Define the inspection lot to determine which Category A sampling plan to use; select a random sample; and then use the following procedure. The steps noted with an (*) are required if there is paint adhering to the lid and it cannot removed by scraping into the can.

1. Do not shake or invert the containers selected as the sample. Determine the gross weight of these packages and record in Column 2 of the "Example Worksheet for Possible Violation in Checking Paint" below.

Example Worksheet for Possible Violation in Checking Paint – Add additional rows as needed								
1. Labeled Volume	2. Gross Weight	3. Lid Paint Weight (Wet - Dry)	4. Liquid Level	5. Tare	6. Water Volume	7. Net Wt. = 2 - 5	8. Weight of Labeled Volume = 7 x 1÷ 6	9. Package Volume = 6 + [(3 ÷7) x 6)]

Record the labeled volume of the first tare sample package in Column 1 of the worksheet. Use a circular metal disk to eliminate can "sag" and remove the lid. If paint clings to the lid of the container, scrape it off with a spatula.

- 2.* If paint that adheres to the lid cannot be completely removed by scraping the paint into the can, determine the weight of the lid plus any adhering paint. Clean the paint lid with solvent and weigh again. Subtract the clean lid weight from the lid weight with paint to determine the weight of the paint adhering to the lid. Record this weight in Column 3.
- 3. Place the spanning bar and depth gage across the top of the paint can. Mark the location of the spanning bar on the rim of the paint container. Measure the distance to the liquid level at the center of the container to the nearest $20 \,\mu m (0.02 \, \text{mm}) (0.001 \, \text{in})$. Record the distance in Column 4.
- 4. Empty and clean the sample container and lid with solvent; dry and weigh the container and lid. Record the tare weight in Column 5.
- 5. Set up the container in the same manner as in step 1.
- 6. Place the spanning bar at the same location on the rim of the paint container as marked in step 3. With the depth gage set as described in step 3, deliver water into the container in known amounts until the water reaches the same level occupied by the paint as indicated by the depth gage. Record this volume of water (in mL or fl oz) in Column 6 of the worksheet. This is the volume occupied by the paint in the container. Follow steps, 7a, 8a, and 9a if scraping does not remove the paint from the lid. In order to determine if gravimetric testing can be used to test the other packages in the sample, follow only steps 7, 8, and 9 when no paint adheres to the lid.
- 7. Subtract the weight of the container (Column 5) from the gross weight (Column 2) to arrive at the net weight of paint in the selected container. Record the net weight in Column 7 of the worksheet.

7a* Subtract the weight of the container (Column 5) and the weight of product on the lid (Column 3) from the gross weight (Column 2) to arrive at the net weight of paint in the container. Record in Column 7 (excluding the weight of the paint on the lid).

8. Calculate the weight of the labeled volume of paint (for the first package opened for tare) = on the lid).

net weight (Column 7) x labeled volume (Column 1) ÷ volume of paint in can (Column 6)

Record this value in Column 8.

8a* Calculate the package volume =

volume in can (Column 6) + [lid paint weight (Column 3) x volume in can (Column 6) / net weight (Column 7)]

Record it in Column 9 of the worksheet.

9. Calculate the package error. Use the following formula if paint does not adhere to the lid:

Package error = (Column 6 value) - (labeled volume)

9a* Use the following formula if paint does adhere to the lid and will not come off by scraping.

Package error = (Column 9 value) - (labeled volume)

10. Repeat steps 1 through 9 for the second package chosen for tare.

When a gravametric procedure be used?

A gravimetric procedure is used if the weights of the labeled volume for the first two packages do not differ from each other by more than one division on the scale (if they meet this criterion, check the rest of the sample gravimetrically and record in Column 8).

How is "nominal gross weight" determined?

Determine the "nominal gross weight" for use with Chapter 2, Section 2.3. as follows:

The nominal gross weight equals the sum of the average weight of the labeled volume (average of values recorded in Column 8) plus the average tare (average of values recorded in Column 3) for the packages selected for tare. Note that the weight of a given volume of paint often varies considerably from container to container; therefore, volumetric measurements may prove necessary for the entire sample.

Evaluation of Results

Follow the procedures in "Evaluating Results" in Chapter 2, Section 2.3. to determine lot conformance.

3.9 Testing Viscous Materials - Such As Caulking Compounds and Pastes

How are viscous materials such as caulking compounds and paste tested?

Use the following procedure for any package of viscous material labeled by volume. It is suitable for very viscous materials such as cartridge packed caulking compounds, glues, pastes, and other similar products. It is best to conduct this procedure in a laboratory using a hood to ventilate solvent fumes. If it used in the field, use in a well ventilated area. Except for the special measurement procedures to determine the weight of the labeled volume, this procedure follows the basic test procedure. For each weight of a known volume determination, pack a portion of the packaged product into a pre-weighed cup of known volume (called a "density cup" or "pycnometer") and weigh. From the weight of the known volume, determine the weight of the labeled volume. Compare the nominal gross weight with the gross weight to determine the package error.

What type of measurement equipment is needed to test packages of caulk, pastes, and glues?

• A scale that meets the requirements in Chapter 2, Section 2.2. Measurement Standards and Test Equipment.

- Pycnometer, a vessel of known volume used for weighing semifluids. The pycnometer can be bought or made. If it is made, refer to it as a "density cup." To make a 150 mL or 5 fl oz density cup, cut off the lip of a 150 mL beaker with an abrasive saw and grind the lip flat on a lap wheel. The slicker plate is available commercially. Calibrate the density cup gravimetrically with respect to the contained volume using the procedure in ASTM E 542–94, "Standard Practice for Calibration of Laboratory Volumetric Apparatus."
- Appropriate solvents (water, Stoddard solvent, kerosene, alcohol, etc.)
- Caulking gun (for cartridge packed products)

How is pycnometer prepared for use?

Before using, weigh and calibrate the pycnometer (or the density cup and slicker plate) with respect to volume (mL or fl oz). If applicable, comply with any special instructions furnished by the manufacturer to calibrate a pycnometer that has not been calibrated. It is not necessary to reweigh or recalibrate for each test; however, mark the pieces of each unit to prevent interchange of cups and slicker plates.

How is it determined if the containers meet the package requirements?

- 1. First, follow the Basic Test Procedure in Section 2.3. Define the inspection lot. Use a Category A sampling plan in the inspection; select a random sample; then, use the following procedure to determine lot compliance.
- 2. Weigh a calibrated pycnometer and slicker plate and record as "pycnometer weight" and record this weight and the volume of the pycnometer.
- 3. Determine the gross weight of the first package and record the weight value. Open the package and transfer the product to the pycnometer by filling it to excess. Use a caulking gun to transfer product from the caulking cartridges. If using a pycnometer, cover it with a lid and screw the cap down tightly. Excess material will be forced out through the hole in the lid, so the lid must be clean. If using a density cup, place the slicker plate over 3/4 of the cup mouth, press down and slowly move the plate across the remainder of the opening. With the slicker plate in place, clean all the exterior surfaces with solvent and dry.
- 4. Completely remove the product from the package container; clean the package container with solvent; dry and weigh it to determine the tare weight.
- 5. Weigh the filled pycnometer or filled density cup with slicker plate and record this weight. Subtract the weight of the empty pycnometer from the filled weight to determine the net weight of the product contained in the pycnometer and record this weight.
- 6. Clean the pycnometer and repeat steps 3, 4, and 5 for the second package in the tare sample.

Determine acceptability of the density variation on the two packages selected for tare. If the difference between the densities of both packages exceeds one division of the scale, do not use the gravimetric procedure to determine the net quantity of contents. Instead, use the procedure in steps 9 and 10.

Note: If the gravimetric procedure can be used perform steps 8 and 10.

7. Calculate the weight of product corresponding to the labeled volume of product according to the following formula:

Weight of Product in Pycnometer + Pycnometer Volume = Product Density

- 8. Test each package individually by determining the product density in each package using the pycnometer and record the gross, tare, and net weight of each package. Subtract the weight of the labeled volume (determined for each package) from the net weight of product to arrive at each individual package error in units of weight.
- 9. Convert the package errors to units of volume using the following formula:

Package Error (volume) = (Package Error [weight] x Pycnometer Volume) ÷ (Weight of Product in Pycnometer)

10. Record the package errors on the report form using an appropriate unit of measure.

Evaluation of Results

Follow the procedures in "Evaluation Results" in Chapter 2, Section 2.3 to determine lot conformance.

3.10 Peat Moss

How are packages of peat and peat moss labeled by compressed volume inspected?

Measure the dimensions of the compressed material to determine if it contains the labeled quantity.

How are packages of peat and peat moss labeled by uncompressed volume inspected?

Use the following method to test peat moss sold using an uncompressed volume as the declaration of content. The procedure is based on ASTM D 2978-90, "Standard Method of Test for Volume of Processed Peat Materials."

Equipment

- 12.5 mm (or $\frac{1}{2}$ in) sieve.
- Use one of the following measures as appropriate for the package size. (See Table 3-4., "Specifications for Test Measures for Mulch and Soils" for additional information on test measure construction.)
 - 28.3 L (1 ft³) measure with inside dimensions of 30 cm (12 in) by 30 cm (12 in) by 30.4 cm (12 in). Mark the inside of the measure with horizontal lines every 1.2 cm (1/2 in) so that package errors package errors can be directly determined.
 - 100 L (3.5 ft³) measure with inside dimensions of 50 cm (19.75 in) by 50 cm (19.75 in) by 40 cm (15.7 in). The inside of the measure should be marked with horizontal lines every 1.2 cm (1/2 in) so that package errors can be directly determined.
- Straight edge, 50 cm (20 in) in length.
- Sheet for catching overflow of material.
- Level (at least 15 cm (6 in) in length).

How is it determined if the packages meet the requirements in this handbook?

1. Follow Basic Test Procedure in Section 2.3. Define the inspection lot. Use a Category A sampling plan in the inspection; select a random sample; then, use the following procedure to determine lot compliance.

2. Open each package in turn, remove the contents, and pass them through the sieve directly into the measuring container (overfilling it). Use this method for particulate solids (such as soils or other garden materials) labeled in cubic dimensions or dry volume. Some materials may not pass through the sieve for peat moss; in these instances, separate the materials by hand (to compensate for packing and settling of the product after packaging) before filling the measure.

Note: Separated material (product not passing through the sieve) must be included in the product volume.

Shake the measuring container with a rotary motion at one rotation per second for 5 seconds. Do not lift the measuring container when rotating it. If the package contents are greater than the measuring container capacity, level the measuring container with a straight edge using a zigzag motion across the top of the container. Empty the container. Repeat the filling operations as many times as necessary, noting the partial fill of the container for the last quantity delivered using the interior horizontal markings as a guide. Record the total volume.

3. To compute each package error, subtract the labeled quantity from the total volume and record it.

Evaluation of Results

Follow the procedures in "Evaluating Results" in Chapter 2, Section 2.3 to determine lot conformance.

3.11 Mulch and Soils Labeled by Volume

What products are defined as mulch and soil?

- Mulch is defined as "any product or material except peat or peat moss that is advertised, offered for sale, or sold for primary use as a horticultural, above-ground dressing, for decoration, moisture control, weed control, erosion control, temperature control, or other similar purposes."
- Soil is defined as "any product or material, except peat or peat moss that is advertised or offered for sale, or sold for primary use as a horticultural growing media, soil amendment, and/or soil replacement."

What type of measurement equipment is needed to test packages of mulch and soil?

• A test measure appropriate for the package size that meets the specifications for test measures in Table 3-4.

Table 3-4. Specifications for Test Measures for Mulch and Soils						
Nominal Volume of Test Measure	Interi	or Wall Dimen	sions*	Marked Intervals on Interior Walls ***	Volume Equivalent of Marked Intervals	
	Length	Width	Height**			
30 L (1.07 ft ³) for testing packages that contain less than 28.3 L (1 ft ³) or (25.7 dry qt)	20 cm (8 in)	21cm (8.4 in)	72.5 cm (29 in)	1.2 cm (1/2 in)	518 mL (32 in ³)	
28.3 L (1 ft ³)	30 cm (12 in)	30 cm (12 in)	30 cm (12 in)	1.2 cm (1/2 in)	1 108 mL (72 in ³)	
56.6 L (2 ft ³)	40 cm (16 in)	22.5cm (9 in)	120 cm (48 in)	1.2 cm (1/2 in)	1 110 mL (72 in ³)	
85 L (3 ft ³)	40 cm (16 in)	22.5 cm (9 in)	120 cm (48 in)	1.2 cm (1/2 in)	1 110 mL (72 in ³)	

Measures are typically constructed of 1.2 cm (1/2 in) marine plywood. A transparent sidewall is useful for determining the level of fill, but must be reinforced if it is not thick enough to resist distortion. If the measure has a clear front, place the level gage at the back (inside) of the measure so that the markings are read over the top of the mulch.

Notes

* Other interior dimensions are acceptable if the test measure approximates the configuration of the package under test and does not exceed a base configuration of the package cross-section.

**The height of the test measure may be reduced, but this will limit the volume of the package that can be tested.

*** When lines are marked in boxes, they should extend to all four sides of the measure if possible to improve readability. It is recommended that a line indicating the MAV level also be marked to reduce the possibility of reading errors when the level of the mulch is at or near the MAV.

- Drop cloth/polyethylene sheeting for catching overflow of material.
- Level (at least 15 cm (6 in) in length).

How is it determined if the packages meet the package requirements?

Use the following procedure:

- 1. Follow the Basic Test Procedure in Section 2.3. Define the inspection lot. Use a Category A sampling plan in the inspection, select a random sample, then, use the following procedure to determine lot conformance.
- 2. Open each package in turn. Empty the contents of the package into a test measure and level the contents by hand. Do not rock, shake, drop, rotate, or tamp the test measure. Read the horizontal marks to determine package net volume.

Note: Some types of mulch are susceptible to clumping and compacting. Take steps to ensure that the material is loose and free flowing when placed into the test measure. Gently roll the bag before opening to reduce the clumping and compaction of material.

3. Exercise care in leveling the surface of the mulch/soil and determine the volume reading from a position that minimizes errors caused by parallax.

How are package errors determined?

Determine package errors by subtracting the labeled volume from the package net volume in the measure. Record each package error.

Package Error = Package Net Volume Labeled Volume

Evaluation of Results

Follow the procedures in Chapter 2, Section 2.3., Evaluating Results to determine lot conformance.

Note: In accordance with Table 2-10., in Appendix A, apply an MAV of 5 percent of the declared quantity to mulch and soil sold by volume. When testing mulch and soil with a net quantity in terms of volume, one package out of every 12 in the sample may exceed the 5 percent MAV (e.g., one in a sample of 12 packages; two in a sample of 24 packages; four in a sample of 48 packages.) However, the sample must meet the average requirement of the Category A Sampling Plan.

3.12 Ice Cream Novelties

Note: The following procedure can be used to test packaged products that are solid or semisolid and that will not dissolve in, mix with, absorb, or be absorbed by the fluid into which the product will be immersed. For example, ice cream labeled by volume can be tested using ice water or kerosene as the immersion fluid.

How are ice cream novelties inspected to see if the labeled volume meets the package requirements?

Use the following volume displacement procedure that uses a displacement vessel specifically designed for ice cream novelties such as ice cream bars, ice cream sandwiches, or cones. The procedure determines the volume of the novelty by measuring the amount of water displaced when the novelty is submerged in the vessel. Two displacements per sample are required to subtract the volume of sticks or cups.

The procedure first determines if the densities of the novelties are the same from package to package (in the same lot) so that a gravimetric test can be used to verify the labeled volume. If a gravimetric procedure is used, compute an average weight for the declared volume from the first two packages and weigh the remainder of the sample. If the gravimetric procedure cannot be used, use the volume displacement procedure for all of the packages in the sample.

Equipment

- A scale that meets the requirements in Chapter 2, Section 2.2. Measurement Standards and Test Equipment.
- Volumetric measures

• Displacement vessel with dimensions that are appropriate for the size of novelties being tested. Figure 3-1., shows an example of a displacement vessel. It includes an interior baffle that reduces wave action when the novelty is inserted and the downward angle of the overflow spout reduces dripping. Other designs may be used.

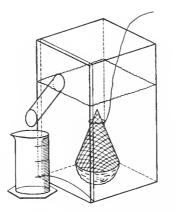


Figure 3-1. Example of a Displacement Vessel

Note: This displacement vessel can be constructed or similar devices may be obtained from any Laboratory Equipment or Science Education suppliers. The U.S. Department of Commerce does not endorse or recommend any particular device over similar commercially available products from other manufacturers.

- Thin wire, clamp, or tongs
- Freezer or ice chest and dry ice
- Single-edged razor or sharp knife (for sandwiches only)
- Ice water/kerosene maintained at 1 °C (33 °F) or below
- Indelible marker (for ice pops only)
- Level, at least 15 cm (6 in) in length
- A partial immersion thermometer (or equivalent) with a range of 35 °C to +50 °C (30 °F to 120 °F), at least 1 °C (1 °F) graduations, and with a tolerance of ±1 °C (±2 °F)
- A table-top, laboratory-type jack of sufficient size to hold the displacement vessel
- Stopwatch

Test Procedure

Follow the Basic Test Procedure in Section 2.3. Define the inspection lot. Use a Category A sampling plan in the inspection; select a random sample; then use the following procedure to determine lot compliance.

1. Maintain the samples at the reference temperature for frozen products that is specified in Table 3-1. Reference Temperatures for Liquids in this chapter (i.e., -18 °C [0 °F]). Place the samples in the freezer or ice chest until they are ready to be tested, and then remove packages from the freezer one at a time.

- 2. According to the type of novelty, prepare the sample products as follows:
 - Ice-pop. Mark on the stick(s) with the indelible marker the point to which the pop will be submerged in the ice water. (After the ice-pop contents have been submerged, remove the novelty to determine the volume of the stick.)
 - Cone. Make a small hole in the cone below the ice cream portion to allow air to escape.
 - Sandwich. Determine whether the declared volume is (a) the total volume of the novelty (that is, including the cookie portion) or (b) the volume of the ice-cream-like portion only. If the declared volume is the volume of only the ice-cream-like portion, shave off the cookie with a razor or knife, leaving some remnants of cookie to ensure that no ice cream is accidentally shaved off. Work quickly, and return the novelty to the freezer before the sandwich softens.
 - Cup. Remove the cap from the cup. (After the cup and novelty contents have been submerged, remove the novelty from the cup to determine the volume of the cup.)

How is it determined if the ice cream novelty packages meet the requirements in this handbook?

- 1. Follow the Basic Test Procedure in Section 2.3. Define the inspection lot. Use a Category A sampling plan in the inspection; select a random sample; then use the following procedure to determine lot compliance.
- 2. Fill the displacement vessel with ice water until it overflows the spout. Allow it to sit until dripping stops. Raise the displacement vessel as necessary and place the graduate beneath the spout.
- 3. Remove a package from the freezer, determine its gross weight and record it.
- 4. Submerge the novelty as suggested until it is below the surface level of the water.
 - Ice-pop. Use a clamp, tongs, or your fingers to hold the stick(s) and submerge the pop to the level marked in Step 2 of the Test Procedures.
 - Cone. Shape the wire into a loop, and use it to push the cone, headfirst (ice cream portion first) into the ice water. Do not completely submerge the cone immediately: let water fill the cone through the hole made in Step 2 of the Test Procedures before completely submerging the novelty.
 - Sandwich or cup. Skewer the novelty with the thin wire or form a loop on the end of the wire to push the sandwich or ice-cream-portion or cup completely below the liquid level.
- 5. Record the total water volume in the graduate. For a cone or sandwich, record the water volume as the net volume and go to step (7). For ice-pops or cups, record the water volume in the graduate as the gross volume and go to step (6).
- 6. Refill the displacement vessel with water to overflowing and reposition the empty graduate under the spout.
 - Ice-pop. Melt the ice pop off the stick or sticks. Submerge the stick or sticks to the line marked in step (4). Record the volume of tare material (i.e., stick) by measuring the water displaced into the graduate. The net volume for the ice-pop is the gross volume recorded in step (5) minus the volume of the tare materials in this step. Record this volume as the "volume of novelty." To determine the error in the package, subtract the labeled quantity from the volume of novelty.

- Cup. Remove the novelty from the cup. Rinse the cup, and then submerge it in the displacement vessel. Small pinholes in the base of the cup can be made to make submersion easier. Record the volume of water displaced into the graduate by the cup as the volume of tare material. The net volume for the novelty is the gross volume determined in step (5) minus the volume of the tare materials determined in this step. Record this as the net volume of the novelty. To determine the error in the package, subtract the labeled quantity from the volume of novelty.
- 7. Clean and air-dry the tare materials (sticks, wrappers, cup, lid, etc.). Weigh and record the weight of these materials for the package.
- 8. Subtract the tare weight from the gross weight to obtain the net weight and record this value.
- 9. Compute the weight of the labeled volume for the package using the following formula and then record the weight:

Product Density = (weight in item 3) ÷ (the total water volume in item 5) Weight of labeled volume = (labeled volume) x (Product Density)

- 10. Repeat steps (3) through (9) for a second package.
- 11. If the weight of the labeled volume in steps (9) and (10) differ from each other by more than one division on the scale, the gravimetric test procedure cannot be used to test the sample for compliance. If this is the case, steps (2) through (6) for each of the remaining packages in the sample must be used to determine their net volumes and package errors. Then go to evaluation of results.

How is "nominal gross weight" determined?

- 1. Determine the Average Used Dry Tare Weight of the sample according to provisions in Chapter 2, Section 2.3.
- 2. Using the weights determined in step (11) calculate the Average Product Weight by adding the densities of the liquid from the two packages and dividing the sum by two.
- 3. Calculate the "nominal gross weight" using the formula:

Nominal Gross Weight = Average Product Weight + Average Used Dry Tare Weight

How are the errors in the sample determined?

- 1. Weigh the remaining packages in the sample.
- 2. Subtract the nominal gross weight from the gross weight of each package to obtain package errors in terms of weight.

Note: Compare the sample packages to the nominal gross weight.

3. Follow the Basic Test Procedure in Section 2.3.

To convert the average error or package error from weight to volume, use the following formula:

Package Error in Volume = (Package Error in Weight) ÷ (Product Density)

Follow the procedures in Chapter 2, Section 2.3., Evaluating Results to determine lot conformance.

3.13 Fresh Oysters Labeled by Volume

What requirements apply to packages of fresh oysters labeled by volume?

Packaged fresh oysters removed from the shell must be labeled by volume. The maximum amount of permitted free liquid is limited to 15 percent by weight. Testing the quantity of contents of fresh oysters requires the inspector to determine total volume, total weight of solids and liquid, and the weight of the free liquid.

Equipment

- A scale that meets the requirements in Chapter 2, Section 2.2 Measurement Standards and Test Equipment
- Volumetric measures
- Micrometer depth gage (ends of rods fully rounded), 0 mm to 225 mm (0 in to 9 in)
- Strainer for determining the amount of drained liquid from shucked oysters. Use as a strainer a flat bottom metal pan or tray constructed to the following specifications:
 - \triangleright Sides: 5 cm (2 in)
 - Area: $1\,900\,\text{cm}^2\,(300\,\text{in}^2)$ or more for each 3.78 L (1 gal) of oysters
 - Perforations:
 Diameter: 6 mm (1/4 in)
 Location: 3.2 cm (1 1/4 in) apart in a square pattern, or perforations of equivalent area and distribution.
- Spanning bar, 2.5 cm by 2.5 cm by 30 cm (1 in by 1in by 12 in)
- Rubber spatula
- Level, at least 15 cm (6 in) in length
- Stopwatch

How is it determined if the containers meet the package requirements?

Follow the Basic Test Procedure in Section 2.3. Define the inspection lot. Use a Category A sampling plan in the inspection; select a random sample; then, use the following test procedure to determine lot compliance.

- 1. Determine and record the gross weight of a sample package.
- 2. Set the container on a level surface and open it. Use a depth gage to determine the level of fill. Lock the depth gauge. Mark the location of the gauge on the package.
- 3. Weigh a dry 20 cm or 30 cm (8 in or 12 in) receiving pan and record the weight. Set sieve over the receiving pan.

- 4. Pour the contents from the container onto the sieve without shaking it. Tip the sieve slightly and let it drain for 2 minutes. Remove sieve with oysters. It is normal for oysters to include mucous (which is part of the product) that will not pass through the sieve, so do not force it.
- 5. Weigh the receiving pan and liquid and record the weight. Subtract the weight of the dry receiving pan from the weight of pan and liquid to obtain the weight of free liquid and record the value.
- 6. Clean, dry, and weigh the container and record the tare weight. Subtract the tare weight from the gross weight to obtain the total weight of the oysters and liquid and record this value.
- 7. Determine and record the percent of free liquid by weight as follows:

Percent of free liquid by weight = ([weight of free liquid] \div [weight of oysters + liquid]) x 100.

8. Set up the depth gauge on the dry package container as in step 2. Pour water from the flasks and graduate as needed to re-establish the level of fill obtained in step 2. Add the volumes delivered as the actual net volume for the container and record the value.

Note: Some containers will hold the declared volume only when filled to the brim; they may have been designed for other products, rather than for oysters. If the net volume is short-measure (per step 8), determine if the container will reach the declared volume only if filled to the brim. Under such circumstance, the package net volumes will all be short measure because the container cannot be filled to the brim with a solid and liquid mixture. A small headspace is required in order to get the lid into the container without losing any liquid.

Evaluation of Results

Follow the procedures in "Evaluating Results" in Chapter 2, Section 2.3, to determine lot conformance.

3.14 Determining the Net Contents of Compressed Gas in Cylinders

What type of compressed gases may be tested with these procedures?

These procedures are for industrial compressed gas. Compressed gas may be labeled by weight (for example, Liquefied Petroleum [LP] gas, or carbon dioxide) or by volume. Acetylene, liquid; oxygen, nitrogen, nitrous oxide, and argon are all filled by weight. Acetylene is sold by liters or by cubic feet. Helium, gaseous oxygen, nitrogen, air, and argon are filled according to pressure and temperature tables.

What type of test procedures must be used?

Checking the net contents of compressed gas cylinders depends on the method of labeling; those labeled by weight are generally checked by weight. Cylinders filled by using pressure and temperature charts must be tested using a pressure gauge that is connected to the cylinder. Determine the volume using the pressure and temperature of the cylinder.

Should any specific safety procedures be followed?

Yes, be aware of the hazards of the high pressure found in cylinders of compressed gas. An inspector should handle compressed gas only if the inspector has been trained and is knowledgeable regarding the product, cylinder, fittings, and proper procedures (see *Compressed Gas Association [CGA] pamphlet P-1, "Safe Handling of Compressed Gases in Containers,*" for additional information). Additional precautions that are necessary for personal safety are described in the CGA Handbook of Compressed Gases. All personnel testing compressed gases should have this manual for reference and be familiar with its contents. It is essential that the inspector be certain of the contents before connecting to the cylinder. Discharging a gas or cryogenic liquid through a system for which the material is not intended could result in a fire and/or

explosion or property damage due to the incompatibility of the system and the product. Before connecting a cylinder to anything, be certain of the following:

- Always wear safety glasses.
- The cylinder is clearly marked or labeled with the correct name of the contents and that no conflicting marks or labels are present. Do not rely on the color of the cylinder to identify the contents of a cylinder. Be extremely careful with all gases because some react violently when mixed or when coming in contact with other substances. For example, oxygen reacts violently when it comes in contact with hydrocarbons.
- The cylinder is provided with the correct Compressed Gas Association (CGA) connection(s) for the product. A proper connection will go together smoothly; so excessive force should not be used. Do not use an adapter to connect oxygen to non-oxygen cleaned equipment. When a cylinder valve is opened to measure the internal pressure, position the body away from the pressure gauge blowout plug or in front of the gauge if the gauge has a solid cast front case. If the bourdon tube should rupture, do not be in a position to suffer serious injuries from gas pressure or fragments of metal.
- Thoroughly know the procedure and place emphasis on safety precautions before attempting any tests. Do not use charts referred to in the procedure until the necessary training has been completed. When moving a cylinder, always place the protective cap on the cylinder. Do not leave spaces between cylinders when moving them. This can lead to a "domino" effect if one cylinder is pushed over.
- Open all valves slowly. A failure of the gauge or other ancillary equipment can result in injuries to nearby persons. Remember that high gas pressure can propel objects with great force. Gas ejected under pressure can also cause serious bodily injuries if someone is too close during release of pressure.
- One of the gauges will be reserved for testing oxygen only and will be prominently labeled "For Oxygen Use Only." This gauge must be cleaned for oxygen service and maintained in that "clean" condition. The other gauge(s) may be used for testing a variety of gases if they are compatible with one another.
- Observe special precautions with flammable gas in cylinders in addition to the several precautions necessary for the safe handling of any compressed gas in cylinders. Do not "crack" cylinder valves of flammable gas before connecting them to a regulator or test gauge. This is extremely important for hydrogen or acetylene.

What type of measurement equipment is needed to test cylinders of compressed gas?

- Use a scale that meets the requirements in Chapter 2, Section 2.2 Measurement Standards and Test Equipment. Use a wooden or non-sparking metal ramp to roll the cylinders on the scale to reduce shock loading.
- Two calibrated precision bourdon tube gauges or any other approved laboratory-type pressuremeasuring device that can be accurately read within plus or minus 40 kPa (5 psi) A gauge having scale increments of 200 kPa (25 psi) or smaller shall be considered as satisfactory for reading within plus or minus 40 kPa (5 psi). The range of both gauges shall be a minimum of 0 kPa to 23 MPa (0 psi to 5 000 psi) when testing cylinders using standard industrial cylinder valve connections. These standardized connections are listed in "CGA Standard V-1, Standard for Compressed Gas Cylinder Valve Outlet and Inlet for use with Gas Pressures up to 21 MPa (3 000 psi)." For testing cylinders with cylinder valve connections rated for over 21 MPa (3 000 psi), the test gauge and its inlet connection must be rated at 14 MPa (2 000 psi) over the maximum pressure

that the connection is rated for in CGA V-1. Note: there are standard high-pressure industrial connections on the market that are being used up to their maximum pressure of 52 MPa (7 500 psi).

Note: Any gauge or connectors used with oxygen cylinders must be cleaned for oxygen service, transported in a manner which will keep them clean, and never used for any other gas including air or oxygen mixtures. Oxygen will react with hydrocarbons and many foreign materials that may cause a fire or explosion.

- An approved and calibrated electronic temperature measuring device or three calibrated mercuryin-glass thermometers having either a digital readout or scale division of no more than 1 °F (0.5 °C). The electronic device equipped with a surface temperature sensor is preferred over a mercury-in-glass thermometer because of its shorter response time.
- Two box-end wrenches of 29 mm (1 1/8 in) for oxygen, nitrogen, carbon dioxide, argon, helium, and hydrogen and 21 mm (7/8 in) for some sizes of propane. All industrial CGA connections are limited to these two hex sizes. Avoid using an adjustable wrench because of the tendency to round the edges of the fittings, which can lead to connections not being tightened properly.
- Use a separate gauge and fitting for each gas to be tested. If adapters must be used, do not use on oxygen systems.

Test Procedure for Cylinders Labeled by Weight

How is it determined if the containers meet the package requirements using the gravimetric test procedure?

- 1. Follow the Basic Test Procedure in Section 2.3. Define the inspection lot. Use a Category A sampling plan in the inspection; select a random sample; then use the following test procedure to determine lot compliance.
- 2. The cylinder should be marked or stenciled with a tare weight. The marked value may or may not be used by the filling plant when determining the net weight of those cylinders sold or filled by weight. If there is a tare weight marked on the net contents tag or directly on the cylinder, then an actual tare weight was determined at the time of fill. If there is no tare weight marked on a tag or on the cylinder, then the stamped or stenciled tare weight is presumed to have been used to determine the net contents.

Note: Check the accuracy of the stamped tare weights on empty cylinders whenever possible. The actual tare weight must be within (a) 1/2 percent of the stamped tare weight for 9 kg (20 lb) tare weights or less or (b) 1/4 percent of the stamped tare weight for greater than 9 kg (20 lb) tare weights. (See NIST Handbook 130, Section 2.16, "Method of Sale Regulation.")

3. Place cylinder on scale and remove protective cap. The cap is not included in the tare weight.

Weigh the cylinder and determine net weight, using either the stamped or stenciled tare weight, or the tare weight marked on the tag. Compare actual net weight with labeled net weight, or use the actual net weight to look up the correct volume declaration (For Acetylene Gas), and compare that with the labeled volume.

Note: The acetone in acetylene cylinders is included in the tare weight of the cylinder. Therefore, as acetylene is withdrawn from the cylinder, some acetone will also be withdrawn, changing the tare weight.

Most producers will replace acetone in the cylinder before the cylinder is refilled, filling the cylinder with acetone to the stamped tare weight. Other producers, although not following recommended procedures, do not replace the acetone until it drops to a predetermined weight. In the latter situation, the refilling plant must note the actual tare weight of the cylinder and show it on the tag containing the net content statement or on the cylinder itself. Refer to tables for acetylene if necessary (if the acetylene is labeled by volume).

Test Procedure for Cylinders Labeled by Volume

How is it determined if the containers meet the package requirements using the volumetric test procedure?

Follow the Basic Test Procedure in Section 2.3. Define the inspection lot. Use a Category A sampling plan in the inspection; select a random sample; then use the following test procedure to determine lot compliance.

- 1. Determine the temperature of the cylinders in the sample. Place the thermometer approximately halfway up a cylinder in contact with the outside surface. Take the temperature of three cylinders selected at random and use the average temperature of the three values.
- 2. Using the appropriate pressure gauge, measure the pressure of each cylinder in the sample.
- 3. Determine the cylinder nominal capacity from cylinder data tables or from the manufacturer. (These tables must be obtained in advance of testing.)
- 4. Using NIST Technical Note 1079 "Tables of Industrial Gas Container Contents and Density for Oxygen, Argon, Nitrogen, Helium, and Hydrogen" determine the value (SCF/CF) from the content tables at the temperature and pressure of the cylinder under test.
- 5. Multiply the cylinder nominal capacity by the value (SCF/CF) obtained from the content tables. This is the actual net quantity of gas.
- 6. Subtract the labeled net quantity from the actual net quantity to determine the error.

Evaluation of Results

Follow the procedures in "Evaluating Results" in Chapter 2, Section 2.3 to determine lot conformance.

3.15 Volumetric Test Procedure for Packaged Firewood with a Labeled Volume of 113 L (4 Ft^3) or Less

How are packages of firewood tested?

Follow the Basic Test Procedure in Section 2.3. Define the inspection lot. Use a Category A sampling plan in the inspection; select a random sample, then use the test procedure provided in Section 3.17 to determine lot compliance.

Equipment

- Linear Measure. Take all measurements in increments of 0.5 cm (1/8 in) or less and round up.
- Binding Straps. Binding Straps are used to hold wood bundles together if the bundles need to be removed from the package/wrapping material.

How is it determined if the containers meet the package requirements?

Unless otherwise indicated, take all measurements without rearranging the wood or removing it from the package. If the layers of wood are crosshatched or not ranked in discrete sections in the package, remove the wood from the package re-stack and measure accordingly.

3.16 Boxed Firewood

How is the volume of firewood contained in a box determined?

Follow the Basic Test Procedure in Section 2.3. Define the inspection lot. Use a Category A sampling plan in the inspection; select a random sample; then use the following test procedure to determine lot conformance.

1. Open the box to determine the average height of wood within the box; measure the internal height of the box. Take three measurements (record as " d_1 , d_2 ...etc.") along each end of the stack. Measure from the bottom of a straight edge placed across the top of the box to the highest point on the two outermost top pieces of wood and the center-most top piece of wood. Round measurements down to the nearest 0.5 cm (1/8 in). If pieces are obviously missing from the top layer of wood, take additional height measurements at the highest point of the uppermost pieces of wood located at the midpoints between the three measurements on each end of the stack. Calculate the average height of the stack by averaging these measurements and subtracting from the internal height of the box according to the following formula.

Average Height of Stack = (Internal Height of Box) – (sum of measurements) ÷ (number of measurements)

2. Determine the average width of the stack of wood in the box by taking measurements at three places along the top of the stack. Measure the inside distance from one side of the box to the other on both ends and in the middle of the box. Calculate the average width.

Average Width = $(W_1 + W_2 + W_3) \div (3)$

3. To determine the average length of the pieces of wood, remove the wood from the box and select the five pieces with the greatest girth. Measure the length of each of the five pieces from center-to-center. Calculate the average length of the five pieces.

Average Length = $(L_1 + L_2 + L_3 + L_4 + L_5) \div (5)$

4. Calculate the volume of the wood within the box. Use dimensions for height, width, and length.

Volume in liters = (height in cm x width in cm x length in cm) \div (1 000)

Volume in cubic feet = (height in inches x width in inches x length in inches) \div (1 728)

5. For boxes of wood that are packed with the wood ranked in two discrete sections perpendicular to each other, calculate the volume of wood in the box as follows: (1) determine the average height, width, and length as in 1, 2 and 3 above for each discrete section, compute total volume, and (2) total the calculated volumes of the two sections. Take the width measurement for Volume 2 (V₂) from the inside edge of the box adjacent to V₂ to the plane separating V₁ and V₂. Compute total volume by adding Volume 1 (V₁) and V₂ according to the following formula.

Total Volume =
$$V_1 + V_2$$

6. Follow the procedures in Chapter 2, Section 2.3., Evaluating Results to determine lot conformance.

3.17 Crosshatched Firewood

How must the volume of stacked or crosshatched firewood be measured?

Follow the Basic Test Procedure in Section 2.3. Define the inspection lot. Use a Category A sampling plan in the inspection; select a random sample; and use the following test procedure to determine lot compliance.

- 1. Stack the firewood in a ranked and well-stowed geometrical shape that facilitates volume calculations (i.e., rectangular). The number of measurements for each dimension given below is the minimum that should be taken.
- 2. Determine the average measurements of the stack:
 - Height: Start at one end of the stack; measure the height of the stack on both sides at four equal intervals. Calculate and record the average height.
 - Length: Start at the base of the stack; Measure the length of the stack in four equal intervals. Calculate and record the average length.
 - Width: Select the five pieces with the greatest girth. Measure the length of the pieces, calculate and record the average piece length. (3)

Calculate Volume:

Volume in liters = (Avg. Height [cm] x Avg. Width [cm] x Avg. Length in [cm]) \div 1 000

Volume in cubic feet = (Avg. Height [in] x Avg. Width [in] x Avg. Length [in]) $\div 1.728$

3. Follow the procedures in Chapter 2, Section 2.3., Evaluating Results to determine lot conformance.

3.18 Bundles and Bags of Firewood

How is the volume of bundles and bags of firewood measured?

Follow the Basic Test Procedure in Section 2.3. Define the inspection lot. Use a Category A sampling plan in the inspection; select a random sample; then use the following test procedure to determine lot compliance.

- 1. Average area of ends: secure a strap around each end of the bundle or bag of wood to prevent movement during testing and to provide a definite perimeter. Use two or more straps to secure the wood.
- 2. Set one end of the bundle or bag on tracing paper large enough to cover the end completely. Draw a line around the perimeter of the bundle or bag on the tracing paper.
- 3. Transfer the tracing paper to a template graduated in square centimeters or square inches. Count the number of square centimeters or square inches that are enclosed within the perimeter line. Estimate portions of square centimeters or square inches not completely within the perimeter line to the nearest one-quarter square inch.
- 4. Repeat this process on the opposite end of the bundle or bag.

5. Calculate the Average Area.

Average Area =
$$(Area 1 + Area 2) \div 2$$

6. Average length of the pieces of wood: select the five pieces with the greatest girth and measure the length of the pieces. Calculate the average length of the pieces of wood:

Average Length = $(L_1 + L_2 + L_3 + L_4 + L_5) \div 5$

7. Calculate Volume:

Volume in liters = (Average Area $[cm^2]$ x Average Length [cm]) ÷ 1 000

Volume in cubic feet = (Average Area $[in^2]$ x Average Length [in]) ÷ 1 728

Evaluation of Results

Follow the procedures in Chapter 2, Section 2.3., Evaluating Results to determine lot conformance.

Note: Specified in Table 2-10., Appendix A, maximum allowable variations for individual packages are not applied to packages of firewood.

Chapter 4. Test Procedures – Packages Labeled by Count, Linear Measure, Area, Thickness, and Combinations of Quantities

4.1 Scope

What types of packaged goods can be tested using these procedures?

Use these procedures to determine the net contents of products sold by count, area, thickness, and linear measure. If a package includes more than one declaration of quantity, each declaration must meet the package requirements.

Can the gravimetric test procedure be used to verify the net quantity of contents of packages labeled by count and linear measure?

Use the gravimetric procedure to test products sold by measure or count if the density of the product does not vary excessively from one package to another.

What procedures may be used if the gravimetric test procedure cannot be used?

Open each package in the sample and measure or count the items.

4.2 Packages Labeled by Count

How are packages tested labeled by count?

If the labeled count, is 50 items or less, use Section 4.3. If the labeled count is, more than 50 items see Section 4.4.

Can a gravimetric test procedure be used to verify the labeled count of a package?

Yes, if the scale being used is sensitive enough to determine the weight of individual items. Use the following procedures to determine if the sample packages can be tested gravimetrically.

- 1. For packages labeled with a count of 84 or higher, calculate the weight equivalent for the MAV/6 for the labeled count of the package. MAV/6 must be at least equal to one-half scale division on a mechanical scale or one division on a digital scale.
- 2. For packages with a labeled count of 83 or fewer, when each unit weighs at least 2 scale divisions, consider the scale acceptable.

Example: According to Table 2-7., in Appendix A, the MAV is 7 for a package labeled with a count of 250 items. The scale should be capable of measuring differences corresponding to MAV/6 or, in this example, the weight of one item.

- If the scale meets the appropriate requirement, gravimetric testing can be used to determine package count or,
- > If the scale does not meet the criteria, count the content in each package in the sample.

4.3 Packages Labeled with 50 Items or Less

Test Procedure

- 1. Follow the Basic Test Procedure in Section 2.3. Define the inspection lot. Use a Category A sampling plan in the inspection; select a random sample; then use the following test procedure to determine lot compliance.
- 2. Open the packages and count the number of items in each. Record the number of packages that contain less than the labeled count.

Evaluation of Results

- 1. For the sample size indicated in Column 1 of Table 2-11., Accuracy Requirements for Packages Labeled by Low Count of (50 or less), refer to Column 2 to determine the number of packages that are allowed to contain less than the labeled count.
- 2. If the number of packages in the sample that contain less than the labeled count exceeds the number permitted in Column 2, the sample and the lot fail to meet the package requirement.

Note: For statistical reasons, the average requirement does not apply to packages labeled by count of 50 or fewer items, and the MAV does not apply to the lot. It only applies to the packages in the sample.

3. Maximum Allowable Variations: The MAVs listed in Table 2-7., MAVs for Packages Labeled by Count define the limits of reasonable variation for an individual package even though the MAV is not directly used in the sampling plan. Individual packages that are undercount by more than the MAV are considered defective. Even if the sample passes, these should be repacked, relabeled, or otherwise handled.

Example: If testing a lot of 160 packages of pencils labeled "50 pencils," choose a random sample of 12 packages from the lot. If the scale cannot discriminate between differences in count, open every package and count the pencils. For example, assume the 12 package counts are: 50, 52, 50, 50, 51, 53, 52, 50, 50, 50, 47, and 50.

Because only one package contains fewer than 50 pencils, the sample passes the test (Refer to Table 2-11.). However, the package containing 47 pencils should not be introduced into commerce even though the lot complies with the package requirements because it is undercount by more than the MAV (1 item) permitted in Table 2-7.

4.4 Packages Labeled by Count of More than 50 Items

Test Procedures

There are two procedures to determine count without opening all packages in the sample. Both use the weight of a counted number of items in the package. If the weight of discrete items or numbers of items in a package varies, the packaged items must be counted rather than weighed.

Equipment

Use a scale that meets the requirements in Chapter 2, Section 2.2, Measurement Standards and Test Equipment.

Audit Procedure

Use this procedure to audit lots of packages labeled by count of more than 50 items, but the precision of this procedure is only ± 1 percent. Determine the lot compliance based on actual count or the violation procedure.

- 1. Follow the Basic Test Procedure in Section 2.3. Define the inspection lot. Use a Category A sampling plan in the inspection; select a random sample; then use the following test procedure to determine lot compliance.
- 2. Select an initial tare sample according to Chapter 2, Section 2.3.
- 3. Gross weigh the first package in the tare sample and record this weight.
- 4. Select the number of items from the first tare package that weighs the greater:
 - \geq 10 percent of the labeled count; or
 - > a quantity equal to at least 50 minimum divisions on the scale.

Example: Using a scale with 1 g divisions, the selected count must weigh at least 50 grams. If a scale with 0.001 lb divisions is used, the selected count must weigh at least 0.05 lb. Record the count and weight.

5. Calculate the weight of the labeled count using the following formula:

Weight of the Labeled Count = (labeled count x weight of items in step [4]) ÷ (count of items in step [4])

Record the result as "labeled count weight."

- 6. Gross weigh the remaining packages of the tare sample and keep contents of opened packages separated in case all of the items must be counted.
- 7. Determine the Average Used Dry Tare Weight of the sample according to Chapter 2, Section 2.3.
- 8. The weight of the labeled count plus the average tare weight represents the "nominal gross weight."
- 9. Subtract the nominal gross weight from the gross weight of the individual packages and record the errors.

(Package error [weight]) = (actual package gross weight) (nominal gross weight)

10. Convert the package errors in units of weight to count:

Package error (count) = (Package error [weight] x labeled count) ÷ (labeled count weight)

Round any fractional counts up to whole items in favor of the packager. Record the package error in units of count. Compute the average error.

- If the average error is minus, go to the "procedure to use if the inspector suspects the lot violates the package requirements" below
- If the average error is zero or positive, the sample is presumed to conform to the package requirements.

Procedures to use if the inspector suspects the lot violates the package requirements

If possible, use the gravimetric procedure to determine compliance. To minimize the number of packages to be opened, combine the measurement of the weight of the number of units in the package with the determination of tare. Therefore, it will not be necessary to open more packages than the tare sample. If the audit procedure in this section has been used, the possible violation procedure below can be followed with the same sample if package contents have been kept separate and can still be counted. Use the following steps to determine if the sample passes or fails.

- 1. Follow the Basic Test Procedure in Section 2.3. Define the inspection lot. Use a Category A sampling plan in the inspection; select a random sample; then use the following test procedure to determine lot compliance. Use a scale that meets the criteria specified in 4.2.
- 2. Select an initial tare sample according to Chapter 2, Section 2.3.
- 3. Gross weigh the packages selected for the tare sample and record these weights. Open these packages and determine the tare and net weights of the contents, and count the exact number of items in the packages. Record this information.
- 4. Calculate and record the weights of the labeled counts for the first two packages using the formula:

Weight of labeled count = (labeled count) x (contents weight \div contents count)

To avoid round off errors, carry at least two extra decimal places in the calculation until the weight of the labeled count is obtained. To use the gravimetric procedure, the difference in weights of the labeled counts of the two packages must not exceed one scale division.

- If the difference in weights exceeds this criterion, determine the actual count per package for every package in the sample recording plus and minus errors. Then, follow the procedures in "Evaluating Results" in Chapter 2, Section 2.3, to determine lot conformance.
- If the difference is within the criterion, average the weights of the labeled count and go on to step (5).
- 5. Determine the Average Used Dry Tare Weight of the sample according to provisions in Chapter 2, Section 2.3.
- 6. Determine and record the nominal gross weight by adding the average weight of the labeled count of items in the package step (4) to the average tare weight step (5).
- 7. Weigh the remaining packages in the sample, subtract the nominal gross weight from the gross weight of the individual packages, and record the errors.

Package Error (weight) = (Actual Package Gross Weight) (Nominal Gross Weight)

8. Look up the MAV for the package size from Table 2-7. and convert it to weight using the formula:

MAV (weight) = (MAV (count) x Avg. Wt. of Labeled Count step [4]) ÷ (Labeled Count)

Convert the MAV to dimensionless units by dividing the MAV (weight) by the unit of measure and record.

Follow the procedures in Chapter 2, Section 2.3., Evaluation Results to determine lot conformance.

Convert back to count when completing the report form using following the formula:

Avg. Pkg. Error (count) = (Avg. Pkg. Error [dimensionless units]) x (Unit of Measure) x (Labeled Count) ÷ (Avg. Weight of Labeled Count.)

4.5 Paper Plates and Sanitary Paper Products

How are the labeled dimensions of paper plates and sanitary paper products verified?

Follow the Basic Test Procedure in Section 2.3. Define the inspection lot. Use a Category A sampling plan in the inspection; select a random sample; then use the following procedure to determine lot compliance.

The following procedures are used to verify the size of paper plates and other products. The following procedure may be used to verify the size declarations of other disposable dinnerware.

Note: Do not distort the item's shape during measurement.

The count of sanitary paper products cannot be adequately determined by weighing. Variability in sheet weight and core weight requires that official tests be conducted by actual count. However, weighing can be a useful audit method. These products often declare total area as well as unit count and sheet size. If the actual sheet size measurements and the actual count comply with the average requirements, the total area declaration is assumed correct.

Equipment

- Steel tapes and rules. Determine measurements of length to the nearest division of the appropriate tape or rule.
 - ➢ Metric Units:

For labeled dimensions 40 cm or less, Linear Measure: 30 cm in length, 1 mm divisions; or a 1 m rule with 0.1 mm divisions, overall length tolerance of 0.4 millimeters.

For labeled dimensions greater than 40 cm, 30 m tape with 1 mm divisions.

Inch pound Units:

For labeled dimensions 25 in or less, use a 36 in rule with 1/64 in or 1/100 in divisions and an overall length tolerance of 1/64 inches.

For dimensions greater than 25 in, use a 100 ft tape with 1/16 in divisions and an overall length tolerance of 0.1 inches.

Measuring Base

Note: A measuring base may be made of any flat, sturdy material approximately 38 cm (15 in) square. Two vertical side pieces approximately 3 cm (1 in) high and the same length as the sides of the measuring base are attached along two adjoining edges of the measuring base to form a 90° corner. Trim all white borders from two or more sheets of graph paper (10 divisions per centimeter or 20 divisions per inch). Place one sheet on the measuring base and position it so that one corner of graph paper is snug in the corner of the measuring base and vertical sides. Tape the sheet to the measuring base. Overlap other sheets on the first sheet so that the lines of top and bottom sheet coincide, expanding the graph area to a size bigger than plates to be measured; tape these sheets to the measuring base. Number each line from the top and left side of base plates: 1, 2, 3, etc.

How are paper products inspected?

- 1. Follow the Basic Test Procedure in Section 2.3. Define the inspection lot. Use a Category A sampling plan in the inspection; select a random sample; then use the following test procedure to determine lot compliance.
- 2. Select an initial tare sample according to Chapter 2, Section 2.3.
- 3. Open each package and select one item from each.

Note: Some packages of plates contain a combination of different-sized plates. In this instance, take a plate of each declared size from the package to represent all the plates of that size in the package. For example, if three sizes are declared, select three different plates from each package.

How are paper products measured?

Note: Occasionally, packages of plates declared to be one size contain plates that can be seen by inspection to be of different sizes in the same package. In this instance, select the smallest plate and use the methods below to determine the package error. If the smallest plate is not short measure by more than the MAV, measure each size of plate in the package and calculate the average dimensions.

Example: If 5 plates measure 21.44 cm (8.43 in) and 15 measure 21.74 cm (8.56 in), the average dimension for this package of 20 plates is 21.67 cm (8.53 in).

- 4. For paper plates: place each item on the measuring base plate (or use the linear measure) with the eating surface down so two sides of the plate touch the sides of the measuring base. For other products, use either the measuring base or a linear measure to determine actual labeled dimensions (e.g., packages of napkins, rolls of paper towels). If testing folded products, be sure that the folds are pressed flat so that the measurement is accurate.
- 5. If the measurements reveal that the dimensions of the individual items vary, select at least 10 items from each package. Measure and average these dimensions. Use the average dimensions to determine package error in step 5 below.
- 6. The package error equals the actual dimensions minus the labeled dimensions.

Evaluation of Results

Follow the procedures in Chapter 2, Section 2.3., Evaluating Results to determine lot conformance.

4.6 Special Test Requirements for Packages Labeled by Linear or Square Measure (Area)

Are there special measurement requirements for packages labeled by dimensions?

Yes, products labeled by length (such as yarn) or area often requires the application of tension to the ends of the product in order to straighten the product before measuring. When testing yarn and thread apply tension and use the specialized equipment specified in ASTM D 1907-97, "Standard Test Method for Linear Density of Yarn (Yarn Number) by the Skein Method," in conjunction with the sampling plans and package requirements described in this handbook.

Follow the procedures in Chapter 2, Section 2.3., Evaluating Results to determine lot conformance.

4.7 Polyethylene Sheeting

Which procedures are used to verify the declarations on polyethylene sheeting and bags?

Follow the Basic Test Procedure in Section 2.3. Define the inspection lot. Use a Category A sampling plan in the inspection; select a random sample; then use the following test procedure to determine lot compliance.

Note: Most polyethylene products are sold by length, width, thickness, area, and net weight.

Equipment

- A scale that meets the requirements in Chapter 2, Section 2.2., Measurement Standards and Test Equipment.
- Steel measuring tapes and rules as specified in 4.5.
- Deadweight dial micrometer (or equal) equipped with a flat anvil, 6 mm or (1/4 in) diameter or larger, and a 4.5 mm (3/16 in) diameter flat surface on the head of the spindle. The anvil and spindle head surfaces should be ground and lapped, parallel to within 0.002 mm (0.0001 in), and should move on an axis perpendicular to their surfaces. The dial spindle should be vertical, and the dial should be at least 50 mm (2 in) in diameter. The dial indicator should be continuously graduated to read directly to 0.002 mm (0.0001 in) and should be capable of making more than one revolution. It must be equipped with a separate indicator to indicate the number of complete revolutions. The dial indicator mechanism should be fully jeweled. The frame should be of sufficient rigidity that a load of 1.4 kg (3 lb) applied to the dial housing, exclusive of the weight or spindle presser foot, will not cause a change in indication on the dial of more than 0.02 mm (0.001 in). The indicator reading must be repeatable to 0.001 2 mm (0.000 05 in) at zero. The mass of the probe head (total of anvil, weight 102 g or [3.6 oz], spindle, etc.) must be 113.4 g (4 oz). The micrometer should be operated in an atmosphere free from drafts and fluctuating temperature and should be stabilized at ambient room temperature before use.
- Gage blocks covering the range of thicknesses to be tested should be used to check the accuracy of the micrometer
- T-square

Test Procedure

- 1. Follow the Basic Test Procedure in Section 2.3. Define the inspection lot. Use a Category A sampling plan in the inspection; select a random sample; then use the following test procedure to determine lot compliance.
- 2. Be sure the product is not mislabeled. Check the label declaration to confirm that all of the declared dimensions are consistent with the required standards. The declaration on sheeting, film, and bags shall be equal to or greater than the weight calculated by using the formulas below. Calculate the final value to four digits and declare to three digits dropping the final digit (e.g., if the calculated value is 2.078 lb, then the declared net weight is truncated to 2.07 lb).

Example Label:

Polyethylene Sheeting 1.8 m (6 ft) x 30.4 m (100 ft) 101.6 μm (4 mil) 5.03 kg (11.1 lb)

- 3. Use the following formulas to compute a target net weight. The labeled weight should equal or exceed the target net weight or the package is not in compliance.
 - ▶ For metric dimensions:

Target Mass in Kilograms = $(T \times A \times D) \div 1000$

Where: T = nominal thickness in centimeters

A = nominal length in centimeters x nominal width (the nominal width for bags is twice the labeled width) in centimeters

D = density in grams per cubic centimeter*

▶ For inch-pound dimensions:

Target Weight in Pounds = $T \times A \times D \times 0.036$ 13

Where: T = nominal thickness in inches;

A = nominal area; that is the nominal length in inches x nominal width (the nominal width for bags is twice the labeled width) in inches;

D = density in grams per cubic centimeter; 0.036 13 is a factor for converting g/cm^3 to lb/in^3 .

*Determined by ASTM Standard D 1505-98, "Standard Method of Test for Density of Plastics by the Density Gradient Technique." For the purpose of this handbook, the minimum density shall be 0.92 g/cm³ when the actual density is not known.

Evaluation

1. Perform the calculations as shown in the following samples. If the product complies with the label declaration, go to step (2).

Sample Calculations

▶ For metric units:

 $(0.010\ 16\ \text{cm}\ x\ 547\ 200\ \text{cm}^2\ x\ 0.92\ \text{g/cm}^3)$ ÷ 1 000 = a target net mass of 5.11 kg

In this example, the labeled net mass of 5.03 kg does not meet the target net mass, so the product is not in compliance.

▶ For inch-pound units:

(0.004 in) x ([1 200 in x 12 in] x [72 in x 12 in])] x 0.036 13 x 0.92 = a target net weight of 11.48 lb

In this example, the labeled net weight of 11.1 lb does not meet the target net weight, so the product is not in compliance.

- 2. Select packages for tare samples. Determine and record the gross weights of the initial tare sample.
- 3. Extend the product in the sample packages to their full dimensions and remove by hand all creases and folds.
- 4. Measure the length and width of the product to the closest 3 mm (1/8 in). Make all measurements at intervals uniformly distributed along the length and width of the sample and record the results. Compute the average length and width, and record.
 - ➢ With rolls of product, measure the length of the roll at three points along the width of each roll and measure the width at a minimum of 10 points along the length of each roll.
 - For folded products, such as drop cloths or tarpaulins, make three length measurements along the width of the sample and three width measurements along the length of the sample.
- 5. Determine and record the average tare weight according to Chapter 2, Section 2.3, Tare Procedures.

Evaluation of Results - Length, Width, and Net Weight

Follow the procedures in Chapter 2, Section 2.3., Evaluating Results to determine the lot conformance requirements for length, width, and weight.

- If the sample fails to meet the package requirements for any of these declarations, no further measurements are necessary. The lot fails to conform.
- If the sample meets the package requirements for the declarations of length, widths, and weight, go to step 6 to verify the thickness declaration.
- 5. Measure the thickness of the plastic sheet with a micrometer using the following guide. Place the micrometer on a solid level surface. If the dial does not read zero with nothing between the anvil and the spindle head, set it at zero. Raise and lower the spindle head or probe several times; it should indicate zero each time. If it does not, find and correct the cause before proceeding.
 - Take measurements at five uniformly distributed locations across the width at each end and five locations along each side of each roll in the sample. If this is not possible, take measurements at five uniformly distributed locations across the width at one end and along the length on one side of the product for each package in the sample.

When measuring the thickness, place the sample between the micrometer surfaces and lower the spindle head or probe near, but outside, the area where the measurement will be made. Raise the spindle head or probe a distance of 0.008 mm to 0.01 mm (0.000 3 in to 0.000 4 in) and move the sheet to the measurement position. Drop the spindle head onto the test area of the sheet.

Read the dial thickness two seconds or more after the drop, or when the dial hand or digital readout becomes stationary. This procedure minimizes small errors that may occur when the spindle head or probe is lowered slowly onto the test area.

For succeeding measurements, raise the spindle head 0.008 mm to 0.01 mm (0.000 3 in to 0.000 4 in) above the rest position on the test surface, move to the next measurement location, and drop the spindle head onto the test area. Do not raise the spindle head more than 0.01 mm (0.000 4 in) above its rest position on the test area. Take measurements at least 6 mm (1/4 in) or more from the edge of the sheet.

Repeat Step 6 above on the remaining packages in the sample and record all thickness measurements. Compute and record the average thickness for the individual package and apply the following MAV requirements.

Evaluation of Results – Individual Thickness

- No measured thickness of polyethylene labeled 25 μm (1 mil) or greater should be less than 80 percent of the labeled thickness.
- No measured thickness of polyethylene labeled less than 25 μ m (1 mil) should be less than 65 percent of the labeled thickness.

Count the number of values that are smaller than specified MAVs (0.8 x labeled thickness if 25 μ m [1 mil] or greater or 0.65 x labeled thickness, if less than 25 μ m [1 mil]). If the number of values that fail to meet the thickness requirement exceeds the number of MAVs permitted for the sample size, the lot fails to conform to requirements. No further testing of the lot is necessary. If the number of MAVs for thickness measurements is less than or equal to the number permitted for the sample size, go on to Evaluation of Results - Average Thickness.

Evaluation of Results – Average Thickness

The average thickness for any single package should be at least 96 percent of the labeled thickness. This is an MAV of 4 percent. Circle and count the number of package average thickness values that are smaller than 0.96 x labeled thickness. If the number of package average thicknesses circled exceeds the number of MAVs permitted for the sample size, the lot fails to conform to requirements. No further testing of the lot is necessary. If the number of MAVs for package average thickness is less than or equal to the number of MAVs permitted for the sample size, proceed to "Evaluating Results" in Section 2.3 of Chapter 2 to determine if the lot meets the package requirements for average thickness.

4.8 Packages Labeled by Linear or Square (Area) Measure

Equipment

- Use a scale that meets the requirements in Chapter 2, Section 2.2., Measurement Standards and Test Equipment. Calculate the length or area of packaged product corresponding to MAV/6. If there is no suitable weighing device, all of the packages in the sample must be opened and measured.
- Steel tapes and rules as specified in 4.5
- T-square

Test Procedure

1. Follow the Basic Test Procedure in Section 2.3. Define the inspection lot. Use a Category A sampling plan in the inspection; select a random sample; then use the following test procedure to determine lot compliance.

- 2. Select an initial tare sample according to Chapter 2, Section 2.3.
- 3. Gross weigh the first package in the tare sample and record this weight.
- 4. Determine and record the measurements (to the nearest division of the appropriate tape or rule) of the packaged goods (length, width, area; depending upon which dimensions are declared on the label) and weigh the goods from the first package opened for tare determination.
 - Calculate and record the weight of the labeled measurements using the following formula:

Weight of the labeled measurement = (labeled measurement) x (contents weight) \div (contents measurement)

Look up and record the MAV in units of length or area measure (given in Table 2-8.)

Note: See Table 2-10., Exceptions to the MAVs for textiles, and polyethylene sheeting and film.

- 5. Determine and record the tare weight of the first package opened.
- 6. Determine and record the measurements (length, width, area; depending upon which dimensions are declared on the label) of the product in the second package chosen for tare determination (to the nearest division of the appropriate tape or rule). Determine and record the tare weight of this package.

7. Calculate and record the weight of the labeled measurement for the second package using the following formula:

Weight of the labeled measurement = (labeled measurement) x (contents weight ÷ contents measurement)

The weights of the labeled measurement for two packages must not differ by more than one division on the scale. If they do, open all packages in the sample, measure individually, and compare them against the labeled measure to determine the package errors. If the criterion is met, go to step 8.

- 8. Calculate the average weight of the labeled measurement and record.
- 9. Determine and record the average tare weight according to Chapter 2, Section 2.3., Tare Procedures.
- 10. Compute and record the nominal gross weight by adding the average weight of the labeled measurements to the average tare weight.
- 11. Compute package errors according to the following formula:

Package error (weight) = (actual package gross weight) (nominal gross weight)

12. Convert the MAV to units of weight using the following formula:

MAV (weight) = (avg. wt. of label measurements x MAV [length]) \div (labeled measurements)

Convert the MAV to dimensionless units by dividing the MAV (weight) by the unit of measure and record.

Evaluation of Results

Follow the procedure in Chapter 2, Section 2.3., Evaluating Results to determine lot conformance.

Convert back to dimensions when completing the report form using following the formula:

Avg. Pkg. Error (dimension) = (Avg. Pkg. Error [dimensionless units]) x (Unit of Measure) x (Labeled unit of measure) ÷ (Avg. Weight of Labeled dimension.)

4.9 Baler Twine - Test Procedure for Length

Equipment

- A scale that meets the requirements in Chapter 2, Section 2.2., Measurement Standards and Test Equipment, except a scale with 0.1 g (0.000 2 lb) increments must be used for weighing twine samples. The recommended minimum load for weighing samples is 20 divisions.
- Steel tapes and rules specified in Section 4.5.
- A hand-held straight-face spring scale of at least 5 kg (10 lb) capacity or a cordage-testing device that applies the specified tension to the twine being measured. When measuring twine samples or total roll length, apply 5 kg (10 lb) of tension to the twine.

Test Procedure

Follow the Basic Test Procedure in Section 2.3. Define the inspection lot. Use a Category A sampling plan in the inspection; select a random sample; then use the following test procedure to determine lot compliance.

- 1. Select packages for tare samples. Determine gross weights of the initial tare sample and record. Open the tare samples. Use the procedures for tare determination in Tare Procedures of Chapter 2, Section 2.3 to compute the average tare weight and record this value.
- 2. Procedure for obtaining twine samples: randomly select four balls of twine from the packages that were opened for tare.

From each of the four balls of twine:

- Measure and discard the first 10 m (33 ft) of twine from each roll. Accurate measurement requires applying tension to the ends of the twine before measuring in order to straighten the product.
- Take two 30 m (100 ft) lengths of twine from inside each roll.
- Weigh and record the weight of each piece separately and record the values. Compare the weight values to determine the variability of the samples. If the individual weights of the eight twine samples vary by more than one division on the scale, use one of the following steps: If the lot is short, determine the actual length of the lightest-weight roll found in the lightest-weight package of the lot to confirm that the weight shortages reflect the shortages in the length of the rolls; or, determine the average weight-per-unit of measure by taking ten 30 m (100 ft) lengths from inside the lightest weight package. Use this value to recalculate its length and determine lot compliance.
- 3. Weigh all of the sample lengths together and record the total value. Determine the total length of the samples (240 m or 800 ft, unless more than eight sample-lengths were taken) and record the value. Compute the average weight-per-unit-of-length by dividing the total weight by the total length of the pieces.
- 4. Determine the MAV for a package of twine (refer to Table 2-8., Maximum Allowable Variations for Packages Labeled by Length, Width, or Area).
 - Record the total declared package length.

- Multiply the MAV from Table 2-8. times the total package length to obtain the MAV for length and record this value.
- Multiply the weight per unit of length (from step 3) times the MAV for the total declared package length to obtain the MAV by weight and record this value.
- Convert the MAV to dimensionless units and record.
- 4. Calculate the nominal gross weight and record.

Follow the Basic Test procedure in Section 2.3 to determine individual package errors. Determine errors using the following formula:

- Package error (weight) = (package gross weight) (nominal gross weight).
- To convert the Package error in weight back to length, divide the weight by the average weight-per-unit-of-length.

Evaluation of Results

Follow the procedures in Chapter 2, Section 2.3., Evaluating Results to determine lot compliance.

4.10 Procedure for Checking the Area Measurement of Chamois

Chamois is natural leather made from skins of sheep and lambs that have been oil-tanned. Chamois are irregularly shaped, which makes area measurement difficult. Because of these characteristics, an accurate area determination can only be made using an internationally recognized method of conditioning (rehydrating) and measurement. Chamois is produced in a wet manufacturing process, so it has high moisture content at time of measurement. Chamois is hydroscopic; therefore, its dimensions and total area change as it loses or absorbs moisture. It is also subject to wrinkling. Because of the variation of the thickness and density, and therefore the weight per unit area of chamois, an estimated gross weight procedure cannot be used to verify the labeled area declaration.

Standard Test Conditions: As with all hydroscopic products, reasonable variations in measure must be allowed if caused by ordinary and customary exposure to atmospheric conditions that normally occur in good distribution practice. Both Federal and international standards specify procedures to restore the moisture content of chamois so that tests to verify dimensions and area can be conducted.

Federal Test Method Standard 311, "Leather, Methods of Sampling and Testing," (January 15, 1969) defines the standard atmospheric condition for chamois as 50 ± 4 percent relative humidity and 23 ± 2 °C (73.4 ± 3.6 °F). The chamois is considered to be at equilibrium moisture when the difference in two successive weighings, made at 1 hr intervals, is no greater than 0.25 percent (e.g., the maximum change in weight on a 100 g sample in two successive weighings is less than 0.25 g (250 mg).

Test Procedures

The area of chamois is verified using a two-stage test procedure. The first stage is a field audit using the template test procedure. This test is used for field audits because it is simpler to perform and does not require the chamois to be conditioned. The field audit is used to identify chamois that are potentially under measure. It is not as accurate as the gravimetric procedure because some error results from reading the area from the template. The gravimetric procedure should be used for compliance testing because it includes conditioning (rehydrating) the chamois.

Template Test Method (for field audits)

Select a random sample of chamois and use the Template Procedure (below) to determine the area of each sample. Chamois is labeled in uniform sizes in terms of square decimeters and square feet, and are sized in increments of $\frac{1}{4}$ ft² (e.g., 1 ft², 1 1/4 ft², and 1 1/2 ft²). Separate the chamois into different sizes and define the inspection lot by specific sizes.

Equipment

Use a transparent, flexible template that is graduated in square centimeters or square inches and that has been verified for accuracy. The template must be large enough to completely cover the chamois under test.

Template Procedures

1. Template Procedure

Place the template over the chamois specimen on a smooth surface. Determine the area by counting the number of squares that cover the surface of the chamois. Estimate parts of the template that do not completely cover the chamois by adding the number of partially covered blocks. (See Figure 1.) Compute the total area and go to Evaluation to determine if further action is necessary.

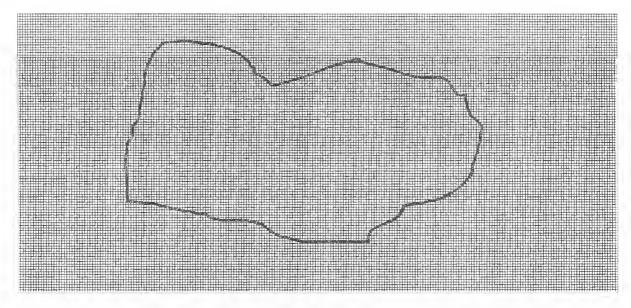


Figure 1.

First Stage - Decision Criteria

If the average minus error exceeds 3 percent of the labeled area, the chamois may not be labeled accurately. To confirm the finding, the sample must be taken to a laboratory for conditioning and testing using the gravimetric test procedure.

2. Gravimetric Procedure for Area Measurement

This test cannot be performed in the field because the samples must be conditioned with water prior to testing. This method is intended for use in checking full or cut skins, or pattern shapes. Open and condition all of the packages in the sample prior to determining their area on the recommended paper. Conditioning and verifying chamois can be accomplished without destroying the product. When successful tests are completed, the chamois may be repackaged for sale, so do not destroy the packaging material.

Equipment

- Scale with a capacity of 1 kg that is accurate to at least \pm 0.01 g and a load receiving element of adequate size to properly hold the chamois
- Atomizer or trigger type sprayer and sealable, airtight polyethylene bags
- Medium weight drawing paper (e.g., drawing paper, medium weight (100 lb), regular surface or comparable)
- Household iron with low temperature settings 30 °C to 40 °C (86 °F to 104 °F)
- Rule or tape that is graduated in centimeters or inches
- Instrument for cutting paper (razor blade, scissors, or cutting board)

Sample Conditioning

- 1. Remove each sample from its packages weigh and record each weight. Using an atomizer-type sprayer, spray water in the amount of 25 percent of the weight of each skin uniformly over its area. Place wetted chamois in an airtight polyethylene bag; seal the bag, and leave it in this condition at room temperature for 24 hours.
- 2. Open the bag, remove the chamois, and reweigh the chamois to confirm that it retained maximum moisture. This is done by confirming that the difference in the two consecutive weighings conducted an hour apart does not exceed 0.25 percent).
- 3. Place the chamois flat on a continuous piece of drawing paper. To remove wrinkles and make the chamois lie flat, use a normal domestic iron that is heated to a maximum of 30 °C to 40 °C (86 °F to 104 °F). Place the iron on the bottom of the skin, and iron the skin up the center to the top. Then, iron the skin from the center out to each side. Iron until the skin is fully extended and perfectly flat.

Measurement

- 1. Immediately after ironing, carefully draw around the outline of the skin on the paper. Remove the skin; carefully cut along the outline of the skin; weigh the cutout pattern, and record to the nearest 0.1 g as Sample Weight 1 (W1).
- Lay out the pattern and cut an accurately measured rectangle of a size not less than one-half the area of the pattern. Weigh the cutout rectangle and record the weight to the nearest 0.1 g as Sample Weight 2 (W2). Calculate the area of the rectangle cut from the patterns by multiplying length by width and record as Area (A) in centimeters or square inches.
 - For metric units calculate the area of the original skin being checked as follows:

 $W1/W2 \times A = Skin Area in cm^2/100 = Area in dm^2$

> For inch-pound units - calculate the area of the original skin being checked as follows:

 $W1/W2 x A = Skin Area in in^2/144 = Area ft^2$

Evaluation of Results


Compute the average error for the sample and follow the procedures in Chapter 2, Section 2.3., Evaluating Results to determine lot conformance.

The MAV for area declarations on chamois is three (3) percent of the labeled area as specified in Table 2-8.

NIST Handbook 133 Fourth Edition (2003) Index

Aerosol Containers 14
Assistance in Testing Operations
Average Requirement
Baler Twine
Basic Inspection Procedure and Record Keeping
Basic Test Procedure7
Borax 10, 20
Boxed Firewood52
Bundles and Bags of Firewood 53
Calculations 18, 62
Caulking Compounds
Chamois
Coffee
Count2, 13, 33, 53, 55, 56, 57, 58, 59, 64
Crosshatched Firewood
Decreasing-Load Test
Defoaming Agent
Determining the Net Contents of Compressed
Gas in Cylinders
Drained Weight
Drained Weight for Glazed or Frozen Foods 22
Evaluating Results 16, 22, 24, 29, 30, 31, 32,
38, 41, 43, 47, 48, 51, 52, 53, 54, 58, 60, 61,
63, 64, 65, 67, 70
Firewood 12, 51, 52, 53, 54
Flour
Fresh Oysters
Frozen Foods
Glossary
Good Measurement Practices
Goods Labeled by Capacity
Gravimetric Test Procedure for Checking the Net
Contents of Packaged Goods
Gravimetric Test Procedure for Liquids
Health and Safety
Ice Cream Novelties
Increasing-Load Test
Individual Package Requirement
Initial Tare Sample
Inspection Lot
Linear Measure, Area, Thickness, and
Combinations Of Quantities55
Maximum Allowable Variation 3, 7, 10, 12, 16,
18
Mayonnaise and Salad Dressing
Measurement Standards and Test Equipment 5
Milk
Moisture Allowances
Moisture Loss or Gain
Mulch and Soils Labeled by Volume
Nominal Gross Weight 11, 12, 14, 15, 16, 21,
28, 29, 38, 46, 57, 58, 65, 67
40, 47, 10, 40, 17, 10, 01, 07

Nominal Gross Weight15
Other Volumetric Test Procedures
Package Errors for the Tare Sample Packages. 16
Package Requirements
Packages Labeled By Count
Packages Labeled by Count of More Than 50
Items
Packages Labeled by Linear or Square (Area)
Measure64
Packages Labeled by Volume
Packages Labeled with 50 Items or Less
Paint
Paper Plates and Sanitary Paper Products 59
Peat Moss
Point-of-Pack1
Point-of-Sale 1
Polyethylene Sheeting
Pressed and Blown Glass Tumblers and
Stemware
Random Number Tables
Random Number Tables
Reasonable Variation
Reference Temperature
Regulatory Agencies Responsible for Package
Regulations and Applicable Requirements 5
Retail1
Return to Zero10
Sampling Plans
Scope 1, 25, 55
Shift Test
Special Test Requirements for Packages Labeled
by Linear or Square Measure (Area)60
Tare Procedures
Test Procedure for Cylinders Labeled by
Volume
Test Procedure for Cylinders Labeled by
Weight
Testing Viscous Materials - Such as Caulking
Compounds
The Determination of Drained Weight
Unit of Measure
Unused Dry Tare
Used Dry Tare
Vacuum-Packed
Volumetric Headspace Test Procedure
Volumetric Test Procedure for Liquids
Volumetric Test Procedure for Packaged
Firewood with a Labeled Volume51
Volumetric Test Procedure for Paint, Varnish,
and Lacquers - Non-Aerosol
Wet Tare 13
Wholesale1



Appendix A. Tables

Table 1-1. Age	ncies Responsible for Packag			
Commodity	Responsible Agency	NIST Handbook 133 Sampling Plans	Table of Maximum Allowable Variations	
Meat and Poultry	U.S. Department of Agriculture/ Food Safety and Inspection Service and State and local weights and measures.	 Use Table 2-1. Sampling Plans for Category A to test packages at other than point of pack. Use Table 2-2. Sampling Plans for Category B to test packages in Federally inspected meat and poultry plants. 	Table 2-9. U.S. Department of Agriculture, Meat and Poultry, Groups and Lower Limits for Individual Packages.	
Foods, drugs, and cosmetics subject to the Food, Drug, and Cosmetic Act including those packaged at the retail store level that have been in interstate commerce (e.g., seafood) or those made with ingredients that have been in interstate commerce.	U.S. Food and Drug Administration and State and local weights and measures. <u>http://www.fda.gov</u>	Use Table 2-1. Sampling Plans for Category A to test packages at all locations	 Table 2-5. MAVs for Packages Labeled by Weight Table 2-6. MAVs for Packages Labeled by Liquid or Dry Volume. Table 2-7. MAVs for Packages Labeled by Count 	
Food products <u>not</u> subject to the Federal Food, Drug, and Cosmetic Act, including meat and poultry products packaged at the	State and local weights and measures.		Use Table 2-1. Sampling Plans for Category A to test packages at all logations	Table 2-8. MAVs for Packages Labeled by Length (Width) or Area. Table 2-10. Exceptions to the
retail store level. Non-food Consumer Products	Federal Trade Commission			MAVs for Textiles, Polyethylene Sheeting and Film, Mulch and Soil Labeled by Volume, Packaged Firewood, and Packages Labeled by Count with Less
Non-food Consumer and Non-consumer Products	State and local weights and measures.		than 50 Items.	
Alcohol and Tobacco Products	U.S. Bureau of Alcohol, Tobacco, and Firearms and State and local weights and measures.			
Pesticides	http://www.atf.treas.gov U.S. Environmental Protection Agency and State and local weights and measures. http://www.epa.gov			

1	2	3	4	5	6		
In an address I ad	Comple		Number of Minus		mple Size**		
Inspection Lot Size	Sample Size	Sample Correction Factor	Package Errors Allowed to Exceed the MAV*	Glass and Aerosol Packages	All Other Packages		
1	1	Apply MAV					
2	2	8.984					
3	3	2.484					
4	4	1.591					
5	5	1.241					
6	6	1.050	1	1			
7	7	0.925	0.1				
8	8	0.836	0*	2	2		
9	9	0.769					
10	10	0.715					
11	11	0.672					
12 to 250	12	0.635					
251 to 3,200	24	0.422		2	1		
More than 3,200	48	0.291	1*	3			

package may exceed the MAV for every 12 packages in the sample.

**1f sample size is 11 or less, the initial tare sample size and the total tare sample size is 2 samples. (Amended 2001)

	Table 2-2. Sam	pling Plans for Category B	
Fo	r Use In USDA-Insp	ected Meat and Poultry Plan	nts Only
1	2	3	4
Inspection Lot Size	Sample Size	Initial Tare Sample Size	Number of Packages Allowed to Exceed the MAVs in Table 2-9
250 or Less	10	2	0
251 or More	30	5	

Table 2-3. Category A – Total Number of Packages to be Opened for Tare Determination Numbers Include those Packages Opened for Initial Tare Sample

Ratio of R_c/R_t	Total Number of Packages in Tare Sample					
Sample Size	12 24				48	
Initial Tare Sample Size	2	2	3	2	3	
If range of tare equals "zero," use Initial Tare Sample Size. If the ratio is "zero" based on a "zero" range of net weight open all of the	2	2	3	2	3	
packages in the sample. If the ratio is greater than 0 but less than or equal to 0.2	12	24	24	48	48	
0.21 to 0.60	12	24	24	48	48	
0.61 to 0.70	12	24	24	47	47	
0.71 to 0.80	12	23	23	47	47	
0.81 to 1.00	12	23	23	46	46	
1.01 to 1.10	11	23	23	46	46	
1.11 to 1.20	11	23	23	45	45	
1.21 to 1.30	11	22	22	45	45	
1.31 to 1.50	11	22	22	44	44	
1.51 to 1.60	11	22	22	43	43	
1.61 to 1.70	11	21	21	42	42	
1.71 to 1.80	10	21	21	42	42	
1.81 to 1.90	10	21	21	41	41	
1.91 to 2.00	10	20	20	41	41	
2.01 to 2.10	10	20	20	40	40	
2.11 to 2.20	10	20	20	39	39	
2.21 to 2.30	10	19	19	39	39	
2.31 to 2.40	9	19	19	38	38	
2.41 to 2.50	9	19	19	37	37	
2.51 to 2.60	9	18	18	37	37	
2.61 to 2.70	9	18	18	36	36	
2.71 to 2.80	9	18	18	35	35	
2.81 to 2.90	9	17	17	34	34	
2.91 to 3.00	8	17	17	34	34	
3.01 to 3.10	8	17	17	33	33	
3.11 to 3.30	8	16	16	32	32	
3.31 to 3.40	8	16	16	31	31	
3.41 to 3.50	8	15	15	30	30	
3.51 to 3.60	7	15	15	30	30	
3.61 to 3.70	7	15	15	29	29	
3.71 to 3.90	7	14	14	28	28	
3.91 to 4.00	7	14	14	27	27	
4.01 to 4.10	7	13	13	27	27	
4.11 to 4.20	7	13	13	26	26	
4.21 to 4.30	6	13	13	25	25	
4.31 to 4.40	6	12	12	25	25	
4.41 to 4.60	6	12	12	24	24	
4.61 to 4.70	6	12	12	23	23	
4.71 to 4.80	6	11	11	23	23	
4.81 to 4.90	6	11	11	22	22	
4.91 to 5.00	5	11	11	22	22	

Go to Next Page for Additional Values.

Table 2-3 (Continued). Category A – Total Number of Packages to be Opened for Tare Determination Numbers Include those Packages Opened for Initial Tare Sample

Ratio of R_c/R_t	Total Number of Packages in Tare Sample				
Sample Size	12 24			48	
Initial Tare Sample Size	2	2	3	2	3
5.01 to 5.10	5	11	11	21	21
5.11 to 5.20	5	10	10	21	21
5.21 to 5.40	5	10	10	20	20
5.41 to 5.60	5	10	10	19	19
5.61 to 5.70	5	9	9	19	19
5.71 to 5.80	5	9	9	18	18
5.81 to 5.90	4	9	9	18	18
5.91 to 6.10	4	9	9	17	17
6.11 to 6.20	4	8	8	17	17
6.21 to 6.50	4	8	8	16	16
6.51 to 6.70	4	8	8	15	15
6.71 to 6.80	4	7	7	15	15
6.81 to 7.00	4	7	7	14	14
7.01 to 7.20	3	7	7	14	14
7.21 to 7.40	3	7	7	13	13
7.41 to 7.60	3	6	6	13	13
7.61 to 8.00	3	6	6	12	12
8.01 to 8.20	3	6	6	11	11
8.21 to 8.50	3	5	5	11	11
8.51 to 8.80	3	5	5	10	10
8.81 to 9.00	2	5	5	10	10
9.01 to 9.30	2	5	5	9	9
9.31 to 9.70	2	4	4	9	9
9.71 to 10.40	2	4	4	8	8
10.41 to 10.90	2	4	4	7	7
10.91 to 11.30	2	3	3	7	7
11.31 to 12.50	2	3	3	6	6
12.51 to 13.20	2	3	3	5	5
13.21 to 13.90	2	2	3	5	5
13.91 to 16.00	2	2	3	4	4
16.01 to 19.10	2	2	3	3	3
19.11 to 19.20	2	2	3	2	3
Initial Tare Sample Size	2	2	3	2	3

Table 2-4. Category B – Total Number of Packages to be Opened for Tare Determination Numbers Include those Packages Opened for Initial Tare Sample

Ratio of R _c /R _t	Total Number of Packages in Tare Sample		
Sample Size	10	30	
Initial Tare Sample Size	2	5	
lf the ratio is zero, based on a "zero" range of tare, use Initial Tare Sample Size. If the ratio is "zero" based on a "zero" range of net weight, open all the packages in the sample.	2	5	
If the ratio is greater than 0 but less than or equal to 0.2	10	30	
0.21 to 0.40	10	29	
0.41 to 0.60	10	28	
0.61 to 0.80	9	26	
0.81 to 1.00	8	24	
1.01 to 1.20	8	23	
1.21 to 1.40	7	21	
1.41 to 1.60	7	19	
1.61 to 1.80	6	17	
1.81 to 2.00	5	15	
2.01 to 2.20	5	14	
2.21 to 2.40	5	13	
2.41 to 2.60	4	12	
2.61 to 2.80	4	11	
2.81 to 3.00	4	10	
3.01 to 3.20	3	9	
3.21 to 3.60	3	8	
3.61 to 3.80	3	7	
3.81 to 4.40	2	6	
If the ratio is greater than 4.40, use the Initial Tare Sample Size	2	5	

For Polyethylene Sheeting and Film, see Ta	
Labeled Quantity	Maximum Allowable Variations
Less than 36 g, 0.08 lb, or 1.28 oz	10 percent of labeled quantity
36 g or more to 54 g	4 g
0.08 lb or more to 0.12 lb	0.008 lb
1.28 oz or more to 1.92 oz	1/8 oz
More than 54 g to 82 g	5 g
More than 0.12 lb to 0.18 lb	0.012 lb
More than 1.92 oz to 2.88 oz	3/16 oz
More than 82 g to 118 g	7 g
More than 0.18 lb to 0.26 lb	0.016 lb
More than 2.88 oz to 4.16 oz	1/4 oz
More than 118 g to 154 g	9 g
More than 0.26 lb to 0.34 lb	0.020 lb
More than 4.16 oz to 5.44 oz	5/16 oz
More than 154 g to 209 g	11 g
More than 0.34 lb to 0.46 lb	0.024 lb
More than 5.44 oz to 7.36 oz	3/8 oz
More than 209 g to 263 g	13 g
More than 0.46 lb to 0.58 lb	0.028 lb
More than 7.36 oz to 9.28 oz	7/16 oz
More than 263 g to 318 g	15 g
More than 0.58 lb to 0.70 lb	0.032 lb
More than 9.28 oz to 11.20 oz	¹ / ₂ OZ
More than 318 g to 381 g	16 g
More than 0.70 lb to 0.84 lb	0.036 lb
More than 11.20 oz to 13.44 oz	9/16 oz
More than 381 g to 426 g	18 g
More than 0.84 lb to 0.94 lb	0.04 lb
More than 13.44 oz to 15.04 oz	5/8 oz
More than 426 g to 490 g	
• •	20 g 0.044 lb
More than 0.94 lb to 1.08 lb	11/16 oz
More than 15.04 oz to 17.28 oz	
More than 490 g to 572 g	22 g
More than 1.08 lb to 1.26 lb	0.048 lb
More than 572 g to 635 g	24 g
More than 1.26 lb to 1.40 lb	0.052 lb
More than 635 g to 698 g	25 g
More than 1.40 lb to 1.54 lb	0.056 lb
More than 698 g to 771 g	27 g
More than 1.54 lbto 1.7 lb	0.060 lb
More than 771 g to 852 g	29 g
More than 1.7 lb to 1.88 lb	0.064 lb
More than 852 g to 971 g	32 g
More than 1.88 lb to 2.14 lb	0.070 lb
More than 971 g to 1.125 kg	35 g
More than 2.14 lb to 2.48 lb	0.078 lb
More than 1.125 kg to 1.350 kg	40 g
More than 2.48 lb to 2.76 lb	0.086 lb
More than 1.350 kg to 1.60 kg	45 g
More than 2.76 lb to 3.20 lb	0.094 lb

Table 2-5. Maximum Allowable Variations (MAVs) for Packages Labeled by Weight

Table 2-5 (continued). Maximum Allowable Variations (MAVs) for Packages Labeled by WeightDo Not Use This Table for Meat and Poultry Products Subject to USDA-Regulations. Use Table 2.9 for USDARegulated Products

Labeled Quantity	A Products Maximum Allowable Variations (MAVs)
More than 1.60 kg to 1.80 kg	50 g
More than 3.20 lb to 3.90 lb	0.11 lb
More than 1.80 kg to 2.10 kg	55 g
More than 3.90 lb to 4.70 lb	0.12 lb
More than 2.10 kg to 2.64 kg	65 g
More than 4.70 lb to 5.80 lb	0.14 lb
More than 2.64 kg to 3.08 kg	70 g
More than 5.80 lb to 6.80 lb	0.15 lb
More than 3.08 kg to 3.80 kg	80 g
More than 6.80 lb to 7.90 lb	0.17 lb
More than 3.80 kg to 4.40 kg	85 g
More than 7.90 lb to 9.40 lb	0.19 lb
More than 4.40 kg to 5.20 kg	100 g
More than 9.40 lb to 11.70 lb	0.22 lb
More than 5.20 kg to 6.80 kg	115 g
More than 11.70 lb to 14.30 lb	0.25 lb
More than 6.80 kg to 8.20 kg	130 g
More than 14.30 lb to 17.70 lb	0.28 lb
More than 8.20 kg to 10.60 kg	145 g
More than 17.70 lb to 23.20 lb	0.31 lb
More than 10.60 kg to 14.30 kg	170 g
More than 23.20 lb to 31.60 lb	0.37 lb
More than 14.30 kg to 19.25 kg	200 g
More than 31.60 lb to 42.40 lb	0.44 lb
More than 19.25 kg to 24.70 kg	230 g
More than 42.40 lb to 54.40 lb	0.50 lb
More than 24.70 kg	
More than 54.40 lb	2 percent of labeled quantity

For Mulch see Table 2-10 Exceptions	s to the Maximum Allowable Variations
	DA- Regulated Products
Labeled Quantity	Maximum Allowable Variations (MAVs
3 mL or less	0.5 mL
0.5 fl oz or less	0.5 mL
0.18 in ³ or less	0.03 in^3
More than 3 mL to 8 mL	1 mL
More than 0.18 in ³ to 0.49 in ³	0.06 in ³
More than 8 mL to 15 mL	1.5 mL
More than 0.49 in ³ to 0.92 in ³	0.09 in ³
More than 15 mL to 22 mL	2 mL
More than 0.5 fl oz to 0.75 fl oz	0.06 fl oz
More than 0.92 in^3 to 1.35 in^3	0.11 in ³
More than 22 mL to 67 mL	3.5 mL
More than 0.75 fl oz to 2.25 fl oz	0.13 fl oz
More than 1.35 in ³ to 4.06 in ³	0.23 in ³
More than 67 mL to 126 mL	5.5 mL
More than 2.25 fl oz to 4.25 fl oz	0.19 fl oz
More than 4.06 in ³ to 7.67 in ³	0.34 in ³
More than 126 mL to 170 mL	7.5 mL
More than 4.25 fl oz to 5.75 fl oz	0.25 fl oz
More than 7.67 in ³ to 10.38 in ³	0.45 in ³
More than 170 mL to 222 mL	9 mL
More than 5.75 fl oz to 7.50 fl oz More than 10.38 in ³ to 13.54 in ³	0.31 fl oz 0.56 in ³
More than 10.38 in to 13.34 in More than 222 mL to 347 mL	0.56 m
More than 7.50 fl oz to 11.75 fl oz	0.38 fl oz
More than 13.54 in ³ to 21.21 in ³	0.68 in ³
More than 347 mL to 503 mL	15 mL
More than 11.75 fl oz to 17 fl oz More than 21 $21 \text{ in}^3 \text{ tr} 20.08 \text{ in}^3$	0.5 fl oz 0.9 in ³
More than 21.21 in ³ to 30.68 in ³	
More than 503 mL to 621 mL	18 mL
More than 17 fl oz to 21 fl oz More than 30.68 in ³ to 37.90 in ³	0.63 fl oz 1.13 in ³
More than 50.68 In 10 37.90 In More than 621 mL to 798 mL	22 mL
More than 21 fl oz to 27 fl oz	0.75 fl oz
More than 37.90 in^3 to 48.73 in^3	1.35 in^3
More than 798 mL to 917 mL	26 mL
More than 27 fl oz to 31 fl oz	0.88 fl oz
More than 48.73 in ³ to 55.95 in ³	1.58 in ³
More than 917 mL to 1.153 L	30 mL
More than 31 fl oz to 39 fl oz	1 fl oz
More than 55.95 in^3 to 70.38 in^3	1.8 in^3
More than 1.153 L to 1.627 L	37 mL
More than 39 fl oz to 55 fl oz	1.25 fl. Oz.
70.38 in^3 or more to 99.26 in ³	2.26 in^3
More than 1.627 L to 2.041 L	44 mL
More than 55 fl oz to 69 fl oz	1.5 fl oz
More than 99.26 in ³ to 124.5 in ³	2.71 in ³

FOI Mulch, see Table 2-10. Exceptions	to the Maximum Allowable Variations
Labeled Quantity	Maximum Allowable Variations (MAVs
More than 2.041 L to 2.514 L	52 mL
More than 69 fl oz to 85 fl oz	1.75 fl oz
More than 124.5 in^3 to 153.4 in^3	3.2 in^3
More than 2.514 L to 3.046 L	59 mL
More than 85 fl oz to 103 fl oz	2 fl oz
More than 153.4 in ^{3} to 185.9 in ^{3} .	3.6 in^3
More than 3.046 L to 4.732 L	74 mL
More than 103 fl oz to 160 fl oz	2.5 fl oz
More than 185.9 in ³ to 288.8 in ³	4.5 in^3
More than 4.732 L to 5.489 L	89 mL
More than 160 fl oz to 185.6 fl oz	3 fl oz
More than 288.8 in ³ to 335 in ³ .	5.4 in^3
More than 5.489 L to 7.098 L	104 mL
More than 185.6 fl oz to 240 fl oz	3.5 fl oz
More than 335 in^3 to 443.1 in^3	6.3 in ³
More than 7.098 L to 8.044 L	118 mL
More than 240 fl oz to 272 fl oz	4 fl oz
More than 443.1 in ^{3} to 490.9 in ^{3} .	7.2 in^3
More than 8.044 L to 10.173 L	133 mL
More than 272 fl oz to 344 fl oz	4.5 fl oz
More than 490.9 in ³ to 620.8 in ³	8.1 in ³
More than 10.173 L to 11.593 L	148 mL
More than 344 fl oz to 392 fl oz	5 fl oz
More than 620.8 in ³ to 707.4 in ³	9 in ³
More than 11.593 L to 16.561 L	177 mL
More than 392 fl oz to 560 fl oz	6 fl oz
More than 707.4 in ^{3} to 1 011 in ^{3}	10.8 in ³
More than 16.561 L to 18.927 L	207 mL
More than 560 fl oz to 640 fl oz (5 gal)	7 fl oz
More than $1 \ 011^3$ into $1 \ 155 \ in^3$	12.6 in ³
More than 18.927 L to 23.659 L	237 mL
More than 640 fl oz to 800 fl oz	8 fl oz
More than 1 155 in ³ to 1 444 in ³	14.4 in ³
More than 23.659 L to 26.734 L	266 mL
More than 800 fl oz to 904 fl oz	9 fl oz
More than 1 444 in ^{3} to 1 631 in ^{3}	16.2 in ³
More than 26.734 L	
More than 904 fl oz	1 percent of labeled quantity
More than 1 631 in ³	

Labeled Quantity	Maximum Allowable Variations (MAVs)
17 or less	0
18 to 50	1
51 to 83	2
84 to 116	3
117 to 150	4
151 to 200	5
201 to 240	6
241 to 290	7
291 to 345	8
346 to 400	9
401 to 465	10
466 to 540	11
541 to 625	12
626 to 725	13
726 to 815	14
816 to 900	15
901 to 990	16
991 to 1 075	17
1 076 to 1 165	18
1 166 to 1 250	19
1 251 to1 333	20
1 334 or more	1.5 % of labeled count rounded off to the near whole number

	Table 2-8. Maximum Allowable Variations for Pa	ckages Labeled by Length, (Width), or Area
	See Table 2.10 Exceptions to the MAVs for textiles, and polye	thylene sheeting and film
	Labeled Quantity	Maximum Allowable Variations (MAVs)
1		

Labeled Quantity	Maximum Allowable Variations (MAVs)
l m or less 1 yd or less	3 % of labeled quantity
More than 1 m to 40 m More than 1 yd to 48 yd	1.5 % of labeled quantity
More than 40 m to 85 m More than 48 yd to 96 yd	2 % of labeled quantity
More than 85 m to 140 m More than 96 yd to 154 yd	2.5 % of labeled quantity
More than 140 m to 300 m More than 154 yd to 330 yd	3 % of labeled quantity
More than 300 m to 1 000 m More than 330 yd to 1 100 yd	4 % of labeled quantity
More than 1 000 m or 1 100 yd	5 % of labeled quantity
Maximum Allowable Variation	ns for Packages Labeled by Area.
The MAV for packages labeled by	v area is 3 percent of labeled quantity
See Table 2.10. Exceptions to the MAVs for	r textiles, and polyethylene sheeting and film

Groups and L	ble 2-9. U.S. Department of Agricu ower Limits for Individual Package	
Homogenous Fluid when Filled (e.g., baby food or containers of lard)	ip and Labeled Quantity All Other Products	Lower Limit for Individual Weights (MAVs)
Less the	an 85 g or 3 oz	10 % of labeled quantity
85 g or more to 453 g 3 oz or more to 16 oz		7.1 g 0.016 lb (0.25 oz)
More than 453 g More than 16 oz	85 g or more to 198 g 3 oz to 7 oz	14.2 g 0.031 lb (0.5 oz)
	More than 198 g to 1.36 kg 7 oz to 48 oz	28.3 g 0.062 lb (1 oz)
	More than 1.36 kg to 4.53 kg More than 48 oz to 160 oz	42.5 g 0.094 lb (1.5 oz)
	More than 4.53 kg More than 160 oz	1 % of labeled quantity

	e 2-10. Exceptions to the Maximum Allowable Variations for neeting and Film, Mulch and Soil Labeled by Volume, Packaged Firewood, and Packages Labeled by Count with Less than 50 Items.
	Maximum Allowable Variations (MAVs)
	Thickness When the labeled thickness is 25 µm (1 mil or 0.001 in) or less, any individual thickness measurement of polyethylene film may be up to 35 percent below the labeled thickness.
Polyethylene Sheeting and Film	When the labeled thickness is greater than 25 μ m (1 mil or 0.001 in), individual thickness measurements of polyethylene sheeting may be up to 20 percent less than the labeled thickness.
	The average thickness of a single package of polyethylene sheeting may be up to four percent less than the labeled thickness.
	Weight
	The MAV for individual packages of polyethylene sheeting and film shall be 4 percent of the labeled quantity.
	The MAVs are:
	For packages labeled with dimensions of 60 cm (24 in) or more:
Textiles	Three percent of the labeled quantity for negative errors and 6 percent of the labeled quantity for plus errors.
	For packages labeled with dimensions less than 60 cm (24 in):
	Six percent of the labeled quantity for negative errors and 12 percent for plus errors.
	The MAVs are:
Mulch and Soil Labeled	For individual packages: 5 percent of the labeled volume.
by Volume	For samples: one package may exceed the MAV for every 12 packages in the sample (e.g., when the sample size is 12 or less, 1 package may exceed the MAV and when the sample size is 48 packages, 4 packages may exceed the MAV).
Packaged Firewood and Packages Labeled By Count with Less Than 50 Items	MAVs are not applied to these packages.

Table 2-		beled by Low Count (50 or Less) and Packages Given
	Tolerances (Glass	s and Stemware)
1	2	3
	For Packages Labeled by Low Count	For Packages Given Tolerances
	(50 or Less)	(Glasses and Stemware)
Sample	Number of Packages Allowed to Contain	Number of Package Errors that May Exceed the
Size	Less than the Labeled Count	Allowable
		Difference
1-11	1	0
12	1	0
24	2	1
48	3	2



Appendix B. Random Number Tables

Reproduced from <u>Million Random Digits</u>, used with permission of the Rand Corporation, Copyright, 1955, The Free Press. The publication is available for free on the Internet at <u>http://www.rand.org/publications/classics/randomdigits</u>.

All of the sampling plans presented in this handbook are based on the assumption that the packages constituting the sample are chosen at random from the inspection lot. Randomness in this instance means that every package in the lot has an equal chance of being selected as part of the sample. It does not matter what other packages have already been chosen, what the package net contents are, or where the package is located in the lot.

To obtain a random sample, two steps are necessary. First, it is necessary to identify each package in the lot of packages with a specific number whether on the shelf, in the warehouse or coming off the packaging line. Then, obtain random numbers, for example. These random numbers indicate exactly which packages in the lot shall be taken for the sample.

The Random Number Table

The random number tables in Appendix B are composed of the digits from 0 through 9, with approximately equal frequency of occurrence. This appendix consists of 8 pages. On each page digits are printed in blocks of five columns and blocks of five rows. The printing of the table in blocks is intended only to make it easier to locate specific columns and rows.

Random Starting Place

Starting Page. The Random Digit pages numbered B-2 through B-8. You can use the day of the week to determine the starting page or use the first page for the first lot you test in a location, the second page for the second lot and so on moving to the following page for each new lot.

Starting Column and Row. You may choose a starting page in the random number table and with eyes closed, drop a pencil anywhere on the page to indicate a starting place in the table.

For example, assume that testing takes place on the 3rd day of the week. Start with Table 3 of Appendix B. Assume you dropped your pencil on the page and it has indicated a starting place at column 22, row 45. That number is 1.

If 1-digit random numbers are needed, record them, going down the column to the bottom of the page and then to the top of the next column, and so on. Ignore duplicates and record zero (0) as ten (10). Following on from the last example, these numbers are 3, 2, 9, 8, etc. If two-digit random numbers are needed, rule off the pages, and further pages if necessary, in columns of two digits each. If there is a single column left on the page, ignore this column, and rule the next page in columns of two. Again, ignore duplicate numbers and record 00 as 100. For example, using the same starting place as in the last example (Table 3, column 22, row 45), the recorded two-digit recorded numbers would be 11, 34, 26, 95, etc.. When three-digit numbers are needed, rule the page in columns of Table 3, column 22, row 45, the recorded numbers would be 119, 346, 269, 959, etc..

TABLE 1 - RANDOM DIGITS

	11164 21215 10438 36792 73944 49563 64208 51486 99756 71325 65285 17264 95639 61555 78137 62490 24216 16975 59138 29478 96155 29621 12639 14544	36318 91791 44482 26236 04773 12872 48237 72875 26360 55217 97198 57327 99754 76404 98768 99215 63444 95428 39542 59652 95009 66583 75291	75061 76831 66558 33266 12032 14063 41701 38605 64516 13015 12138 38224 31199 86210 04689 84987 21283 33226 71168 50414 27429 62966	37674 58678 37649 66583 51414 93104 73117 29341 17971 72907 53010 29301 92558 11808 87130 28759 07044 55903 57609 31966 72918	26320 87054 08882 60881 82384 78483 33242 80749 48478 00431 94601 31381 68368 12841 79225 19177 92729 31605 91510 87912 08457	75100 31687 90870 97395 38370 72717 42314 80151 09610 45117 15838 38109 04985 45147 08153 14733 37284 43817 77904 87154	10431 93205 12462 20461 00249 68714 83049 33835 04638 33827 16805 34976 51092 97438 84967 24550 13211 22250 74244 12944	20418 43685 41810 36742 80709 18048 21933 52602 17141 92873 61004 65692 37780 60022 64539 28067 37485 03918 50940	19228 19732 01806 02852 72605 25005 92813 79147 09227 02953 43516 98566 40261 12645 79493 68894 10415 46999 31553	91792 08468 02977 50564 67497 04151 04763 08868 10606 85474 17020 29550 14479 62000 74917 38490 36457 98501 62562
	21215 10438 36792 73944 49563 64208 51486 99756 71325 65285 17264 95639 61555 78137 62490 24216 16975 59138 29478 96155 29621 12639	91791 44482 26236 04773 12872 48237 72875 26360 55217 97198 57327 99754 76404 98768 99215 63444 95428 39542 59652 95009 66583	76831 66558 33266 12032 14063 41701 38605 64516 13015 12138 38224 31199 86210 04689 84987 21283 33226 71168 50414 27429	58678 37649 66583 51414 93104 73117 29341 17971 72907 53010 29301 92558 11808 87130 28759 07044 55903 57609 31966 72918	87054 08882 60881 82384 78483 33242 80749 48478 00431 94601 31381 68368 12841 79225 19177 92729 31605 91510 87912	31687 90870 97395 38370 72717 42314 80151 09610 45117 15838 38109 04985 45147 08153 14733 37284 43817 77904	93205 12462 20461 00249 68714 83049 33835 04638 33827 16805 34976 51092 97438 84967 24550 13211 22250 74244	43685 41810 36742 80709 18048 21933 52602 17141 92873 61004 65692 37780 60022 64539 28067 37485 03918 50940	19732 01806 02852 72605 25005 92813 79147 09227 02953 43516 98566 40261 12645 79493 68894 10415 46999	08468 02977 50564 67497 04151 04763 08868 10606 85474 17020 29550 14479 62000 74917 38490 36457 98501
	10438 36792 73944 49563 64208 51486 99756 71325 65285 17264 95639 61555 78137 62490 24216 16975 59138 29478 96155 29621 12639	44482 26236 04773 12872 48237 72875 26360 55217 97198 57327 99754 76404 98768 99215 63444 95428 39542 59652 95009 66583	66558 33266 12032 14063 41701 38605 64516 13015 12138 38224 31199 86210 04689 84987 21283 33226 71168 50414 27429	37649 66583 51414 93104 73117 29341 17971 72907 53010 29301 92558 11808 87130 28759 07044 55903 57609 31966 72918	08882 60881 82384 78483 33242 80749 48478 00431 94601 31381 68368 12841 79225 19177 92729 31605 91510 87912	90870 97395 38370 72717 42314 80151 09610 45117 15838 38109 04985 45147 08153 14733 37284 43817 77904	12462 20461 00249 68714 83049 33835 04638 33827 16805 34976 51092 97438 84967 24550 13211 22250 74244	41810 36742 80709 18048 21933 52602 17141 92873 61004 65692 37780 60022 64539 28067 37485 03918 50940	01806 02852 72605 25005 92813 79147 09227 02953 43516 98566 40261 12645 79493 68894 10415 46999	02977 50564 67497 04151 04763 08868 10606 85474 17020 29550 14479 62000 74917 38490 36457 98501
	36792 73944 49563 64208 51486 99756 71325 65285 17264 95639 61555 78137 62490 24216 16975 59138 29478 96155 29621 12639	44482 26236 04773 12872 48237 72875 26360 55217 97198 57327 99754 76404 98768 99215 63444 95428 39542 59652 95009 66583	66558 33266 12032 14063 41701 38605 64516 13015 12138 38224 31199 86210 04689 84987 21283 33226 71168 50414 27429	66583 51414 93104 73117 29341 17971 72907 53010 29301 92558 11808 87130 28759 07044 55903 57609 31966 72918	08882 60881 82384 78483 33242 80749 48478 00431 94601 31381 68368 12841 79225 19177 92729 31605 91510 87912	90870 97395 38370 72717 42314 80151 09610 45117 15838 38109 04985 45147 08153 14733 37284 43817 77904	20461 00249 68714 83049 33835 04638 33827 16805 34976 51092 97438 84967 24550 13211 22250 74244	41810 36742 80709 18048 21933 52602 17141 92873 61004 65692 37780 60022 64539 28067 37485 03918 50940	01806 02852 72605 25005 92813 79147 09227 02953 43516 98566 40261 12645 79493 68894 10415 46999	02977 50564 67497 04151 04763 08868 10606 85474 17020 29550 14479 62000 74917 38490 36457 98501
	36792 73944 49563 64208 51486 99756 71325 65285 17264 95639 61555 78137 62490 24216 16975 59138 29478 96155 29621 12639	26236 04773 12872 48237 72875 26360 55217 97198 57327 99754 76404 98768 99215 63444 95428 39542 59652 95009 66583	33266 12032 14063 41701 38605 64516 13015 12138 38224 31199 86210 04689 84987 21283 33226 71168 50414 27429	66583 51414 93104 73117 29341 17971 72907 53010 29301 92558 11808 87130 28759 07044 55903 57609 31966 72918	60881 82384 78483 33242 80749 48478 00431 94601 31381 68368 12841 79225 19177 92729 31605 91510 87912	97395 38370 72717 42314 80151 09610 45117 15838 38109 04985 45147 08153 14733 37284 43817 77904	20461 00249 68714 83049 33835 04638 33827 16805 34976 51092 97438 84967 24550 13211 22250 74244	36742 80709 18048 21933 52602 17141 92873 61004 65692 37780 60022 64539 28067 37485 03918 50940	02852 72605 25005 92813 79147 09227 02953 43516 98566 40261 12645 79493 68894 10415 46999	50564 67497 04151 04763 08868 10606 85474 17020 29550 14479 62000 74917 38490 36457 98501
	73944 49563 64208 51486 99756 71325 65285 17264 95639 61555 78137 62490 24216 16975 59138 29478 96155 29621 12639	04773 12872 48237 72875 26360 55217 97198 57327 99754 76404 98768 99215 63444 95428 39542 59652 95009 66583	12032 14063 41701 38605 64516 13015 12138 38224 31199 86210 04689 84987 21283 33226 71168 50414 27429	51414 93104 73117 29341 17971 72907 53010 29301 92558 11808 87130 28759 07044 55903 57609 31966 72918	82384 78483 33242 80749 48478 00431 94601 31381 68368 12841 79225 19177 92729 31605 91510 87912	38370 72717 42314 80151 09610 45117 15838 38109 04985 45147 08153 14733 37284 43817 77904	00249 68714 83049 33835 04638 33827 16805 34976 51092 97438 84967 24550 13211 22250 74244	80709 18048 21933 52602 17141 92873 61004 65692 37780 60022 64539 28067 37485 03918 50940	72605 25005 92813 79147 09227 02953 43516 98566 40261 12645 79493 68894 10415 46999	67497 04151 04763 08868 10606 85474 17020 29550 14479 62000 74917 38490 36457 98501
	49563 64208 51486 99756 71325 65285 17264 95639 61555 78137 62490 24216 16975 59138 29478 96155 29621 12639	12872 48237 72875 26360 55217 97198 57327 99754 76404 98768 99215 63444 95428 39542 59652 95009 66583	14063 41701 38605 64516 13015 12138 38224 31199 86210 04689 84987 21283 33226 71168 50414 27429	93104 73117 29341 17971 72907 53010 29301 92558 11808 87130 28759 07044 55903 57609 31966 72918	78483 33242 80749 48478 00431 94601 31381 68368 12841 79225 19177 92729 31605 91510 87912	72717 42314 80151 09610 45117 15838 38109 04985 45147 08153 14733 37284 43817 77904	68714 83049 33835 04638 33827 16805 34976 51092 97438 84967 24550 13211 22250 74244	18048 21933 52602 17141 92873 61004 65692 37780 60022 64539 28067 37485 03918 50940	25005 92813 79147 09227 02953 43516 98566 40261 12645 79493 68894 10415 46999	04151 04763 08868 10606 85474 17020 29550 14479 62000 74917 38490 36457 98501
	49563 64208 51486 99756 71325 65285 17264 95639 61555 78137 62490 24216 16975 59138 29478 96155 29621 12639	12872 48237 72875 26360 55217 97198 57327 99754 76404 98768 99215 63444 95428 39542 59652 95009 66583	14063 41701 38605 64516 13015 12138 38224 31199 86210 04689 84987 21283 33226 71168 50414 27429	93104 73117 29341 17971 72907 53010 29301 92558 11808 87130 28759 07044 55903 57609 31966 72918	78483 33242 80749 48478 00431 94601 31381 68368 12841 79225 19177 92729 31605 91510 87912	72717 42314 80151 09610 45117 15838 38109 04985 45147 08153 14733 37284 43817 77904	68714 83049 33835 04638 33827 16805 34976 51092 97438 84967 24550 13211 22250 74244	18048 21933 52602 17141 92873 61004 65692 37780 60022 64539 28067 37485 03918 50940	25005 92813 79147 09227 02953 43516 98566 40261 12645 79493 68894 10415 46999	04151 04763 08868 10606 85474 17020 29550 14479 62000 74917 38490 36457 98501
	64208 51486 99756 71325 65285 17264 95639 61555 78137 62490 24216 16975 59138 29478 96155 29621 12639	48237 72875 26360 55217 97198 57327 99754 76404 98768 99215 63444 95428 39542 59652 95009 66583	41701 38605 64516 13015 12138 38224 31199 86210 04689 84987 21283 33226 71168 50414 27429	73117 29341 17971 72907 53010 29301 92558 11808 87130 28759 07044 55903 57609 31966 72918	33242 80749 48478 00431 94601 31381 68368 12841 79225 19177 92729 31605 91510 87912	42314 80151 09610 45117 15838 38109 04985 45147 08153 14733 37284 43817 77904	83049 33835 04638 33827 16805 34976 51092 97438 84967 24550 13211 22250 74244	21933 52602 17141 92873 61004 65692 37780 60022 64539 28067 37485 03918 50940	92813 79147 09227 02953 43516 98566 40261 12645 79493 68894 10415 46999	04763 08868 10606 85474 17020 29550 14479 62000 74917 38490 36457 98501
	64208 51486 99756 71325 65285 17264 95639 61555 78137 62490 24216 16975 59138 29478 96155 29621 12639	48237 72875 26360 55217 97198 57327 99754 76404 98768 99215 63444 95428 39542 59652 95009 66583	41701 38605 64516 13015 12138 38224 31199 86210 04689 84987 21283 33226 71168 50414 27429	73117 29341 17971 72907 53010 29301 92558 11808 87130 28759 07044 55903 57609 31966 72918	33242 80749 48478 00431 94601 31381 68368 12841 79225 19177 92729 31605 91510 87912	42314 80151 09610 45117 15838 38109 04985 45147 08153 14733 37284 43817 77904	83049 33835 04638 33827 16805 34976 51092 97438 84967 24550 13211 22250 74244	21933 52602 17141 92873 61004 65692 37780 60022 64539 28067 37485 03918 50940	92813 79147 09227 02953 43516 98566 40261 12645 79493 68894 10415 46999	04763 08868 10606 85474 17020 29550 14479 62000 74917 38490 36457 98501
	51486 99756 71325 65285 17264 95639 61555 78137 62490 24216 16975 59138 29478 96155 29621 12639	72875 26360 55217 97198 57327 99754 76404 98768 99215 63444 95428 39542 59652 95009 66583	38605 64516 13015 12138 38224 31199 86210 04689 84987 21283 33226 71168 50414 27429	29341 17971 72907 53010 29301 92558 11808 87130 28759 07044 55903 57609 31966 72918	80749 48478 00431 94601 31381 68368 12841 79225 19177 92729 31605 91510 87912	80151 09610 45117 15838 38109 04985 45147 08153 14733 37284 43817 77904	83049 33835 04638 33827 16805 34976 51092 97438 84967 24550 13211 22250 74244	52602 17141 92873 61004 65692 37780 60022 64539 28067 37485 03918 50940	79147 09227 02953 43516 98566 40261 12645 79493 68894 10415 46999	08868 10606 85474 17020 29550 14479 62000 74917 38490 36457 98501
	51486 99756 71325 65285 17264 95639 61555 78137 62490 24216 16975 59138 29478 96155 29621 12639	72875 26360 55217 97198 57327 99754 76404 98768 99215 63444 95428 39542 59652 95009 66583	38605 64516 13015 12138 38224 31199 86210 04689 84987 21283 33226 71168 50414 27429	29341 17971 72907 53010 29301 92558 11808 87130 28759 07044 55903 57609 31966 72918	80749 48478 00431 94601 31381 68368 12841 79225 19177 92729 31605 91510 87912	80151 09610 45117 15838 38109 04985 45147 08153 14733 37284 43817 77904	33835 04638 33827 16805 34976 51092 97438 84967 24550 13211 22250 74244	52602 17141 92873 61004 65692 37780 60022 64539 28067 37485 03918 50940	79147 09227 02953 43516 98566 40261 12645 79493 68894 10415 46999	08868 10606 85474 17020 29550 14479 62000 74917 38490 36457 98501
	99756 71325 65285 17264 95639 61555 78137 62490 24216 16975 59138 29478 96155 29621 12639	26360 55217 97198 57327 99754 76404 98768 99215 63444 95428 39542 59652 95009 66583	64516 13015 12138 38224 31199 86210 04689 84987 21283 33226 71168 50414 27429	17971 72907 53010 29301 92558 11808 87130 28759 07044 55903 57609 31966 72918	48478 00431 94601 31381 68368 12841 79225 19177 92729 31605 91510 87912	09610 45117 15838 38109 04985 45147 08153 14733 37284 43817 77904	04638 33827 16805 34976 51092 97438 84967 24550 13211 22250 74244	17141 92873 61004 65692 37780 60022 64539 28067 37485 03918 50940	09227 02953 43516 98566 40261 12645 79493 68894 10415 46999	10606 85474 17020 29550 14479 62000 74917 38490 36457 98501
	71325 65285 17264 95639 61555 78137 62490 24216 16975 59138 29478 96155 29621 12639	55217 97198 57327 99754 76404 98768 99215 63444 95428 39542 59652 95009 66583	13015 12138 38224 31199 86210 04689 84987 21283 33226 71168 50414 27429	72907 53010 29301 92558 11808 87130 28759 07044 55903 57609 31966 72918	00431 94601 31381 68368 12841 79225 19177 92729 31605 91510 87912	45117 15838 38109 04985 45147 08153 14733 37284 43817 77904	33827 16805 34976 51092 97438 84967 24550 13211 22250 74244	92873 61004 65692 37780 60022 64539 28067 37485 03918 50940	02953 43516 98566 40261 12645 79493 68894 10415 46999	85474 17020 29550 14479 62000 74917 38490 36457 98501
	71325 65285 17264 95639 61555 78137 62490 24216 16975 59138 29478 96155 29621 12639	55217 97198 57327 99754 76404 98768 99215 63444 95428 39542 59652 95009 66583	13015 12138 38224 31199 86210 04689 84987 21283 33226 71168 50414 27429	72907 53010 29301 92558 11808 87130 28759 07044 55903 57609 31966 72918	00431 94601 31381 68368 12841 79225 19177 92729 31605 91510 87912	45117 15838 38109 04985 45147 08153 14733 37284 43817 77904	33827 16805 34976 51092 97438 84967 24550 13211 22250 74244	92873 61004 65692 37780 60022 64539 28067 37485 03918 50940	02953 43516 98566 40261 12645 79493 68894 10415 46999	85474 17020 29550 14479 62000 74917 38490 36457 98501
	65285 17264 95639 61555 78137 62490 24216 16975 59138 29478 96155 29621 12639	97198 57327 99754 76404 98768 99215 63444 95428 39542 59652 95009 66583	12138 38224 31199 86210 04689 84987 21283 33226 71168 50414 27429	53010 29301 92558 11808 87130 28759 07044 55903 57609 31966 72918	94601 31381 68368 12841 79225 19177 92729 31605 91510 87912	15838 38109 04985 45147 08153 14733 37284 43817 77904	16805 34976 51092 97438 84967 24550 13211 22250 74244	61004 65692 37780 60022 64539 28067 37485 03918 50940	43516 98566 40261 12645 79493 68894 10415 46999	17020 29550 14479 62000 74917 38490 36457 98501
	17264 95639 61555 78137 62490 24216 16975 59138 29478 96155 29621 12639	57327 99754 76404 98768 99215 63444 95428 39542 59652 95009 66583	38224 31199 86210 04689 84987 21283 33226 71168 50414 27429	29301 92558 11808 87130 28759 07044 55903 57609 31966 72918	31381 68368 12841 79225 19177 92729 31605 91510 87912	38109 04985 45147 08153 14733 37284 43817 77904	34976 51092 97438 84967 24550 13211 22250 74244	65692 37780 60022 64539 28067 37485 03918 50940	98566 40261 12645 79493 68894 10415 46999	29550 14479 62000 74917 38490 36457 98501
	17264 95639 61555 78137 62490 24216 16975 59138 29478 96155 29621 12639	57327 99754 76404 98768 99215 63444 95428 39542 59652 95009 66583	38224 31199 86210 04689 84987 21283 33226 71168 50414 27429	29301 92558 11808 87130 28759 07044 55903 57609 31966 72918	31381 68368 12841 79225 19177 92729 31605 91510 87912	38109 04985 45147 08153 14733 37284 43817 77904	34976 51092 97438 84967 24550 13211 22250 74244	65692 37780 60022 64539 28067 37485 03918 50940	98566 40261 12645 79493 68894 10415 46999	29550 14479 62000 74917 38490 36457 98501
	17264 95639 61555 78137 62490 24216 16975 59138 29478 96155 29621 12639	57327 99754 76404 98768 99215 63444 95428 39542 59652 95009 66583	38224 31199 86210 04689 84987 21283 33226 71168 50414 27429	29301 92558 11808 87130 28759 07044 55903 57609 31966 72918	31381 68368 12841 79225 19177 92729 31605 91510 87912	38109 04985 45147 08153 14733 37284 43817 77904	34976 51092 97438 84967 24550 13211 22250 74244	65692 37780 60022 64539 28067 37485 03918 50940	98566 40261 12645 79493 68894 10415 46999	29550 14479 62000 74917 38490 36457 98501
	95639 61555 78137 62490 24216 16975 59138 29478 96155 29621 12639	99754 76404 98768 99215 63444 95428 39542 59652 95009 66583	31199 86210 04689 84987 21283 33226 71168 50414 27429	92558 11808 87130 28759 07044 55903 57609 31966 72918	68368 12841 79225 19177 92729 31605 91510 87912	04985 45147 08153 14733 37284 43817 77904	51092 97438 84967 24550 13211 22250 74244	37780 60022 64539 28067 37485 03918 50940	40261 12645 79493 68894 10415 46999	14479 62000 74917 38490 36457 98501
	61555 78137 62490 24216 16975 59138 29478 96155 29621 12639	76404 98768 99215 63444 95428 39542 59652 95009 66583	86210 04689 84987 21283 33226 71168 50414 27429	11808 87130 28759 07044 55903 57609 31966 72918	12841 79225 19177 92729 31605 91510 87912	45147 08153 14733 37284 43817 77904	97438 84967 24550 13211 22250 74244	60022 64539 28067 37485 03918 50940	12645 79493 68894 10415 46999	62000 74917 38490 36457 98501
	78137 62490 24216 16975 59138 29478 96155 29621 12639	98768 99215 63444 95428 39542 59652 95009 66583	04689 84987 21283 33226 71168 50414 27429	87130 28759 07044 55903 57609 31966 72918	79225 19177 92729 31605 91510 87912	08153 14733 37284 43817 77904	84967 24550 13211 22250 74244	64539 28067 37485 03918 50940	79493 68894 10415 46999	74917 38490 36457 98501
	78137 62490 24216 16975 59138 29478 96155 29621 12639	98768 99215 63444 95428 39542 59652 95009 66583	04689 84987 21283 33226 71168 50414 27429	87130 28759 07044 55903 57609 31966 72918	79225 19177 92729 31605 91510 87912	08153 14733 37284 43817 77904	84967 24550 13211 22250 74244	64539 28067 37485 03918 50940	79493 68894 10415 46999	74917 38490 36457 98501
	62490 24216 16975 59138 29478 96155 29621 12639	99215 63444 95428 39542 59652 95009 66583	84987 21283 33226 71168 50414 27429	28759 07044 55903 57609 31966 72918	19177 92729 31605 91510 87912	14733 37284 43817 77904	24550 13211 22250 74244	28067 37485 03918 50940	68894 10415 46999	38490 36457 98501
	24216 16975 59138 29478 96155 29621 12639	63444 95428 39542 59652 95009 66583	21283 33226 71168 50414 27429	07044 55903 57609 31966 72918	92729 31605 91510 87912	37284 43817 77904	13211 22250 74244	37485 03918 50940	10415 46999	36457 98501
	24216 16975 59138 29478 96155 29621 12639	63444 95428 39542 59652 95009 66583	21283 33226 71168 50414 27429	07044 55903 57609 31966 72918	92729 31605 91510 87912	37284 43817 77904	13211 22250 74244	37485 03918 50940	10415 46999	36457 98501
	24216 16975 59138 29478 96155 29621 12639	63444 95428 39542 59652 95009 66583	21283 33226 71168 50414 27429	07044 55903 57609 31966 72918	92729 31605 91510 87912	37284 43817 77904	13211 22250 74244	37485 03918 50940	10415 46999	36457 98501
	16975 59138 29478 96155 29621 12639	95428 39542 59652 95009 66583	33226 71168 50414 27429	55903 57609 31966 72918	31605 91510 87912	43817 77904	22250 74244	03918 50940	46999	98501
	59138 29478 96155 29621 12639	39542 59652 95009 66583	71168 50414 27429	57609 31966 72918	91510 87912	77904	74244	50940		
	59138 29478 96155 29621 12639	39542 59652 95009 66583	71168 50414 27429	57609 31966 72918	91510 87912	77904	74244	50940		
	29478 96155 29621 12639	59652 95009 66583	50414 27429	31966 72918	87912					
	96155 29621 12639	95009 66583	27429	72918		87154	12944			
	29621 12639	66583			09457			49862	96566	48825
	29621 12639	66583			09457					
	29621 12639	66583				70124	49407	2(0(1	60761	05226
	12639		62966	12460		78134	48407	26061	58754	05326
				12468	20245	14015	04014	35713	03980	03024
			71020	17265	41598	64074	64629	63293	53307	48766
	14544									
(14044	37134	54714	02401	63228	26831	19386	15457	17999	18306
(83403	88827	09834	11333	68431	31706	26652	04711	34593	22561
(
(
	67642	05204	30697	44806	96989	68403	85621	45556	35434	09532
	64041	99011	14610	40273	09482	62864	01573	82274	81446	32477
	17048	94523	97444	59904	16936	39384	97551	09620	63932	03091
	93039	89416	52795	10631	09728	68202	20963	02477	55494	39563
3	82244	34392	96607	17220	51984	10753	76272	50985	97593	34320
	022	0.00	,000,		2.701	10,02	/02/2	20002	,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,	2 .2 20
	96990	55244	70693	25255	40029	23289	48819	07159	60172	81697
	09119	74803	97303	88701	51380	73143	98251	78635	27556	20712
								53388		
	57666	41204	47589	78364	38266	94393	70713		79865	92069
4	46492	61594	26729	58272	81754	14648	77210	12923	53712	87771
	08433	19172	08320	20839	13715	10597	17234	39355	74816	03363
	00155	17172	00520	20057	10/10	10000	1,25,	5,555	, ,010	02202
	10011	75004	86054	41190	10061	19660	03500	68412	57812	57929
	92420	65431	16530	05547	10683	88102	30176	84750	10115	69220
	35542	55865	07304	47010	43233	57022	52161	82976	47981	46588
	86595	26247	18552	29491	33712	32285	64844	69395	41387	87195
		34985	58036	99137	47482	06204	24138	24272	16196	04393
	1/115	54705	58050	99137	4/402	00204	24130	27272	10190	0-393
	72115									
	/2115			88936	51343	70958	96768	74317	27176	29600
		58863	96023				04197			12537
	07428	58863	96023 28006	55012	26937	48174		36074	65315	
	07428 35379	27922	28906	55013		64629	57801	10437		
	07428			55013 26299	23593			10457	43965	15344
	07428 35379 10982	27922 22807	28906 10920	26299		49244				
	07428 35379 10982 90127	27922 22807 33341	28906 10920 77806	26299 12446	15444	49244	47277	11346	15884	28131
	07428 35379 10982	27922 22807	28906 10920	26299		49244 20481				
	07428 35379 10982 90127	27922 22807 33341	28906 10920 77806	26299 12446	15444		47277	11346	15884	28131
	07428 35379 10982 90127 63002	27922 22807 33341 12990	28906 10920 77806 23510	26299 12446 68774	15444 48983	20481	47277 59815	11346 67248	15884 17076	28131 78910
	07428 35379 10982 90127 63002 40779	27922 22807 33341 12990 86382	28906 10920 77806 23510 48454	26299 12446 68774 65269	15444 48983 91239	20481 45989	47277 59815 45389	11346 67248 54847	15884 17076 77919	28131 78910 41105
	07428 35379 10982 90127 63002 40779 43216	27922 22807 33341 12990 86382 12608	28906 10920 77806 23510 48454 18167	26299 12446 68774 65269 84631	15444 48983 91239 94058	20481 45989 82458	47277 59815 45389 15139	11346 67248 54847 76856	15884 17076 77919 86019	28131 78910 41105 47928
	07428 35379 10982 90127 63002 40779	27922 22807 33341 12990 86382	28906 10920 77806 23510 48454	26299 12446 68774 65269	15444 48983 91239	20481 45989	47277 59815 45389	11346 67248 54847	15884 17076 77919	28131 78910 41105
	07428 35379 10982 90127 63002 40779 43216 96167	27922 22807 33341 12990 86382 12608 64375	28906 10920 77806 23510 48454 18167 74108	26299 12446 68774 65269 84631 93643	15444 48983 91239 94058 09204	20481 45989 82458 98855	47277 59815 45389 15139 59051	11346 67248 54847 76856 56492	15884 17076 77919 86019 11933	28131 78910 41105 47928 64958
	07428 35379 10982 90127 63002 40779 43216 96167 70975	27922 22807 33341 12990 86382 12608 64375 62693	28906 10920 77806 23510 48454 18167 74108 35684	26299 12446 68774 65269 84631 93643 72607	15444 48983 91239 94058 09204 23026	20481 45989 82458 98855 37004	47277 59815 45389 15139 59051 32989	11346 67248 54847 76856 56492 24843	15884 17076 77919 86019 11933 01128	28131 78910 41105 47928 64958 74658
	07428 35379 10982 90127 63002 40779 43216 96167	27922 22807 33341 12990 86382 12608 64375	28906 10920 77806 23510 48454 18167 74108	26299 12446 68774 65269 84631 93643	15444 48983 91239 94058 09204	20481 45989 82458 98855	47277 59815 45389 15139 59051	11346 67248 54847 76856 56492	15884 17076 77919 86019 11933	28131 78910 41105 47928 64958

TABLE 2 – RANDOM DIGITS

	0 (0 3	1 (1 7 0	0.2.2.2.5	272(1	00703	2 10 2 0	20702	00054	7/0/5	22712
4	0603	16152	83235	37361	98783	24838	39793	80954	76865	32713
4	0941	53585	69958	60916	71018	90561	84505	53980	64735	85140
1.	3505	83472	55953	17957	11446	22618	34771	25777	27064	13526
3	9412	16013	11442	89320	11307	49396	39805	12249	57656	88686
- 5	7994	76748	54627	48511	78646	33287	35524	54522	08795	56273
		50100	1 = 1 < 0	00005			00051	07107	21.500	250.12
6	1834	59199	15469	82285	84164	91333	90954	87186	31598	25942
9	1402	77227	79516	21007	58602	81418	87838	18443	76162	51146
- 5	8299	83880	20125	10794	37780	61705	18276	99041	78135	99661
4	0684	99948	33880	76413	63839	71371	32392	51812	48248	96419
1	5978	64298	08074	62055	73864	01926	78374	15741	74452	49954
2	4556	39861	88267	76068	62445	64361	78685	24246	27027	48239
6	5990	57048	25067	77571	77974	37634	81564	98608	37224	49848
	6381	15069	25416	87875	90374	86203	29677	82543	37554	89179
5	2458	88880	78352	67913	09245	47773	51272	06976	99571	33365
2	3007	85607	92008	44897	24964	50559	79549	85658	96865	24186
3	3007	85007	92008	44097	24904	50559	19349	02020	90805	24160
3	8712	31512	08588	61490	72294	42862	87334	05866	66269	43158
- 5	8722	03678	19186	69602	34625	75958	56869	17907	81867	11535
2	6188	69497	51351	47799	20477	71786	52560	66827	79419	70886
1.	2893	54048	07255	86149	99090	70958	50775	31768	52903	27645
3	3186	81346	85095	37282	85536	72661	32180	40229	19209	74939
5	5100	01540	05075	51202	85550	72001	52100	40227	17207	14/5/
7	9893	29448	88392	54211	61708	83452	61227	81690	42265	20310
4	8449	15102	44126	19438	23382	14985	37538	30120	82443	11152
9	4205	04259	68983	50561	06902	10269	22216	70210	60736	58772
3	8648	09278	81313	77400	41126	52614	93613	27263	99381	49500
0	4292	46028	75666	26954	34979	68381	45154	09314	81009	05114
0					2	0020.		0/21	0.007	
1	7026	49737	85875	12139	59391	81830	30185	83095	78752	40899
				97737	10151			74842	85522	74092
	8070	76848	02531			18169	31709			
- 3	0159	95450	83778	46115	99178	97718	98440	15076	21199	20492
	2148	92231	31361	60650	54695	30035	22765	91386	70399	79270
7	3838	77067	24863	97576	01139	54219	02959	45696	98103	78867
- 7	3547	43759	95632	39555	74391	07579	69491	02647	17050	49869
0	7277	93217	79421	21769	83572	48019	17327	99638	87035	89300
6	5128	48334	07493	28098	52087	55519	83718	60904	48721	17522
3	8716	61380	60212	05099	21210	22052	01780	36813	19528	07727
3	1921	76458	73720	08657	74922	61335	41690	41967	50691	30508
F	9220	27464	61407	52329	26150	79991	64398	91273	26824	94827
	7238		61487		26150					
2	4219	41090	08531	61578	08236	41140	76335	91189	66312	44000
2	1309	49387	02330	02476	96074	33256	48554	95401	02642	29119
2	0750	97024	72619	66628	66509	31206	55293	24249	02266	39010
	8537	84395	26654	37851	80590	53446	34385	86893	87713	26842
4	.6557	04375	20054	57651	00370	55440	54565	00075	07715	20042
0	7929	41220	86431	94485	28778	44997	38802	56594	61363	04206
4	0568	33222	40486	91122	43294	94541	40988	02929	83190	74247
Δ	1483	92935	17061	78252	40498	43164	68646	33023	64333	64083
9	3040	66476	24990	41099	65135	37641	97613	87282	63693	55299
7	6869	39300	84978	07504	36835	72748	47644	48542	25076	68626
/	0007	57500	01770	0,207	20022	, _ , 10		10014		00020
- 0	2982	57991	50765	91930	21375	35604	29963	13738	03155	59914
	4479	76500	39170	06629	10031	48724	49822	44021	44335	26474
- 5	2291	75822	95966	90947	65031	75913	52654	63377	70664	60082
	3684	03600	52831	55381	97013	19993	41295	29118	18710	64851
5	8939	28366	86765	67465	45421	74228	01095	50987	83833	37276
-										

TABLE 3 – RANDOM DIGITS

37100	62492	63642	47638	13925	80113	88067	42575	44078	62703
53406	13855	38519	29500	62479	01036	87964	44498	07793	21599
		18856	29300 59043						
55172	81556			64315	38270	25677	01965	21310	28115
40353	84807	47767	46890	16053	32415	60259	99788	55924	22077
18899	09612	77541	57675	70153	41179	97535	82889	27214	03482
68141	25340	92551	11326	60939	79355	41544	88926	09111	86431
51559	91159	81310	63251	91799	41215	87412	35317	74271	11603
92214	33386	73459	79359	65867	39269	57527	69551	17495	91456
15089	50557	33166	87094	52425	21211	41876	42525	36625	63964
96461	00604	11120	22254	16763	19206	67790	88362	01880	37911
	00001			.0.02	., 200	01720	00201	01000	57711
28177	44111	15705	73835	69399	33602	13660	84342	97667	80847
66953	44737	81127	07493	07861	12666	85077	95972	96556	80108
19712	27263	84575	49820	19837	69985	34931	67935	71903	82560
68756	64757	19987	92222	11691	42502	00952	47981	97579	93408
75022	65332	98606	29451	57349	39219	08585	31502	96936	96356
11323	70069	90269	89266	46413	61615	66447	49751	15836	97343
55208	63470	18158	25283	19335	53893	87746	72531	16826	52605
11474	08786	05594	67045	13231	51186	71500	50498	59487	48677
81422	86842	60997	79669	43804	78690	58358	87639	24427	66799
21771	75963	23151	90274	08275	50677	99384	94022	84888	80139
	10700	25151	/02/1	00275	20077	//501	1022	01000	00157
42278	12160	32576	14278	34231	20724	27908	02657	19023	07190
17697	60114	63247	32096	32503	04923	17570	73243	76181	99343
05686	30243	34124	02936	71749	03031	72259	26351	77511	00850
52992	46650	89910	57395	39502	49738	87854	71066	84596	33115
94518	93984	81478	67750	89354	01080	25988	84359	31088	13655
00184	72186	78906	75480	71140	15199	69002	08374	22126	23555
87462	63165	79816	61630	50140	95319	79205	79202	67414	60805
88692	58716	12273	48176	86038	78474	76730	82931	51595	20747
20094	42962	41382	16768	13261	13510	04822	96354	72001	68642
60935	81504	50520	82153	27892	18029	79663	44146	72876	67843
51392	85936	43898	50596	81121	98122	69196	54271	12059	62539
54239	41918	79526	46274	24853	67165	12011	04923	20273	89405
57892	73394	07160	90262	48731	46648	70977	58262	78359	50436
02330	74736	53274	44468	53616	35794	54838	39114	68302	26855
				79908					
76115	29247	55342	51299	/9908	36613	68361	18864	13419	34950
(11)	01007	20095	20101	20027	24742	702/4	2025/	40007	10000
63312	81886	29085	20101	38037	34742	78364	39356	40006	49800
27632	21570	34274	56426	00330	07117	86673	46455	66866	76374
06335	62111	44014	52567	79480	45886	92585	87828	17376	35254
64142	87676	21358	88773	10604	62834	63971	03989	21421	76086
28436	25468	75235	75370	63543	76266	27745	31714	04219	00699
09522	83855	85973	15888	29554	17995	37443	11461	42909	32634
93714	15414	93712	02742	34395	21929	38928	31205	01838	60000
15681	53599	58185	73840	88758	10618	98725	23146	13521	47905
77712	23914	08907	43768	10304	61405	53986	61116	76164	54958
78453	54844	61509	01245	91199	07482	02534	08189	62978	55516
10733	27044	01507	01245	71177	07702	02004	00107	02710	55510
21860	60701	10367	29073	93464	06714	45268	60678	58506	23700
24860	68284	19367							
37284	06844	78887	57276	42695	03682	83240	09744	63025	60997
35488	52473	37634	32569	39590	27379	23520	29714	03743	08444
51595	59909	35223	44991	29830	56614	59661	83397	38421	17503
90660	35171	30021	91120	78793	16827	89320	08260	09181	53622

TABLE 4 – RANDOM DIGITS

54723	56527	53076	38235	42780	22716	36400	48028	78196	92985
84828	81248	25548	34075	43459	44628	21866	90350	82264	20478
65799	01914	81363	05173	23674	41774	25154	73003	87031	94368
87917	38549	48213	71708	92035	92527	55484	32274	87918	22455
26907	88173	71189	28377	13785	87469	35647	19695	33401	51998
40052	65422	00460	06252	42270	55400	60460	76021	83430	24560
68052	65422	88460	06352	42379	55499	60469	76931		
42587	68149	88147	99700	56124	53239	38726	63652	36644	50876
97176	55416	67642	05051	89931	19482	80720	48977	70004	03664
53295	87133	38264	94708	00703	35991	76404	82249	22942	49659
23011	94108	29196	65187	69974	01970	31667	54307	40032	30031
757(0	40540	24542	(2205	22002	10201	00051	00201	02208	00901
75768	49549	24543	63285	32803	18301	80851	89301	02398	99891
86668	70341	66460	75648	78678	27770	30245	44775	56120	44235
56727	72036	50347	33521	05068	47248	67832	30960	95465	32217
27936	78010	09617	04408	18954	61862	64547	52453	83213	47833
31994	69072	37354	93025	38934	90219	91148	62757	51703	84040
02005	0.5202	16103	50144	11966	C (D C (00546	21150	07221	(22)7
02985	95303	15182	50166	11755	56256	89546	31170	87221	63267
89965	10206	95830	95406	33845	87588	70237	84360	19629	72568
45587	29611	98579	42481	05359	36578	56047	68114	58583	16313
01071	08530	74305	77509	16270	20889	99753	88035	55643	18291
90209	68521	14293	39194	68803	32052	39413	26883	83119	69623
0.4000	10.180					0.0.0	00170	0.001.0	0.500
04982	68470	27875	15480	13206	44784	83601	03172	07817	01520
19740	24637	97377	32112	74283	69384	49768	64141	02024	85380
50197	79869	86497	68709	42073	28498	82750	43571	77075	07123
46954	67536	28968	81936	95999	04319	09932	66223	45491	69503
82549	62676	31123	49899	70512	95288	15517	85352	21987	08669
(1700	01(00	00010	0.47.40	0(102	(070)	01400		20040	21454
61798	81600	80018	84742	06103	60786	01408	75967	29948	21454
57666	29055	46518	01487	30136	14349	56159	47408	78311	25896
29805	64994	66872	62230	41385	58066	96600	99301	85976	84194
06711	34939	19599	76247	87879	97114	74314	39599	43544	36255
13934	46885	58315	88366	06138	37923	11192	90757	10831	01580
20540	00227	00043	25277	17(30	(54(0	07075	1(73)	22(02	22002
28549	98327	99943	25377	17628	65468	07875	16728	22602	33892
40871	61803	25767	55484	90997	86941	64027	01020	39518	34693
47704	38355	71708	80117	11361	88875	22315	38048	42891	87885
62611	19698	09304	29265	07636	08508	23773	56545	08015	28891
03047	83981	11916	09267	67316	87952	27045	62536	32180	60936
26460	50501	21721	18938	11025	18515	21747	96828	58258	07107
26460	50501	31731		11025		31747			97107
01764	25959	69293	89875	72710	49659	66632	25314	95260	22146
11762	54806	02651	52912	32770	64507	59090	01275	47624	16124
31736	31695	11523	64213	91190	10145	34231	36405	65860	48771
97155	48706	52239	21831	49043	18650	72246	43729	63368	53822
31181	49672	17237	04024	65324	32460	01566	67342	94986	36106
32115	82683	67182	89030	41370	50266	19505	57724	93358	49445
07068	75947	71743	69285	30395	81818	36125	52055	20289	16911
26622	74184	75166	96748	34729	61289	36908	73686	84641	45130
02805	52676	22519	47848	68210	23954	63085	87729	14176	45410
32301	58701	04193	30142	99779	21697	05059	26684	63516	75925
26339	56909	39331	42101	01031	01947	02257	47236	19913	90371
95274	09508	81012	42413	11278	19354	68661	04192	36878	84366
/////								00017	
	39632	09777	98800	48027	9690X	08177	15364	02317	89548
24275	39632	09777	98800	48027	96908	08177	15364	02317	89548
	39632 42128	09777 65401	98800 94199	48027 51058	96908 10759	08177 47244	15 <i>3</i> 64 99830	02317 64255	89548 40550

TABLE 5 – RANDOM DIGITS

47505	02008	20300	87188	42505	40294	04404	59286	95914	07191
13350	02000	64049	94377	91059	74531	56228			
							12307	87871	97064
33006	92690	69248	97443	38841	05051	33756	24736	43508	53566
55216	63886	06804	11861	30968	74515	40112	40432	18682	02845
21991	26228	14801	19192	45110	39937	81966	23258	99348	61219
71025	28212	10474	27522	16356	78456	46814	28975	01014	91458
65522	15242	84554	74560	26206	49520	65702	54193	25583	54745
27975	54923	90650	06170	99006	75651	77622	20491	53329	12452
07300	09704	36099	61577	34632	55176	87366	19968	33986	46445
54357	13689	19569	03814	47873	34086	28474	05131	46619	41499
00977	04481	42044	08649	83107	02423	46919	59586	58337	32280
13920	78761	12311	92808	71581	85251	11417	85252	61312	10266
08395	37043	37880	34172	80411	05181	58091	41269	22626	64799
46166	67206	01619	43769	91727	06149	17924	42628	57647	76936
87767	77607	03742	01613	83528	66251	75822	83058	97584	45401
29880	95288	21644	46587	11576	30568	56687	83239	76388	17857
36248	36666	14894	59273	04518	11307	67655	08566	51759	41795
		30474	25964						
12386	29656			10006	86382	46680	93060	52337	56034
52068	73801	52188	19491	76221	45685	95189	78577	36250	36082
41727	52171	56719	06054	34898	93990	89263	79180	39917	16122
49319	74580	57470	14600	22224	49028	93024	21414	90150	15686
88786	76963	12127	25014	91593	98208	27991	12539	14357	69512
84866	95202	43983	72655	89684	79005	85932	41627	87381	38832
11849	26482	20461	99450	21636	13337	55407	01897	75422	05205
54966	17594	57393	73267	87106	26849	68667	45791	87226	74412
10959	33349	80719	96751	25752	17133	32786	34368	77600	41809
22784	07783	35903	00091	73954	48706	83423	96286	90373	23372
86037	61791	33815	63968	70437	33124	50025	44367	98637	40870
80037	65089	85919	74391	36170	82988	52311	59180	37846	98028
72751	84359	15769	13615	70866	37007	74565	92781	37770	76451
18532	03874	66220	79050	66814	76341	42452	65365	07167	90134
22936	22058	49171	11027	07066	14606	11759	19942	21909	15031
66397	76510	81150	00704	94990	68204	07242	82922	65745	51503
89730	23272	65420	35091	16227	87024	56662	59110	11158	67508
81821	75323	96068	91724	94679	88062	13729	94152	59343	07352
01021	10020	70000	/1/21	1077	00002	15727	1152	57515	01002
94377	82554	53586	11432	08788	74053	98312	61732	91248	23673
68485	49991	53165	19865	30288	00467	98105	91483	89389	61991
07330	07184	86788	64577	47692	45031	36325	47029	27914	24905
10993	14930	35072	36429	26176	66205	07758	07982	33721	81319
20801	15178	64453	83357	21589	23153	60375	63305	37995	66275
79241	35347	66851	79247	57462	23893	16542	55775	06813	63512
43593	39555	97345	58494	52892	55080	19056	96192	61508	23165
29522	62713		17186		95018	76571	58615	35836	66260
		33701		15721					
88836	47290	67274	78362	84457	39181	17295	39626	82373	10883
65905	66253	91482	30689	81313	01343	37188	37756	04182	19376
44798	69371	07865	91756	42318	63601	53872	93610	44142	89830
35510	99139	32031	27925	03560	33806	85092	70436	94777	57963
50125	93223	64209	49714	73379	89975	38567	44316	60262	10777
25173	90038	63871	40418	23818	63250	05118	52700	92327	55449
								09179	28408
68459	90094	44995	93718	83654	79311	18107	12557	091/9	20408

TABLE 6 – RANDOM DIGITS

96195	07059	13266	31389	87612	88004	31843	83469	22793	14312
22408	94958	19095	58035	43831	32354	83946	57964	70404	32017
53896	23508	16227	56929	74329	12264	26047	66844	47383	42202
22565	02475	00258	79018	70090	37914	27755	00872	71553	56684
49438	20772	60846	69732	07612	70474	46483	21053	95475	53448
65620	34684	00210	04863	01373	19978	61682	69315	46766	83768
20246	26941	41298	04763	19769	25865	95937	03545	93561	73871
09433	09167	35166	32731	73299	41137	37328	28301	61629	05040
95552	73456	16578	88140	80059	50296	07656	01396	83099	09718
76053	05150	69125	69442	16509	03495	26427	58780	27576	31342
/0055	03150	09125	09442	10509	03495	20427	36780	21510	51542
34822	35843	78468	82380	52313	71070	71273	10768	86101	51474
07753	04073	58520	80022	28185	16432	86909	82347	10548	83929
04204	94434	62798	81902	29977	57258	87826	35003	46449	76636
96770	19440	29700	42093	64369	69176	29732	37389	34054	28680
65989	62843	10917	34458	81936	84775	39415	10622	36102	16753
	020.0		0.100	0.700	0.772	0,110		00102	10,00
DECAN	04704	((005	(1010	64216	01224	36003	57(05	((11))	74004
06644	94784	66995	61812	54215	01336	75887	57685	66114	76984
88950	46077	34651	12038	87914	20785	39705	73898	12318	78334
21482	95422	02002	33671	46764	50527	46276	77570	68457	62199
						89991	26003		08153
55137	61039	02006	69913	11291	87215			55271	_
98441	81529	59607	65225	49051	28328	85535	37003	87211	10204
57168	30458	23892	07825	53447	53511	09315	42552	43135	57892
71886	65334	38013	09379	83976	42441	14086	33197	82671	05037
40418	59504	52383	07232	14179	59693	37668	26689	93865	78925
28833	76661	47277	92935	63193	94862	60560	72484	29755	40894
37883	62124	62199	49542	55083	20575	44636	92282	52105	77664
44882	33592	66234	13821	86342	00135	87938	57995	34157	99858
44882	33592	66234	13821	86342	00135	87938	57995	34157	99858 76171
19082	13873	07184	21566	95320	28968	31911	06288	77271	76171
19082 45316	13873 29283	07184 89318	21566 55806	95320 89338	28968 79231	31911 91545	06288 55477	77271 19552	76171 03471
19082	13873	07184	21566	95320	28968	31911	06288	77271 19552	76171
19082 45316 22788	13873 29283 55433	07184 89318 31188	21566 55806 74882	95320 89338 44858	28968 79231 69655	31911 91545 08096	06288 55477 70982	77271 19552 61300	76171 03471 23792
19082 45316	13873 29283	07184 89318	21566 55806	95320 89338	28968 79231	31911 91545	06288 55477	77271 19552	76171 03471
19082 45316 22788 08293	13873 29283 55433 86193	07184 89318 31188 05026	21566 55806 74882 21255	95320 89338 44858 63082	28968 79231 69655 92946	31911 91545 08096 28748	06288 55477 70982 25423	77271 19552 61300 45282	76171 03471 23792 57821
19082 45316 22788	13873 29283 55433	07184 89318 31188	21566 55806 74882	95320 89338 44858	28968 79231 69655	31911 91545 08096	06288 55477 70982	77271 19552 61300	76171 03471 23792
19082 45316 22788 08293 29223	13873 29283 55433 86193 70541	07184 89318 31188 05026 67115	21566 55806 74882 21255 84584	95320 89338 44858 63082 10100	28968 79231 69655 92946 33854	31911 91545 08096 28748 26466	06288 55477 70982 25423 77796	77271 19552 61300 45282 70698	76171 03471 23792 57821 99393
19082 45316 22788 08293 29223 22681	13873 29283 55433 86193 70541 80110	07184 89318 31188 05026 67115 31595	21566 55806 74882 21255 84584 09246	95320 89338 44858 63082 10100 39147	28968 79231 69655 92946 33854 11158	31911 91545 08096 28748 26466 43298	06288 55477 70982 25423 77796 36220	77271 19552 61300 45282 70698 88841	76171 03471 23792 57821 99393 11271
19082 45316 22788 08293 29223 22681 74580	13873 29283 55433 86193 70541 80110 90354	07184 89318 31188 05026 67115 31595 43744	21566 55806 74882 21255 84584 09246 22178	95320 89338 44858 63082 10100 39147 38084	28968 79231 69655 92946 33854 11158 60027	31911 91545 08096 28748 26466 43298 24201	06288 55477 70982 25423 77796 36220 71686	77271 19552 61300 45282 70698 88841 59767	76171 03471 23792 57821 99393 11271 33274
19082 45316 22788 08293 29223 22681 74580 69093	13873 29283 55433 86193 70541 80110 90354 71364	07184 89318 31188 05026 67115 31595 43744 08107	21566 55806 74882 21255 84584 09246 22178 96952	95320 89338 44858 63082 10100 39147 38084 50005	28968 79231 69655 92946 33854 11158 60027 30297	31911 91545 08096 28748 26466 43298 24201 97417	06288 55477 70982 25423 77796 36220 71686 89575	77271 19552 61300 45282 70698 88841 59767 04676	76171 03471 23792 57821 99393 11271 33274 35616
19082 45316 22788 08293 29223 22681 74580	13873 29283 55433 86193 70541 80110 90354	07184 89318 31188 05026 67115 31595 43744	21566 55806 74882 21255 84584 09246 22178	95320 89338 44858 63082 10100 39147 38084	28968 79231 69655 92946 33854 11158 60027	31911 91545 08096 28748 26466 43298 24201	06288 55477 70982 25423 77796 36220 71686	77271 19552 61300 45282 70698 88841 59767	76171 03471 23792 57821 99393 11271 33274
19082 45316 22788 08293 29223 22681 74580 69093	13873 29283 55433 86193 70541 80110 90354 71364	07184 89318 31188 05026 67115 31595 43744 08107	21566 55806 74882 21255 84584 09246 22178 96952	95320 89338 44858 63082 10100 39147 38084 50005	28968 79231 69655 92946 33854 11158 60027 30297	31911 91545 08096 28748 26466 43298 24201 97417	06288 55477 70982 25423 77796 36220 71686 89575	77271 19552 61300 45282 70698 88841 59767 04676	76171 03471 23792 57821 99393 11271 33274 35616
19082 45316 22788 08293 29223 22681 74580 69093 40456	13873 29283 55433 86193 70541 80110 90354 71364 91234	07184 89318 31188 05026 67115 31595 43744 08107 58090	21566 55806 74882 21255 84584 09246 22178 96952 65342	95320 89338 44858 63082 10100 39147 38084 50005 95002	28968 79231 69655 92946 33854 11158 60027 30297 28447	31911 91545 08096 28748 26466 43298 24201 97417 21'700	06288 55477 70982 25423 77796 36220 71686 89575 43137	77271 19552 61300 45282 70698 88841 59767 04676 13746	76171 03471 23792 57821 99393 11271 33274 35616 85959
19082 45316 22788 08293 29223 22681 74580 69093 40456 72927	13873 29283 55433 86193 70541 80110 90354 71364 91234 67349	07184 89318 31188 05026 67115 31595 43744 08107 58090 83962	21566 55806 74882 21255 84584 09246 22178 96952 65342 58912	95320 89338 44858 63082 10100 39147 38084 50005 95002 59734	28968 79231 69655 92946 33854 11158 60027 30297 28447 76323	31911 91545 08096 28748 26466 43298 24201 97417 21'700 02913	06288 55477 70982 25423 77796 36220 71686 89575 43137 46306	77271 19552 61300 45282 70698 88841 59767 04676 13746 53956	76171 03471 23792 57821 99393 11271 33274 35616 85959 38936
19082 45316 22788 08293 29223 22681 74580 69093 40456 72927 61869	13873 29283 55433 86193 70541 80110 90354 71364 91234 67349 33093	07184 89318 31188 05026 67115 31595 43744 08107 58090 83962 81129	21566 55806 74882 21255 84584 09246 22178 96952 65342 58912 06481	95320 89338 44858 63082 10100 39147 38084 50005 95002 59734 89281	28968 79231 69655 92946 33854 11158 60027 30297 28447 76323 83629	31911 91545 08096 28748 26466 43298 24201 97417 21'700 02913 81960	06288 55477 70982 25423 77796 36220 71686 89575 43137 46306 63704	77271 19552 61300 45282 70698 88841 59767 04676 13746 53956 56329	76171 03471 23792 57821 99393 11271 33274 35616 85959 38936 10357
19082 45316 22788 08293 29223 22681 74580 69093 40456 72927	13873 29283 55433 86193 70541 80110 90354 71364 91234 67349	07184 89318 31188 05026 67115 31595 43744 08107 58090 83962	21566 55806 74882 21255 84584 09246 22178 96952 65342 58912	95320 89338 44858 63082 10100 39147 38084 50005 95002 59734	28968 79231 69655 92946 33854 11158 60027 30297 28447 76323	31911 91545 08096 28748 26466 43298 24201 97417 21'700 02913	06288 55477 70982 25423 77796 36220 71686 89575 43137 46306	77271 19552 61300 45282 70698 88841 59767 04676 13746 53956	76171 03471 23792 57821 99393 11271 33274 35616 85959 38936
19082 45316 22788 08293 29223 22681 74580 69093 40456 72927 61869 40048	13873 29283 55433 86193 70541 80110 90354 71364 91234 67349 33093 16520	07184 89318 31188 05026 67115 31595 43744 08107 58090 83962 81129 07638	21566 55806 74882 21255 84584 09246 22178 96952 65342 58912 06481 10797	95320 89338 44858 63082 10100 39147 38084 50005 95002 59734 89281 22270	28968 79231 69655 92946 33854 11158 60027 30297 28447 76323 83629 57350	31911 91545 08096 28748 26466 43298 24201 97417 21'700 02913 81960 72214	06288 55477 70982 25423 77796 36220 71686 89575 43137 46306 63704 36410	77271 19552 61300 45282 70698 88841 59767 04676 13746 53956 56329 95526	76171 03471 23792 57821 99393 11271 33274 35616 85959 38936 10357 87614
19082 45316 22788 08293 29223 22681 74580 69093 40456 72927 61869 40048 68773	13873 29283 55433 86193 70541 80110 90354 71364 91234 67349 33093 16520 97669	07184 89318 31188 05026 67115 31595 43744 08107 58090 83962 81129 07638 28656	21566 55806 74882 21255 84584 09246 22178 96952 65342 58912 06481 10797 89938	95320 89338 44858 63082 10100 39147 38084 50005 95002 59734 89281 22270 12917	28968 79231 69655 92946 33854 11158 60027 30297 28447 76323 83629 57350 25630	31911 91545 08096 28748 26466 43298 24201 97417 21'700 02913 81960 72214 08068	06288 55477 70982 25423 77796 36220 71686 89575 43137 46306 63704 36410 19445	77271 19552 61300 45282 70698 88841 59767 04676 13746 53956 56329 95526 76250	76171 03471 23792 57821 99393 11271 33274 35616 85959 38936 10357 87614 24727
19082 45316 22788 08293 29223 22681 74580 69093 40456 72927 61869 40048	13873 29283 55433 86193 70541 80110 90354 71364 91234 67349 33093 16520	07184 89318 31188 05026 67115 31595 43744 08107 58090 83962 81129 07638	21566 55806 74882 21255 84584 09246 22178 96952 65342 58912 06481 10797	95320 89338 44858 63082 10100 39147 38084 50005 95002 59734 89281 22270	28968 79231 69655 92946 33854 11158 60027 30297 28447 76323 83629 57350	31911 91545 08096 28748 26466 43298 24201 97417 21'700 02913 81960 72214	06288 55477 70982 25423 77796 36220 71686 89575 43137 46306 63704 36410	77271 19552 61300 45282 70698 88841 59767 04676 13746 53956 56329 95526	76171 03471 23792 57821 99393 11271 33274 35616 85959 38936 10357 87614
19082 45316 22788 08293 29223 22681 74580 69093 40456 72927 61869 40048 68773 09774	13873 29283 55433 86193 70541 80110 90354 71364 91234 67349 33093 16520 97669 30751	07184 89318 31188 05026 67115 31595 43744 08107 58090 83962 81129 07638 28656 49740	21566 55806 74882 21255 84584 09246 22178 96952 65342 58912 06481 10797 89938 11385	95320 89338 44858 63082 10100 39147 38084 50005 95002 59734 89281 22270 12917 91468	28968 79231 69655 92946 33854 11158 60027 30297 28447 76323 83629 57350 25630 28900	31911 91545 08096 28748 26466 43298 24201 97417 21'700 02913 81960 72214 08068 76804	06288 55477 70982 25423 77796 36220 71686 89575 43137 46306 63704 36410 19445 52460	77271 19552 61300 45282 70698 88841 59767 04676 13746 53956 56329 95526 76250 52320	76171 03471 23792 57821 99393 11271 33274 35616 85959 38936 10357 87614 24727 70493
19082 45316 22788 08293 29223 22681 74580 69093 40456 72927 61869 40048 68773	13873 29283 55433 86193 70541 80110 90354 71364 91234 67349 33093 16520 97669	07184 89318 31188 05026 67115 31595 43744 08107 58090 83962 81129 07638 28656	21566 55806 74882 21255 84584 09246 22178 96952 65342 58912 06481 10797 89938	95320 89338 44858 63082 10100 39147 38084 50005 95002 59734 89281 22270 12917	28968 79231 69655 92946 33854 11158 60027 30297 28447 76323 83629 57350 25630	31911 91545 08096 28748 26466 43298 24201 97417 21'700 02913 81960 72214 08068	06288 55477 70982 25423 77796 36220 71686 89575 43137 46306 63704 36410 19445	77271 19552 61300 45282 70698 88841 59767 04676 13746 53956 56329 95526 76250	76171 03471 23792 57821 99393 11271 33274 35616 85959 38936 10357 87614 24727
19082 45316 22788 08293 29223 22681 74580 69093 40456 72927 61869 40048 68773 09774 46139	13873 29283 55433 86193 70541 80110 90354 71364 91234 67349 33093 16520 97669 30751 36689	07184 89318 31188 05026 67115 31595 43744 08107 58090 83962 81129 07638 28656 49740 82587	21566 55806 74882 21255 84584 09246 22178 96952 65342 58912 06481 10797 89938 11385	95320 89338 44858 63082 10100 39147 38084 50005 95002 59734 89281 22270 12917 91468 35061	28968 79231 69655 92946 33854 11158 60027 30297 28447 76323 83629 57350 25630 28900 76128	31911 91545 08096 28748 26466 43298 24201 97417 21'700 02913 81960 72214 08068 76804 38568	06288 55477 70982 25423 77796 36220 71686 89575 43137 46306 63704 36410 19445 52460 62300	77271 19552 61300 45282 70698 88841 59767 04676 13746 53956 56329 95526 76250 52320 43439	76171 03471 23792 57821 99393 11271 33274 35616 85959 38936 10357 87614 24727 70493 53434
19082 45316 22788 08293 29223 22681 74580 69093 40456 72927 61869 40048 68773 09774 46139 26566	13873 29283 55433 86193 70541 80110 90354 71364 91234 67349 33093 16520 97669 30751 36689 95323	07184 89318 31188 05026 67115 31595 43744 08107 58090 83962 81129 07638 28656 49740 82587 32993	21566 55806 74882 21255 84584 09246 22178 96952 65342 58912 06481 10797 89938 11385 13586 89988	95320 89338 44858 63082 10100 39147 38084 50005 95002 59734 89281 22270 12917 91468 35061 12152	28968 79231 69655 92946 33854 11158 60027 30297 28447 76323 83629 57350 25630 28900 76128 01862	31911 91545 08096 28748 26466 43298 24201 97417 21'700 02913 81960 72214 08068 76804 38568 93113	06288 55477 70982 25423 77796 36220 71686 89575 43137 46306 63704 36410 19445 52460 62300 33875	77271 19552 61300 45282 70698 88841 59767 04676 13746 53956 56329 95526 76250 52320 43439 31730	76171 03471 23792 57821 99393 11271 33274 35616 85959 38936 10357 87614 24727 70493 53434 62941
19082 45316 22788 08293 29223 22681 74580 69093 40456 72927 61869 40048 68773 09774 46139 26566 06765	13873 29283 55433 86193 70541 80110 90354 71364 91234 67349 33093 16520 97669 30751 36689 95323 57141	07184 89318 31188 05026 67115 31595 43744 08107 58090 83962 81129 07638 28656 49740 82587 32993 48617	21566 55806 74882 21255 84584 09246 22178 96952 65342 58912 06481 10797 89938 11385 13586 89988 18282	95320 89338 44858 63082 10100 39147 38084 50005 95002 59734 89281 22270 12917 91468 35061 12152 13086	28968 79231 69655 92946 33854 11158 60027 30297 28447 76323 83629 57350 25630 28900 76128 01862 76064	31911 91545 08096 28748 26466 43298 24201 97417 21'700 02913 81960 72214 08068 76804 38568 93113 83334	06288 55477 70982 25423 77796 36220 71686 89575 43137 46306 63704 36410 19445 52460 62300 33875 70192	77271 19552 61300 45282 70698 88841 59767 04676 13746 53956 56329 95526 76250 52320 43439 31730 15972	76171 03471 23792 57821 99393 11271 33274 35616 85959 38936 10357 87614 24727 70493 53434 62941 80429
19082 45316 22788 08293 29223 22681 74580 69093 40456 72927 61869 40048 68773 09774 46139 26566	13873 29283 55433 86193 70541 80110 90354 71364 91234 67349 33093 16520 97669 30751 36689 95323	07184 89318 31188 05026 67115 31595 43744 08107 58090 83962 81129 07638 28656 49740 82587 32993	21566 55806 74882 21255 84584 09246 22178 96952 65342 58912 06481 10797 89938 11385 13586 89988	95320 89338 44858 63082 10100 39147 38084 50005 95002 59734 89281 22270 12917 91468 35061 12152	28968 79231 69655 92946 33854 11158 60027 30297 28447 76323 83629 57350 25630 28900 76128 01862	31911 91545 08096 28748 26466 43298 24201 97417 21'700 02913 81960 72214 08068 76804 38568 93113	06288 55477 70982 25423 77796 36220 71686 89575 43137 46306 63704 36410 19445 52460 62300 33875 70192 38010	77271 19552 61300 45282 70698 88841 59767 04676 13746 53956 56329 95526 76250 52320 43439 31730	76171 03471 23792 57821 99393 11271 33274 35616 85959 38936 10357 87614 24727 70493 53434 62941
19082 45316 22788 08293 29223 22681 74580 69093 40456 72927 61869 40048 68773 09774 46139 26566 06765 35384	13873 29283 55433 86193 70541 80110 90354 71364 91234 67349 33093 16520 97669 30751 36689 95323 57141 90380	07184 89318 31188 05026 67115 31595 43744 08107 58090 83962 81129 07638 28656 49740 82587 32993 48617 12317	21566 55806 74882 21255 84584 09246 22178 96952 65342 58912 06481 10797 89938 11385 13586 89988 18282 89702	95320 89338 44858 63082 10100 39147 38084 50005 95002 59734 89281 22270 12917 91468 35061 12152 13086	28968 79231 69655 92946 33854 11158 60027 30297 28447 76323 83629 57350 25630 28900 76128 01862 76064 68835	31911 91545 08096 28748 26466 43298 24201 97417 21'700 02913 81960 72214 08068 76804 38568 93113 83334	06288 55477 70982 25423 77796 36220 71686 89575 43137 46306 63704 36410 19445 52460 62300 33875 70192	77271 19552 61300 45282 70698 88841 59767 04676 13746 53956 56329 95526 76250 52320 43439 31730 15972	76171 03471 23792 57821 99393 11271 33274 35616 85959 38936 10357 87614 24727 70493 53434 62941 80429
19082 45316 22788 08293 29223 22681 74580 69093 40456 72927 61869 40048 68773 09774 46139 26566 06765	13873 29283 55433 86193 70541 80110 90354 71364 91234 67349 33093 16520 97669 30751 36689 95323 57141	07184 89318 31188 05026 67115 31595 43744 08107 58090 83962 81129 07638 28656 49740 82587 32993 48617	21566 55806 74882 21255 84584 09246 22178 96952 65342 58912 06481 10797 89938 11385 13586 89988 18282	95320 89338 44858 63082 10100 39147 38084 50005 95002 59734 89281 22270 12917 91468 35061 12152 13086 33091	28968 79231 69655 92946 33854 11158 60027 30297 28447 76323 83629 57350 25630 28900 76128 01862 76064	31911 91545 08096 28748 26466 43298 24201 97417 21'700 02913 81960 72214 08068 76804 38568 93113 83334 62960	06288 55477 70982 25423 77796 36220 71686 89575 43137 46306 63704 36410 19445 52460 62300 33875 70192 38010	77271 19552 61300 45282 70698 88841 59767 04676 13746 53956 56329 95526 76250 52320 43439 31730 15972 52710	76171 03471 23792 57821 99393 11271 33274 35616 85959 38936 10357 87614 24727 70493 53434 62941 80429 87604
19082 45316 22788 08293 29223 22681 74580 69093 40456 72927 61869 40048 68773 09774 46139 26566 06765 35384 49333	13873 29283 55433 86193 70541 80110 90354 71364 91234 67349 33093 16520 97669 30751 36689 95323 57141 90380 78482	07184 89318 31188 05026 67115 31595 43744 08107 58090 83962 81129 07638 28656 49740 82587 32993 48617 12317 36199	21566 55806 74882 21255 84584 09246 22178 96952 65342 58912 06481 10797 89938 11385 13586 89988 18282 89702 11355	95320 89338 44858 63082 10100 39147 38084 50005 95002 59734 89281 22270 12917 91468 35061 12152 13086 33091 86044	28968 79231 69655 92946 33854 11158 60027 30297 28447 76323 83629 57350 25630 28900 76128 01862 76064 68835 88760	31911 91545 08096 28748 26466 43298 24201 97417 21'700 02913 81960 72214 08068 76804 38568 93113 83334 62960 03724	06288 55477 70982 25423 77796 36220 71686 89575 43137 46306 63704 36410 19445 52460 62300 33875 70192 38010 22927	77271 19552 61300 45282 70698 88841 59767 04676 13746 53956 56329 95526 76250 52320 43439 31730 15972 52710 91716	76171 03471 23792 57821 99393 11271 33274 35616 85959 38936 10357 87614 24727 70493 53434 62941 80429 87604 92332
19082 45316 22788 08293 29223 22681 74580 69093 40456 72927 61869 40048 68773 09774 46139 26566 06765 35384 49333 45595	13873 29283 55433 86193 70541 80110 90354 71364 91234 67349 33093 16520 97669 30751 36689 95323 57141 90380 78482 14044	07184 89318 31188 05026 67115 31595 43744 08107 58090 83962 81129 07638 28656 49740 82587 32993 48617 12317 36199 56806	21566 55806 74882 21255 84584 09246 22178 96952 65342 58912 06481 10797 89938 11385 13586 89988 18282 89702 11355 99126	95320 89338 44858 63082 10100 39147 38084 50005 95002 59734 89281 22270 12917 91468 35061 12152 13086 33091 86044 85584	28968 79231 69655 92946 33854 11158 60027 30297 28447 76323 83629 57350 25630 28900 76128 01862 76064 68835 88760 87750	31911 91545 08096 28748 26466 43298 24201 97417 21'700 02913 81960 72214 08068 76804 38568 93113 83334 62960 03724 78149	06288 55477 70982 25423 77796 36220 71686 89575 43137 46306 63704 36410 19445 52460 62300 33875 70192 38010 22927 22723	77271 19552 61300 45282 70698 88841 59767 04676 13746 53956 56329 95526 76250 52320 43439 31730 15972 52710 91716 48245	76171 03471 23792 57821 99393 11271 33274 35616 85959 38936 10357 87614 24727 70493 53434 62941 80429 87604 92332 78126
19082 45316 22788 08293 29223 22681 74580 69093 40456 72927 61869 40048 68773 09774 46139 26566 06765 35384 49333	13873 29283 55433 86193 70541 80110 90354 71364 91234 67349 33093 16520 97669 30751 36689 95323 57141 90380 78482	07184 89318 31188 05026 67115 31595 43744 08107 58090 83962 81129 07638 28656 49740 82587 32993 48617 12317 36199	21566 55806 74882 21255 84584 09246 22178 96952 65342 58912 06481 10797 89938 11385 13586 89988 18282 89702 11355	95320 89338 44858 63082 10100 39147 38084 50005 95002 59734 89281 22270 12917 91468 35061 12152 13086 33091 86044	28968 79231 69655 92946 33854 11158 60027 30297 28447 76323 83629 57350 25630 28900 76128 01862 76064 68835 88760	31911 91545 08096 28748 26466 43298 24201 97417 21'700 02913 81960 72214 08068 76804 38568 93113 83334 62960 03724	06288 55477 70982 25423 77796 36220 71686 89575 43137 46306 63704 36410 19445 52460 62300 33875 70192 38010 22927	77271 19552 61300 45282 70698 88841 59767 04676 13746 53956 56329 95526 76250 52320 43439 31730 15972 52710 91716	76171 03471 23792 57821 99393 11271 33274 35616 85959 38936 10357 87614 24727 70493 53434 62941 80429 87604 92332
19082 45316 22788 08293 29223 22681 74580 69093 40456 72927 61869 40048 68773 09774 46139 26566 06765 35384 49333 45595 79819	13873 29283 55433 86193 70541 80110 90354 71364 91234 67349 33093 16520 97669 30751 36689 95323 57141 90380 78482 14044 15054	07184 89318 31188 05026 67115 31595 43744 08107 58090 83962 81129 07638 28656 49740 82587 32993 48617 12317 36199 56806 76174	21566 55806 74882 21255 84584 09246 22178 96952 65342 58912 06481 10797 89938 11385 13586 89988 18282 89702 11355 99126 12206	95320 89338 44858 63082 10100 39147 38084 50005 95002 59734 89281 22270 12917 91468 35061 12152 13086 33091 86044 85584 06886	28968 79231 69655 92946 33854 11158 60027 30297 28447 76323 83629 57350 25630 28900 76128 01862 76064 68835 88760 87750 06814	31911 91545 08096 28748 26466 43298 24201 97417 21'700 02913 81960 72214 08068 76804 38568 93113 83334 62960 03724 78149 43285	06288 55477 70982 25423 77796 36220 71686 89575 43137 46306 63704 36410 19445 52460 62300 33875 70192 38010 22927 22723	77271 19552 61300 45282 70698 88841 59767 04676 13746 53956 56329 95526 76250 52320 43439 31730 15972 52710 91716 48245	76171 03471 23792 57821 99393 11271 33274 35616 85959 38936 10357 87614 24727 70493 53434 62941 80429 87604 92332 78126
19082 45316 22788 08293 29223 22681 74580 69093 40456 72927 61869 40048 68773 09774 46139 26566 06765 35384 49333 45595 79819 11971	13873 29283 55433 86193 70541 80110 90354 71364 91234 67349 33093 16520 97669 30751 36689 95323 57141 90380 78482 14044 15054 62234	07184 89318 31188 05026 67115 31595 43744 08107 58090 83962 81129 07638 28656 49740 82587 32993 48617 12317 36199 56806 76174 74857	21566 55806 74882 21255 84584 09246 22178 96952 65342 58912 06481 10797 89938 11385 13586 89988 18282 89702 11355 99126 12206 46401	95320 89338 44858 63082 10100 39147 38084 50005 95002 59734 89281 22270 12917 91468 35061 12152 13086 33091 86044 85584 06886 20817	28968 79231 69655 92946 33854 11158 60027 30297 28447 76323 83629 57350 25630 28900 76128 01862 76064 68835 88760 87750 06814 57591	31911 91545 08096 28748 26466 43298 24201 97417 21'700 02913 81960 72214 08068 76804 38568 93113 83334 62960 03724 78149 43285 41189	06288 55477 70982 25423 77796 36220 71686 89575 43137 46306 63704 36410 19445 52460 62300 33875 70192 38010 22927 22723 20008 49604	77271 19552 61300 45282 70698 88841 59767 04676 13746 53956 56329 95526 76250 52320 43439 31730 15972 52710 91716 48245 75345 29604	76171 03471 23792 57821 99393 11271 33274 35616 85959 38936 10357 87614 24727 70493 53434 62941 80429 87604 92332 78126 19779 30660
19082 45316 22788 08293 29223 22681 74580 69093 40456 72927 61869 40048 68773 09774 46139 26566 06765 35384 49333 45595 79819 11971 11452	13873 29283 55433 86193 70541 80110 90354 71364 91234 67349 33093 16520 97669 30751 36689 95323 57141 90380 78482 14044 15054 62234 89318	07184 89318 31188 05026 67115 31595 43744 08107 58090 83962 81129 07638 28656 49740 82587 32993 48617 12317 36199 56806 76174 74857 53084	21566 55806 74882 21255 84584 09246 22178 96952 65342 58912 06481 10797 89938 11385 13586 89988 18282 89702 11355 99126 12206 46401 21993	95320 89338 44858 63082 10100 39147 38084 50005 95002 59734 89281 22270 12917 91468 35061 12152 13086 33091 86044 85584 06886 20817 62471	28968 79231 69655 92946 33854 11158 60027 30297 28447 76323 83629 57350 25630 28900 76128 01862 76064 68835 88760 87750 06814 57591 74101	31911 91545 08096 28748 26466 43298 24201 97417 21'700 02913 81960 72214 08068 76804 38568 93113 83334 62960 03724 78149 43285 41189 61217	06288 55477 70982 25423 77796 36220 71686 89575 43137 46306 63704 36410 19445 52460 62300 33875 70192 38010 22927 22723 20008 49604 76536	77271 19552 61300 45282 70698 88841 59767 04676 13746 53956 56329 95526 76250 52320 43439 31730 15972 52710 91716 48245 75345 29604 58393	76171 03471 23792 57821 99393 11271 33274 35616 85959 38936 10357 87614 24727 70493 53434 62941 80429 87604 92332 78126 19779 30660 63718
19082 45316 22788 08293 29223 22681 74580 69093 40456 72927 61869 40048 68773 09774 46139 26566 06765 35384 49333 45595 79819 11971	13873 29283 55433 86193 70541 80110 90354 71364 91234 67349 33093 16520 97669 30751 36689 95323 57141 90380 78482 14044 15054 62234	07184 89318 31188 05026 67115 31595 43744 08107 58090 83962 81129 07638 28656 49740 82587 32993 48617 12317 36199 56806 76174 74857	21566 55806 74882 21255 84584 09246 22178 96952 65342 58912 06481 10797 89938 11385 13586 89988 18282 89702 11355 99126 12206 46401	95320 89338 44858 63082 10100 39147 38084 50005 95002 59734 89281 22270 12917 91468 35061 12152 13086 33091 86044 85584 06886 20817	28968 79231 69655 92946 33854 11158 60027 30297 28447 76323 83629 57350 25630 28900 76128 01862 76064 68835 88760 87750 06814 57591	31911 91545 08096 28748 26466 43298 24201 97417 21'700 02913 81960 72214 08068 76804 38568 93113 83334 62960 03724 78149 43285 41189	06288 55477 70982 25423 77796 36220 71686 89575 43137 46306 63704 36410 19445 52460 62300 33875 70192 38010 22927 22723 20008 49604	77271 19552 61300 45282 70698 88841 59767 04676 13746 53956 56329 95526 76250 52320 43439 31730 15972 52710 91716 48245 75345 29604	76171 03471 23792 57821 99393 11271 33274 35616 85959 38936 10357 87614 24727 70493 53434 62941 80429 87604 92332 78126 19779 30660

TABLE 7 – RANDOM DIGITS

93369	13044	69686	78162	29132	51544	17925	56738	32683	83153
19360	55049	94951	76341	38159	31008	41476	05278	03909	02299
47798	89890	06893	65483	97658	74884	38611	27264	26956	83504
69223	32007	03513	61149	66270	73087	16795	76845	44645	44552
									-
34511	50721	84850	34159	38985	75384	22965	55366	81632	78872
54031	59329	58963	52220	76806	98715	67452	78741	58128	00077
66722	85515	04723	92411	03834	12109	85185	37350	93614	15351
71059	07496	38404	18126	37894	44991	45777	02070	38159	23930
45478	86066	31135	33243	01190	47277	55146	56130	70117	83203
97246	91121	89437	20393	76598	99458	76665	83793	37448	32664
									2200.
22002	26026	06417	34045	20042	(55(0)	20252	77102	10007	10505
22982	25936	96417	34845	28942	65569	38253	77182	12996	19505
48243	62993	47132	85248	79160	90981	71696	79609	33809	60839
93514	14915	67960	82203	22598	94802	75332	95585	69542	79924
69707		93069					-	-	
	98303		16216	01542	51771	16833	20922	94415	27617
87467	91794	70814	12743	17543	04057	71231	11309	32780	83270
81006	81498	59375	30502	44868	81279	23585	49678	70014	10523
15458	83481	50187	43375	56644	72076	59403	65469	74760	69509
33469	12510	23095	48016	22064	39774	07373	10555	33345	21787
67198	07176	65996	18317	83083	11921	06254	68437	59481	54778
	92261	85504							
58037	92201	85504	55690	63488	26451	43223	38009	50567	09191
84983	68312	25519	56158	22390	12823	92390	28947	36708	25393
35554	02935	72889	68772	79774	14336	50716	63003	86391	94074
04368	17632	50962	71908	13105	76285	31819	16884	11665	16594
81311	60479	69985	30952	93067	70056	55229	83226	22555	66447
03823	89887	55828	74452	21692	55847	15960	47521	27784	25728
000000									
00400	(5427	20707	5(2()	00200	25000		15((0	20210	40257
80422	65437	38797	56261	88300	35980	56656	45662	29219	49257
61307	49468	43344	43700	14074	19739	03275	99444	62545	23720
83873	82557	10002	80093	74645	33109	15281	38759	09342	69408
38110	16855	28922	93758	22885	36706	92542	60270	99599	17983
43892	91189	87226	56935	99836	85489	89693	49475	31941	78065
93683	09664	53927	49885	94979	88848	42642	93218	80305	49428
32748	02121	11972	96914	83264	89016	45140	20362	63242	86255
49211	92963	38625	65312	52156	36400	67050	64058	45489	24165
63365	64224	69475	57512	85097	05054	88673	96593	00902	53320
63576	26373	44610	43748	90399	06770	71609	90916	69002	57180
05570	20575	44010	45740	/05//	00770	/100/	70710	07002	57100
41078	47036	65524	68466	77613	20076	71969	47706	22506	81053
70846	89558	64173	15381	67322	70097	82363	90767	17879	32697
68800	64492	20162	32707	69510	82465	26821	79917	34615	35820
44977	89525	51269	63747	30997	97213	53016	65909	05723	50168
79354	63847	24395	53679	07667	67993	24634	78867	78516	00448
14954	22299	40156	52685	19093	06090	23800	06739	76836	19050
01711	98439	09446	33937	98956	85676	89493	05132	45886	49379
62328	55328	45738	93940	15772	81975	91017	21387	57949	13992
73004	62109	81907	71077	50322	66093	79921	61412	18347	21115
34218	89445	03609	52336	19005	15179	94958	99448	11612	76981
99159	01968	45886	86875	05196	64297	59339	39878	61548	56442
92858	29949	15817	93372	34732	61584	72007	58597	43802	51066
27396	97477	65554	71601	01540	26509	19487	39684	18676	41219
37103	45309	30129	43380	66638	10841	77292	40288	25826	61431
57347	97012	48428	20606	54138	75716	23741	50462	13221	47254
51541	21012	10720	20000	51150	10/10	201 TI	20104		1,207

Appendix C. Glossary

A

allowable difference. The amount by which the actual quantity in the package may differ from the declared quantity. Pressed and blown tumblers and stemware labeled by count and capacity are assigned an allowable difference in capacity. This is also called a tolerance.

audit testing. Preliminary tests designed to quickly identify potential noncompliance units.

average. The sum of a number of individual measurement values divided by the number of values. For example, the sum of the individual weights of 12 packages divided by 12 would be the average weight of those packages.

average error. The sum of the individual "package errors" (defined) (considering their arithmetic sign) divided by the number of packages comprising the sample.

average requirement. A requirement that the average net quantity of contents of packages in a "lot" equals the net quantity of contents printed on the label.

average tare. The sum of the weights of individual package containers (or wrappers, etc.) divided by the number of containers or wrappers weighed.

B

berry baskets and boxes. Disposable containers in capacities of 1 dry quart or less for berries and small fruits. See Section 4.46. in NIST Handbook 44.

С

Category A (Category B). A set of sampling plans provided in this handbook to use in checking packages that must (except when exempted) meet the "average requirement" (defined).

Chamois. A natural leather made from skins of sheep and lambs that have been oil-tanned.

combination quantity declarations. A package label that contains the count of items in the package as well as one or more of the following: weight, measure, or size.

compliance testing. Determining package conformance using specified legal requirements.

D

decision criteria. The rules for deciding whether or not a lot conforms to package requirements based on the results of checking the packages in the sample.

delivery. A quantity of identically labeled product received at one time by a buyer.

dimensionless units. The integers in terms of which the official records package errors. The dimensionless units must be multiplied by the "unit of measure" to obtain package errors in terms of weight, length, etc.

division, value of (d). The value of the scale division, expressed in units of mass, is the smallest subdivision of the scale for analog indication or the difference between two consecutively indicated or printed values for digital indication or printing. See NIST Handbook 44.

drained weight. The weight of solid or semisolid product representing the contents of a package obtained after a prescribed method for removal of the liquid has been employed.

dry measure. Rigid containers designed for general and repeated use in the volume measurement of particulate solids. See Section 4.45. Dry Measures in NIST Handbook 44.

dry pet food. All extruded dog and cat foods and baked treat packaged in kraft paper bags and cardboard boxes that has a moisture content of 13 percent or less at the time of packaging.

dry tare. (See unused dry tare).

error. See PACKAGE ERROR.

G

E

gravimetric test procedure. An analytical procedure that involves measurement by mass or weight.

gross weight. The weight of the package including contents, packing material, labels.

Η

headspace. The container volume not occupied by product.

inch-pound units. Units based upon the yard, gallon, and the pound commonly used in the United States of America. Some of these units have the same name as similar units in the United Kingdom (British, English, or Imperial units), but they are not necessarily equal to them.

initial tare sample. The first packages (either two or five) selected from the sample to be opened for tare determination in the tare procedure. Depending upon the variability of these individual tare weights as compared with the variability of the net contents, this initial tare sample may be sufficient or more packages may be needed to determine the tare.

inspection lot. The collection of identically labeled (random packages, in some cases, are exempt from identity and labeled quantity when determining the inspection lot) packages available for inspection at one time. This collection will pass or fail as a whole based on the results of tests on a sample drawn from this collection.

L

label. "Any written, printed, or graphic matter affixed to, applied to, attached to, blown into, formed, molded into, embossed on, or appearing upon or adjacent to a consumer commodity or a package containing any consumer commodity, for purposes of branding, identifying, or giving any information with respect to the commodity or to the contents of the package, except that an inspector's tag or other non-promotional matter affixed to or appearing upon a consumer commodity is not a label." See Section 2.5 in the Uniform Packaging and Labeling Regulation in NIST Handbook 130.

linear measures. Rulers and tape measures.

location of test. The place where the package will be examined. This is broadly defined as one of three general locations: (1) where the commodity was packaged, (2) a warehouse or storage location, or (3) a retail outlet.

lot. See INSPECTION LOT.

lot code. A series of identifying numbers and/or letters on the outside of a package designed to provide information such as the date and location of packaging or the expiration date.

lot size. The number of packages in the "inspection lot".

 \mathbf{M}

MAV (maximum allowable variation). A deficiency in the weight, measure, or count of an individual package beyond which the deficiency is considered to be an "unreasonable error". The number of packages with deficiencies that are greater than the MAV is controlled by the sampling procedure.

measure containers. Containers whose capacities are used to determine quantity. They are of two basic types: (a) retail and (b) prepackaged. Retail containers are packaged at the time of retail sale, and prepackaged containers are packaged in advance of sale. An example of a prepackaged measure container is an ice cream package.

metric or SI units. Units of the International System of Units as established in 1960 by the General Conference on Weights and Measures and interpreted or modified for the United States by the Secretary of Commerce. (See NIST Special Publication 814 – "Metric System of Measurement; Interpretation of the SI for the United States and Federal Government Metric Conversion Policy")

minus or plus errors. Negative or positive deviations from the labeled quantity of the actual package quantities as measured (See PACKAGE ERRORS.)

mulch. Any product or material other than peat or peat moss for sale, or sold for primary use as a horticultural, aboveground dressing for decoration, moisture control, weed control, erosion control, temperature control, or other similar purposes.

moisture allowance. That variation in weight of a packaged product permitted in order to account for loss of weight due to loss of moisture during good package distribution practices. For packaged goods subject to moisture loss, when the average net weight of a sample is found between the labeled weight and the boundary of the moisture allowance, the lot is said to be in a no-decision area. Further information is required to determine lot compliance or noncompliance.

Ν

net quantity or net contents. That quantity of packaged product remaining after all necessary deductions for tare (defined) have been made.

nominal. A designated or theoretical size that may vary from the actual.

nominal gross weight. The sum of the nominal tare weight (defined) plus the declared or labeled weight (or other labeled quantity converted to a weight basis).

Р

packaged goods. Product or commodity put up in any manner in advance of sale suitable for either wholesale or retail sale.

package error. The difference between the actual net contents of an individual package as measured and the declared net contents on the package label; (-) minus for less than the label and (+) plus for more than the label.

petroleum products. Gasoline, diesel fuel, kerosene, or any product (whether or not such a product is actually derived from naturally occurring hydro-carbon mixtures known as "petroleum") commonly used in powering, lubricating, or idling engines or other devices, or labeled as fuel to power camping stoves or lights. Sewing machine lubricant, camping fuels, and synthetic motor oil are "petroleum products" for the purposes of this regulation. The following products are not "petroleum products," brake fluid, copier machine dispersant, antifreeze, cleaning solvents, and alcohol.

plus errors. (See Minus or Plus Errors)

principal display panel or panels. Part (s) of a label that are designed to be displayed, presented, shown, or examined under normal and customary conditions of display and purchase. Wherever a principal display panel appears more than once on a package, all requirements pertaining to the "principal display panel" shall pertain to all such "principal display panels." See Section 2.7 in the Uniform Packaging and Labeling Regulation in NIST Handbook 130.

production lot. The total collection of packages defined by the packager, usually consisting of those packages produced within a given unit of time and coded identically.

pycnometer. A container of known volume used to contain material for weighing so that the weight of a known volume may be determined for the material. If it is constructed, it is called a density cup.

random pack. "The term 'random package' shall be construed to mean a package that is one of a lot, shipment, or delivery of packages of the same consumer commodity with varying weights which means, packages of the same consumer commodity with no fixed pattern of weight."

random sampling. The process of selecting sample packages such that all packages under consideration have the same probability of being selected. An acceptable method of random selection is to use a table of random numbers.

range. The difference between the largest and the smallest of a set of measured values.

reasonable variation. An amount by which individual package net contents are allowed to vary from the labeled net contents. This term is found in most Federal and State laws and regulations governing packaged goods. Reasonable variations from the labeled declaration are recognized for (1) unavoidable deviations in good manufacturing practice, and (2) loss or gain of moisture in good distribution practice.

rounding. The process of omitting some of the end digits of a numerical value and adjusting the last retained digit so that the resulting number is as near as possible to the original number.

S

sample. A group of packages taken from a larger collection of packages and providing information that can be used to make a decision concerning the larger collection of packages or of the package production process. A sample provides a valid basis for decision only when it is a random sample (defined).

sample correction factor. Students' "t" value for a one sided test at the 3 percent confidence level and n is the sample size.

sample error limit (SEL). Means a statistical value computed by multiplying the sample standard deviation times the sample correction factor from Column 3 of Table 2-1. Category A - Sampling Plans for the appropriate sample size. The SEL value allows for the uncertainty between the average error of the sample and the average error of the inspection lot with an approximately 97 percent level of confidence.

sample size (n). The number of packages in a sample.

sampling plan. A specific plan that states the number of packages to be checked and the associated decision criteria.

scale tolerance. The official value fixing the limit of allowable error for weighing equipment as defined in NIST Handbook 44.

Seat. (as in "seat diameter" or "seated capacity"). The projection or shoulder near the upper rim of a cup or container that is designed to serve as the support for a lid or cover.

seated capacity. The capacity of a cup, container, or bottle, as defined by the volume contained by them when the lid or a flat disc is inserted into the lid groove that is located inside and near the upper rim of the cup, container, or bottle.

SEL. See sample error limit.

shipment. A quantity of identically labeled product (except for lot code) sent at one time to a single location.

slicker plate. A flat plate, usually of glass or clear plastic composition, used to determine the "level full" condition of a capacity (volumetric) measure.

standard deviation. A measure to describe the scatter of the individual package contents around the mean contents.

standard pack. That type of package in which a commodity is put up with identical labels and only in certain specific quantity sizes. Examples of goods so packed are canned, boxed, bottled and bagged foods, and over-the-counter drugs.

supplementary quantity declarations. The required quantity declaration may be supplemented by one or more declarations of weight, measure, or count, such declaration appearing other than on a principal display panel. Such supplemental statement of quantity of contents shall not include any terms qualifying a unit of weight, measure, or count that tends to exaggerate the amount of commodity contained in the package (e.g., "giant" quart, "full" gallon, "when packed," "minimum", or words of similar import)." See Section 6.12 in the Uniform Packaging and Labeling Regulation in NIST Handbook 130.

Т

tare weight. The weight of a container, wrapper, or other material that is deducted from the gross weight to obtain the net weight.

tare sample. The packages or packaging material used to determine the average tare weight.

tare sample size. The number of packages or packaging material units used to determine the average tare weight.

tolerance. A value fixing the limit of allowed departure from the labeled contents; usually presented as a (+) and a (-) value.

U

unit of measure. An increment of weight, length, or volume so that an inspector may record package errors in terms of small integers. (The package errors are actually the integers multiplied by the unit of measure.)

unreasonable errors. Minus package errors that exceed the MAV (defined). The number of unreasonable errors permitted in a sample is specified by the sampling plan.

unused dry tare. All unused packaging materials (including glue, labels, ties, etc.) that contain or enclose a product. It includes prizes, gifts, coupons, or decorations that are not part of the product.


used dry tare. Used tare material that has been air dried, or dried in some manner to simulate the unused tare weight. It includes all packaging materials that can be separated from the packaged product, either readily (e.g., by shaking) or by washing, scraping, ambient air drying, or other techniques involving more than "normal" household recovery procedures, but not including laboratory procedures like oven drying. Labels, wire closures, staples, prizes, decorations, and such are considered tare. It is not the same as "wet tare. See also "wet tare."

V

volumetric measures. Standard measuring flasks, graduates, cylinders, for use in the measuring volumes of liquids.

W

wet tare. Used packaging materials when no effort is made to reconstruct unused tare weight by drying out the absorbent portion (if any) of the tare. Free-flowing liquid is part of the wet tare for meat or poultry products from Federally-inspected meat and poultry plants.



Appendix D. Acknowledgments and References

I would like to thank the State and local weights and measures officials who evaluated the test procedures and commented on the drafts of this edition. I also thank the many packagers, industries, and trade associations for their comments and suggestions. I also received support and encouragement from the U.S. Department of Agriculture, Food Safety and Inspection Service; the Office of Food Labeling at Food and Drug Administration; and from the Federal Trade Commission. This project could not have been accomplished without the support and encouragement we received from other members of the NIST Office of Weights and Measures especially Tina G. Butcher, Terry Grimes, Georgia Harris, Joan Koenig, Michele Krebs, Janet Land, Joan Mindte (retired), and Richard Suiter. I could not have completed this handbook without the technical support, guidance, and encouragement provided by this team of dedicated professionals and friends.

I want to also honor the dedication and hard work of NIST staff who where the creators and editors of the previous editions of this handbook, especially that of Dr. Carroll Brickenkamp, Steve Hasko, and the late Mary Natrella. I learned a great deal from their work, and I share their knowledge with others everyday.

REFERENCES

C. Brickenkamp, S. Hasko, and M.G. Natrella, <u>NIST Handbook 133 – Third Edition Checking the Net</u> Contents of Packaged Goods, 1988.

K. Butcher and T. Coleman, <u>4th Supplement to the Third Edition of NIST Handbook 133 – Checking the Net Contents of Packaged Goods</u>, 1994.

T. Butcher, J. Williams and T. Grimes, <u>Specifications, Tolerances, and Other Technical Requirements for</u> <u>Weighing and Measuring Devices</u>, National Institute of Standards and Technology Handbook 44, 2000.

T. Coleman and T. Grimes, <u>NIST Handbook 130 Uniform Laws and Regulations in the Areas of Legal</u> <u>Metrology and Fuel Quality</u>, National Institute of Standards and Technology, 2000.

Compressed Gas Association. <u>Third Edition - Handbook of Compressed Gases, 1990.</u> Compressed Gas Association, 1725 Jefferson Davis Highway, Suite 1004, Arlington, Virginia 22202-4100. URL: <u>http://www.cganet.com</u>

Patricia Cunniff, ed., Official Methods of Analysis of the Association of Official Analytical Chemists, Sixteenth Edition, Association of Official Analytical Chemists, Gaithersburg, Maryland. 1996. URL: http://www.aoac.org

Federal Test Method Standard 311 "Leather, Methods of Sampling and Testing." (January 15, 1969). U.S. General Services Administration.

G. L. Harris, <u>Specifications and Tolerances for Reference Standards and Field Standard Weights and Measures</u>, 1. <u>Specifications and Tolerances for Field Standard Weights (National Institute of Standards and Technology Class F)</u>, National Institute of Standards and Technology Handbook 105-1, 1990.

G. L. Harris, <u>Specifications and Tolerances for Reference Standards and Field Standard Weights and Measures</u>; 2. <u>Specifications and Tolerances for Field Standard Measuring Flasks</u>, National Institute of Standards and Technology Handbook 105-2, U.S. Government Printing Office, Washington, D.C., 1996.

G. L. Harris, <u>Specifications and Tolerances for Reference Standards and Field Standard Weights nd</u> <u>Measures, 5. Specifications and Tolerances for Field Standard Stopwatches</u>, National Institute of Standards and Technology Handbook 105-5, 1997. G. L. Harris, <u>Specifications and Tolerances for Reference Standards and Field Standard Weights and Measures</u>, 6. <u>Specifications and Tolerances for Thermometers</u>, National Institute of Standards and Technology Handbook 105-6, 1997.

M. W. Jensen and R. W. Smith, <u>The Examination of Weighing Equipment</u>, National Institute of Standards and Technology Handbook 94, U.S. Government Printing Office, Washington, D.C., 1965.

G. D. Lee, <u>Examination Procedure Outlines for Commercial Weighing and Measuring Devices</u>, National Institute of Standards and Technology Handbook 112, 2002.

Rand Corporation. <u>A Million Random Digits with 100,000 Normal Deviates</u>, Glencoe, IL: The Free Press, 1955. The Rand Corporation, 1700 Main Street, P.O. Box 2138, Santa Monica, California 90407-2138. URL: http://www.rand.org

Standard Method of Test for Density of Plastics by the Density Gradient Technique. ASTM 1505-98,1998.

Standard Method of Test for Volume of Peat Materials, ASTM D 2978-71, 1998.

Standard Method of Test for Yarn Number by the Skein Method, ASTM D 1907-97, 1997.

Standard Practice for Calibration of Laboratory Volumetric Apparatus, ASTM E 542-94, 1999

Standard Specification for Glass Volumetric (Transfer) Pipets, ASTM E 969-99,1999.

Standard Specification for Laboratory Glass Graduated Burets, American Society for Testing and Materials (ASTM), E 287-94,1998. URL: <u>http://www.astm.org.</u>

Standard Specification for Polyethylene Film and Sheeting, ASTM D 2103-97, 1997.

Standard Specification for Polyethylene Sheeting for Construction, Industrial, and Agricultural Applications, ASTM D 4397-96, 1996.

Standard Test Methods for Thickness of Solid Electrical Insulation, ASTM D 374-99, 1999.

U.S. Department of Defense Military Standard, <u>Sampling Procedures and Tables for Inspection by</u> <u>Attributes</u> (M1L-STD-105 D), U.S. Government Printing Office, Washington, D.C., 1963.

B. Younglove and Neil Olien. <u>NBS Technical Note 1079 - Tables of Industrial Gas Container Contents and</u> Density for Oxygen, Argon, Nitrogen, Helium, and Hydrogen, 1985.

Appendix E. Model Inspection Report Forms

Report Form	Page
Random Inspection Report	E-2
Random Package Inspection Report - Example	E-3
Standard Package Inspection Report	E-4
Standard Inspection Report - Example	E-5

8

Date	Random I	ackage Re			Sampling Plan: A B					Report Number:			
Location (name, address)		Product	Brand Identi	ty	Manufacturer:					Contain	Container Description:		
		Lot Cod	les										
1. Labolad Oversites	2. Unit of Me		2 14437	lool un the MA	V for each a						1 0: (
1. Labeled Quantity- enter weight for each	2. Unit of Me	easure		look up the MA			a	5. Inspe	ection Lot Size	6. Sam	ole Size (n	1)	
package in column 1				nis value in Colu									
below.													
7. Initial Tare Sample	8. No. of MA	AVs Allowed	9. Range o		10. Range o	of Tare Wts.	(Rt)	11. Rc/	$Rt(9 \div 10 =)$		l No. of T	Tare	
Size			Errors (Rc)							Samples	5:		
13. Avg. Tare Wt : Used	l Dry Tare N	Wet Tare Ur	used Dry Tar	·e	13a. Tare	Correction		1		14. Nor	ninal Gros	ss Wt.	
	Pkg 1	Pkg 2	Pkg 3	Pkg 4	Mois Pkg 5	ture Allowa Pkg 6		kg 7	Pkg 8	Pkg 9	Pka	g 10	
a. Gross Wt.		1 1 1 2	I KB 5		IKE 5	ING U		<u>Kg</u> /	I Kg 0	TKg 7	I Kg	5 10	
b. Tare Wt.			<u> </u>	1									
c. Net Wt.			1	1						-			
d. Package Error			1	1 1						1			
	L	<u></u>		Money Error	s								
Product Description, Lot C	ode, Unit Price				+	- 1. Labe	eled Net	Weight	Package Erro	+	4. MA	V	
				<u> </u>									
1.						_			<u> </u>				
2.									++				
3.									++-				
5.				+ +									
6.													
7.				1					<u>†−−−−</u> †				
8.									1 1				
9.				1 1									
10.									1				
11.													
12.													
13.									ļ				
14.									┥───┤				
15.						_			<u> </u>				
16.									++-				
17.				+					<u>}</u> }				
19.									++				
20.				<u> </u>									
21													
22.				1							1		
23.													
24.													
								otals					
15. Total Error		nreasonable mi		17. ls 16 grea	iter than 8?				dimensionless		g. error in		
	(compare cac MAV in Col	ch package erro 4).	r with the	Vec Lot E	ails No, go	to 18	units. (15 - 6 =)		labele	d units (18	8 x 2	
20. Is 18 Zero or Plus?	L mary meor	21. Compute	Sample		e Correction		23. Co	mpute San	nple Error Limi):		
Yes, lot passes, go to 25		Standard Dev						1					
No, go to 21													
24. Disregarding the signs,			26			osition of Ir							
Yes, Lot Fails, go to 25	No, Lo	ot Passes, go to	25		Appro		Rejecte	ed					
Comments:					Official's	Signature							
					Acknowl	edgement o	of Report						

Date September 16, 1999	Random	Package Re	port - Exa	mpl	e Form		Sampling Plan: A 📕 B				Report Number:	
Location (name, address)	L	Product			Manufacturer:					Description:		
L&O Market			Ground C	ound Chuck			Meat Dep	artment -	- L&O Mar	ket	25 T.	dela anna de constru
L&O Market MacCorkle Ave			Grouna G	писк							28 Tray w plastic wr	vith soaker and ap
Charleston, WV 25177		Lot Cod	les								prainte m	ыp
		LUICOL	1, 19, 1	99								
1. Labeled Quantity-	2. Unit of M	easure	3. MAV	look		V for each p		а	5. Inspec	tion Lot	6. Samp	le Size (n)
enter weight for each	1 1					imensionles			Size	1.2		12
package in the column 1 below.	0.001	lD	and enter t	nis va	alue in Colu	mn 4 below				23		12
7. Initial Tare Sample	8. No. of M.	AVs Allowed	9. Range o	f Pac	kage	10. Range o	f Tare Weig	hts(Rt)	11. Rc/R	$(9 \cdot 10 =)$	12. Total	No. of Tare
Size	Errors (R					-					Samples:	
2	0			10			1			10	2	
13. Avg. Tare Wt : Used	Dry Tare	Wet Tare U	1 nused Dry Ta	are		13a. Tar	e Correctior	1			I4. Nomi	nal Gross Wt
			nubeu bij ie			154. 14		N/A				+ .020 lb
	0.0205						Allowance					
- C 11/4	Pkg 1	Pkg 2	Pkg 3	Pkg	3 4	Pkg 5	Pkg 6	Pl	kg 7	Pkg 8	Pkg 9	Pkg 10
a. Gross Wt. b. Tare Wt.	1.852 lb	1.223 lb										
c. Net Wt.	0.020 lb 1.832 lb	.021 lb 1.202 lb		_								
d. Package Error				-								-
(a - 14 =)	-18	-8										
				Mo	ney Errors							
Product Description, Lot C	ode, Unit Price	2					1. Labe	led Net V	eight	Package Err		4. MAV
				-		+				-	+	
1. Ground Chuck - 1, 19,	, 99 - \$1.79 p	er lb					1.85 l			18		
2.							1.21 lb 7					
3.							1.56 lb 8 1.98 lb 14			14		
5.						\$0.04	1.07 lb 23			· · ·		44
6.							1.55 lb 16					
7.							1.02 l			2		
8.						\$0.04	1.441			25		56
9.				_			1.33 lb 16 2.03 lb 20					70
10.				-			2.03 lb 20 1.73 lb 14			-		70
12.							1.75 ID 14 1.16 Ib 11					
13.												
14.												
15.												
<u>16.</u> 17.						-						
18.												
19.												
20.												
21.												
<u>22.</u> 23.												
24.												
					I			To	otals	174		
15. Total Error	1	unreasonable r		17	7. Is 16 grea	iter than 8?		18. Av	g. error in d	imensionless		g. error in
- 174		npare each pack	kage error				. 10	units. (15 - 6 =)		1	1 units (18 x 2
	with	14) 0			res, Lot Fa	ails 📕 No, go	10 18		- 14.5		=)	- 0.014 lb
20. ls 18 = Zero or Plus?		21. Compute	Sample	-	22. Sample	e Correction	Factor:	23. Co		ole Error Limit		
Yes, lot passes, go to 25		Standard Dev										
No, go to 21		(73)			0.635					4.267		
24. Disregarding the signs,	is 18 larger th	6.721 an 23:				25 Dier	osition of h	L. Ispection	Lot:			****
a proceating the signs,	is to target th	un <i>4.</i> 7.				1 20. DIS	conton or h	speedon				
Yes, Lot Fails, go to 25	5 No, L	ot Passes, go to	25			Appr	oved		Rejecto	ed		
Comments: Product found	d to contain les	s than the state	d net content.	S		Official	s Signature					
						Acknow	ledgement o	f Report				

Date		Standard	i Package Re	eport			Sampling Plan: A B					Report Number		
Location (name, a	ddress)		Product	/Brand Identi	ty		Manufactu	rer			Containe	r Descriptio)n	
			Lot Cod	ies										
I. Labeled Quanti	ty	2. Unit of N	1easure	3. MAV	4. MAV (dimensionless units) $(3 \div 2 =)$			5. Insp Size	ection Lot	6. Sample Size (n)			
7. Initial Tare Sar Size	nple	8. No. of N	1AVs Allowed	9. Range ((Rc)	of Net Wts.	10. Range	of Tare Wts. ((Rt)	11. Rc/	$(9 \div 10 =)$	12. Tota Samples:	l No. of Tar	re	
13. Avg. Tare Wt	: Used	l Dry Tare	Wet Tare U	Jnused Dry Ta	are	13a. Tare (Moisture	Correction Allowance	Va	cuum Pack	<	14. Nom (1 + 13 -	inal Gross V 13 a =)	₩t.	
		Pkg l	Pkg 2	Pkg 3	Pkg 4	Pkg 5	Pkg 6	I	°kg 7	Pkg 8	Pkg 9	Pk 10		
a. Gross Wt.				ļ										
b. Tare Wt. c. Net Wt.														
-	+			1 +		-		+		-		+		
	+		13.						A	37.				
1.							25.							
2.	-		14.				26.		<u>38.</u> <u>39.</u>					
4.	-		16.				27. 28.		40.				_	
5.			17.			28.			40.					
6.	-		18.			30.			41.					
7.			19.			31.			43.					
8.			20.			32.				44.				
9.			21.			33.				45.				
10.	1		22.			34.				46.			-	
11.			23.			35.			47.					
12.			24.			36.			48.					
Total	Total		Total	To	tal	Total Tota		Total	al Total		Total			
15. Total Error		16. No. of package en	unreasonable mi or with 4):	nus errors (co	ompare each	17. ls 16 greater than 8? Yes, lot fails No, go to 18			(15 ÷ 6 =	nless units.)	19. Avg. error in labeled units (18 x 2 =)		led	
20. Is 18 = Zero o Yes, lot passes. No, go to 21			21. Compute Standard Dev		22. Sam	ple Correction		ctor: 23. Compute Sample Error Limit (21 x 22 =				x 22 =):		
24. Disregarding the signs, is 18 larger than 23: Yes, lot fails, go to 25 I No, lot passes, go to 25						25. Disposition of Inspection Lot: Approved Rejected								
Comments:						Official	's Signature							
						Acknow	ledgement of	Repor	l					

Date January 20, 1999	0, 1999 Standard Package Report - Sample Form								Sampling Plan: A B					Report Number 16			
Location (name, a	ddress)	Product/Br	and	ldentity:				Manufacture	r:			Container Description					
Volunteer Market 18765 Alcoa Highway Knoxville, Tennessee 37920 Lot Codes						Mints,)	ABC Cookies Inc 1069 Capitol Avenue Nashville, Tennessee 37204				Cardboard Box / Plastic Liner					
			A	pril 1998 A	1&B												
1. Labeled Quantity 453 g (1 lb)					$\begin{array}{c c} & \text{nsionless units} (3+2=) \\ 44 \\ & \text{Lot Size} \\ 172 \end{array}$				6. Sample Size (n) 12								
7. Initial Tare Sample Size 2	Initial Tare 8. No. of MAVs 9. mple Size Allowed					9. Range of Net Wts. (Rc) 24				11.	Rc/Rt 10 =) 12	12. Total No. of Tare Samples:			amples:		
2		0						2			12						
13. Avg. Tare Wt	13. Avg. Tare Wt : Used Dry Tare Wet Tare Unused Dry Tare 0.014 lb							13a. Tare (Moisture Pack	Correction N/A e Allowance	cuum	14. Nominal Gross Wt. (1 + 13 - 13 a =) 1.014 lb						
		Pkg I	Pk	(g 2	Pkg 3		Pkg 4	Pkg 5	Pkg 6	Pkg	g 7	Pkg 8 Pk		Pkg 9 Pkg 10			
a. Gross Wt.		1.052 lb	+	026 lb													
b. Tare Wt.		0.015 lb		0131b									ļ				
c. Net Wt.	T	1.037 lb		0131b							~						
-	+		-			+		-		+		-			+		
1.		38	13					25.				37.					
2.		12	14					26.				38.					
3.		8	15					27.				39.					
4.		4	16					28.				40.		\rightarrow			
5. <u>3</u> 6. <u>2</u>			17					29. 30.				41.					
7.	+	12	19					31.				43.					
8. 3	+	12	20					32.				44.					
9.		4	21					33.				45.					
10. 1	1		22					34.				46.					
11. 0			23	3.				35.				47.					
12.		6	24	ł.	_			36.				48.					
Total 9	Total	84		otal		Tot		Total		Total		Total			Total		
15. Total Еггог + 75		16. No. of u package eπo			nus erro	rs (co	mpare each	Yes, lot fails dimens				g. error in sionless units. $19. \text{ Avg. error in labele}$ 5 = 1 + 6.25 + 0.006 lb			x 2 =)		
Yes, lot passes, No, go to 21	Yes, lot passes, go to 25 Standard Deviation:						22. Sa	nple Correctio	on Factor:		Ì	pute Sample	Error L	imit (2	21 x 22 =):		
24. Disregarding the signs, is 18 larger than 23:						25. Disposition of Inspection Lot:											
Yes, lot fails, go to 25 No, lot passes							proved al's Signature		Reje	cted							
Comments:		Lot	Pa	sses				Omera	a s signature								
								Acknowledgement of Report									
										_							





NIST Technical Publications

Periodical

Journal of Research of the National Institute of Standards and Technology—Reports-NIST research and development in those disciplines of the physical and engineering sciences in which the Institute is active. These include physics, chemistry, engineering, mathematics, and computer sciences. Papers cover a broad range of subjects, with major emphasis on measurement methodology and the basic technology underlying standardization. Also included from time to time are survey articles on topics closely related to the Institute's technical and scientific programs. Issued six times a year.

Nonperiodicals

Monographs—Major contributions to the technical literature on various subjects related to the Institute's scientific and technical activities.

Handbooks—Recommended codes of engineering and industrial practice (including safety codes) developed in cooperation with interested industries, professional organizations, and regulatory bodies. Special Publications—Include proceedings of conferences sponsored by NIST, NIST annual reports, and other special publications appropriate to this grouping such as wall charts, pocket cards, and bibliographies. National Standard Reference Data Series—Provides quantitative data on the physical and chemical properties of materials, compiled from the world's literature and critically evaluated. Developed under a worldwide program coordinated by NIST under the authority of the National Standard Data Act (Public Law 90-396). NOTE: The Journal of Physical and Chemical Reference Data (JPCRD) is published bimonthly for NIST by the American Institute of Physics (AIP). Subscription orders and renewals are available from AIP, P.O. Box 503284, St. Louis, MO 63150-3284.

Building Science Series—Disseminates technical information developed at the Institute on building materials, components, systems, and whole structures. The series presents research results, test methods, and performance criteria related to the structural and environmental functions and the durability and safety characteristics of building elements and systems.

Technical Notes—Studies or reports which are complete in themselves but restrictive in their treatment of a subject. Analogous to monographs but not so comprehensive in scope or definitive in treatment of the subject area. Often serve as a vehicle for final reports of work performed at NIST under the sponsorship of other government agencies.

Voluntary Product Standards—Developed under procedures published by the Department of Commerce in Part 10, Title 15, of the Code of Federal Regulations. The standards establish nationally recognized requirements for products, and provide all concerned interests with a basis for common understanding of the characteristics of the products. NIST administers this program in support of the efforts of private-sector standardizing organizations.

Order the **following** *NIST* publications—*FIPS* and *NISTIRs*—from the National Technical Information Service, Springfield, VA 22161.

Federal Information Processing Standards Publications (FIPS PUB)—Publications in this series collectively constitute the Federal Information Processing Standards Register. The Register serves as the official source of information in the Federal Government regarding standards issued by NIST pursuant to the Federal Property and Administrative Services Act of 1949 as amended, Public Law 89-306 (79 Stat. II27), and as implemented by Executive Order 11717 (38 FR 12315, dated May 11, 1973) and Part 6 of Title 15 CFR (Code of Federal Regulations).

NIST Interagency or Internal Reports (NISTIR)—The series includes interim or final reports on work performed by NIST for outside sponsors (both government and nongovernment). In general, initial distribution is handled by the sponsor; public distribution is handled by sales through the National Technical Information Service, Springfield, VA 2216I, in hard copy, electronic media, or microfiche form. NISTIR's may also report results of NIST projects of transitory or limited interest, including those that will be published subsequently in more comprehensive form.

PAID			
FIRST-CLASS MAIL POSTAGE AND FEES PAID NIST Permit No. G195			
FIR POSTA P			

U.S. Department of Commerce National Institute of Standards and Technology Gaithersburg, MD 20899 Stop 2600

Official Business Penalty for Private Use \$300 "ADDRESS SERVICE REQUESTED"

